

anko

20cm Desktop Fan For Household Use Only



Model No.: YS-803DC
Rev 1

Note: The specifications and/or components of this appliance are subject to change without prior notice.

If any Accessories should fail during use, please call 1300 105 888 (Australia) or 09 8870 447 (New Zealand) for an immediate replacement. This will save you from returning the product to the store.

If we can assist you in any other way, please feel free to contact us.

1 Warnings..... 3

2 Components 6

3 Instructions for Use 7

3.1 Charging the Appliance..... 7

4 Adjusting the Fan Head Angle 8

5 Control Panel..... 9

6 Using the Appliance..... 9

6.1 Fan Only..... 9

6.2 Fan + Swing (Oscillating) 9

6.3 Lamp..... 10

7 Care and Cleaning..... 10

8 Storage..... 11

9 Troubleshooting..... 11

10 Warranty Against Defect 12

Read and Save These Instructions

1 Warnings

When using electrical appliances, basic safety precautions should always be followed, including the following:



Carefully read this instruction manual before use.

Keep the Appliance and USB cable out of reach of young children.

This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the Appliance and/or USB cable.

Ensure children and babies do not play with plastic bags or packaging materials.

Do not use on people or pets etc.

Do not disassemble the Appliance and/or USB cable. There are no user serviceable parts inside.

VERY IMPORTANT:

Ensure that the Appliance and/or USB cable does not get wet (water splashes etc.).

Do not use your charger, Appliance, or the USB cable with wet hands.

Do not immerse the Appliance and/or the USB cable in water or other liquids.

Only Charge the Appliance with the USB cable that was supplied with the Appliance.

Only Charge the Appliance from an SELV: (Safety Extra Low Voltage) Battery Charger (not supplied) with an output rating the same as indicated on the Appliance's rating label.

Position the USB cable properly so that it will not be walked on or pinched by items placed on or against it.

Use the Appliance and USB cable only for its intended use. The Appliance and USB cable are intended for household use only and not for commercial or industrial use.

Inspect the USB cable and Appliance for damage prior to every use.

Do not use the Appliance if it has been dropped or any part of the Appliance and/or the USB cable has been damaged.

If the USB cable is damaged, call our customer service for a replacement.

The use of accessories not intended for use with this the Appliance may cause injuries to the user or damage to the Appliance and/or the USB cable.

Do not sit the Appliance on other appliances, on uneven surfaces or where it could be subject to heat sources (e.g., radiators or stoves), direct sunlight, excessive dust, or mechanical vibrations.



The Appliance and/or USB cable must not be used outdoors if raining, placed near a hot gas or electrical burner or placed in a heated oven.

Do not place or leave near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.

Do not operate or charge the Appliance underneath or near flammable or combustible materials (e.g., curtains).

Always switch off and unplug the charger (not supplied) when finished charging the Appliance, or during lightning storms or when unused for long periods of time.

Do not cover the Appliance or charger when charging or when in use.

Turn off and unplug before cleaning or storing.

Any type of servicing, apart from ordinary cleaning, must be carried out by a qualified electrical person only. There are no user serviceable parts in this Appliance.

Cleaning and user maintenance shall not be made by children without supervision.

If this Appliance and USB cable is used by a third party, please supply the instruction manual with it.

Do not misuse the USB cable. Never carry the Appliance by the USB cable or pull to disconnect it from the socket. Instead, grasp the plug and pull to disconnect.

Do not insert or allow foreign objects to enter the charging port as this may cause damage to the Appliance and/or injury to the user.

Do not leave the Appliance on or charging unattended.

No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling of the Appliance and/or USB cable.

This product has not been designed for any uses other than those specified in this manual.

ONLY for domestic use. Industrial or commercial use invalidates the warranty.



WARNING

Only use the USB Cable that was supplied with this Appliance.

Battery Specification:

Type: Li-ion, 3.7Vd.c., 2500mAh (Non-Removable or Replaceable).

The Appliance must only be supplied at Safety Extra Low Voltage “SELV”.

Input: Requires a 5Vd.c. / 2A Power Adaptor (not supplied).

Only charge the battery between an ambient room temperature of 10°C – 40°C.

Consumers are cautioned against trying to replace the battery. Using and/or purchasing counterfeit and/or inferior quality batteries have the potential to cause fire, personal injury, and/or damage to property. These batteries are typically found on online-auction websites or from other retailers and are known to pose a potential safety risk.

- Batteries may explode if disposed of in fire.
- The battery is not replaceable. Do Not open the Appliance.
- Do not use or store in temperatures above 40°C.
- Do not expose the appliance or battery to excessive temperatures.

At the end of the Appliance's life, it must be disposed of correctly.



This appliance contains a battery that is non-replaceable, and as the battery is non-replaceable, the complete appliance must be recycled as this is where the battery is located.

Contact your local waste management authority for more information on Battery Recycling and disposal regulations in your area.

Do Not dispose of electrical appliances or batteries as unsorted municipal waste, use separate collection facilities.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

IMPORTANT: Should you find any abnormal fluid or residue seeping out of the appliance body around or below the charging port, this could be an indication that the battery is leaking. This signifies a damaged battery which must be immediately disposed of.

As the Battery Pack is not removable, the whole unit will need to be handed in for the battery to be recycled.

 
Take care not to touch the leaking fluid or residue and if possible, place it into a large plastic bag and then place it outside in a dry area.

Contact your local council or regional authority for more information on collection and safe disposal.

WARNING: With any battery type, should a metal object come into contact with battery terminals either while charging or not charging, this will short out the battery and could cause the battery and surrounding items to catch fire.

Do Not Open the Appliance to access the Battery Pack. There are no serviceable parts inside

2 Components

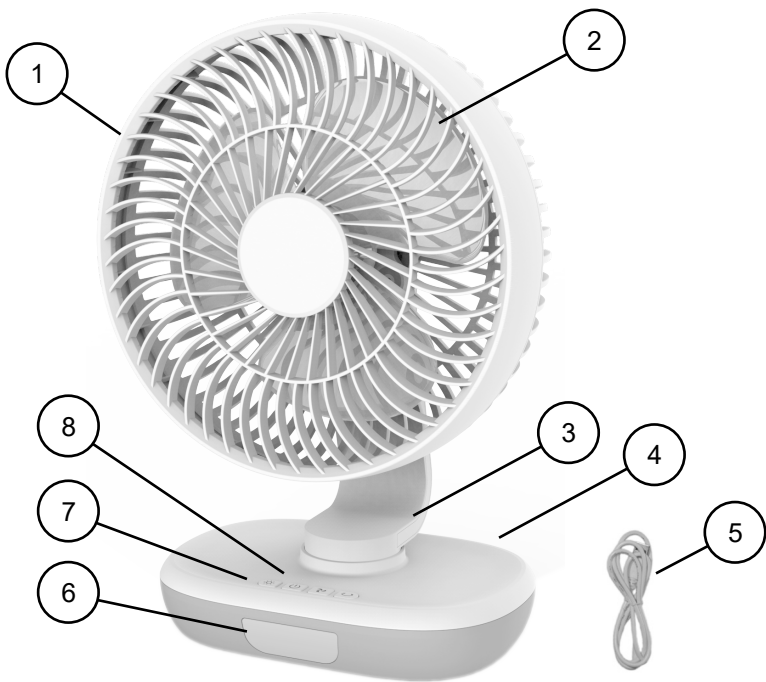

1	Tilting Fan Head	5	USB Charging Cable
2	Fan Blade	6	Lamp
3	Swing (Oscillating) Pivot	7	Control Panel
4	Charging Port on Rear	8	Indicator Lights

Note: The specifications and/or components of this appliance are subject to change without prior notice

3 Instructions for Use

3.1 Charging the Appliance

Read the Safety Instruction first.

IMPORTANT: This Appliance contains a built-in (non-removable) lithium-ion battery which must only be charged using the supplied USB cable.

The Appliance must only be supplied at Safety Extra Low Voltage “SELV”.

Only charge the battery between an ambient room temperature of 10°C – 40°C.

Always switch off and unplug the USB cable when charging is completed or when not in use.

NEVER LEAVE THE APPLIANCE UNATTENDED WHEN CHARGING.

If any abnormality occurs during charging, (such as a burning smell or excessive heat or even a strange sound) immediately turn off the charger and disconnect the USB cable, then contact our service department for assistance.

NOTE: The Appliance must be fully charged prior to first use.

Normal charging time will take between 4.5 to 5 hours using a 5Vd.c. 2A charger.

- Take the USB Cable and fully unravel it before using to charge the Appliance.
- Plug the small end of the USB cable directly into the Charging Port on the back of the fan base.



- Plug the large end of the USB cable into your 5Vd.c. charger, then switch on the charger.

- The indicator lights just above the control panel, on top of the base will illuminate from left to right, turn off and then repeat continuously (unless the fan is being used at the same time) until the battery is fully charged.



- When fully charged, the lights will remain on permanently unless unplugged.

At this time, remove the USB charging cable and turn off & unplug the charger.

DO NOT leave the unit charging when the battery is full.

Note: The Fan can be used by USB power alone (5V 2A), however, if the fan is used on High Speed setting 3, the battery will not charge at the same time.

If using whilst the USB is powering the fan at 5V 2A, the battery will charge at the same time when using fan speed settings 1 or 2 and with the light on and the fan oscillating side to side.

 
4 Adjusting the Fan Head Angle

The Fan Head can be tilted back 90° and any position in between.

Just grasp the fan head and rotate it backwards to your desired position.




 


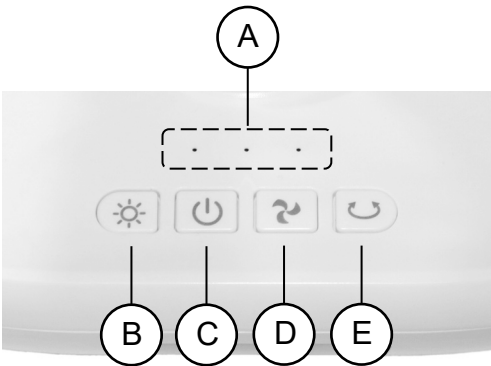
5 Control Panel




 
A	Indicator Lights
B	Lamp On / Off Button
C	Power On / Off Button
D	Fan Speed Button
E	Swing Button (on or off)

6 Using the Appliance

6.1 Fan Only

- Ensure the appliance is fully charged.
- Press the “  ” button on the control panel to turn the fan on default Low Speed.
- The first indicator light will illuminate indication speed setting 1.
- To increase the fan speed, press the “  ” button on the control panel and the fan will increase speed to speed setting 2 indicated by the middle indicator light illuminating.
- Press the “  ” button on the control panel again and the fan will increase speed to speed setting 3 indicated by the right indicator light illuminating.
- Press the “  ” button on the control panel again, and the speed will cycle back around to speed setting 1.
- To Turn Off, press the “  ” button on the control panel.

6.2 Fan + Swing (Oscillating)

- With the Fan already in use, press the “  ” button on the control panel to start the fan swinging (Oscillating) side to side.
- To turn the Swing off, or to stop the fan swinging in a set position, press the “  ” button on the control panel.

Note: When the Swing is turned on the first time, it will pause at the end of its first swing to calibrate the fan position.

Under Normal use, the appliance will work for approximately 110 minutes before requiring a recharge, however this can change depending on how the appliance is used, such as fan speed, swing, and lamp use.

6.3 Lamp

There is a lamp built into the front of the base for illumination of your work bench area.



This lamp can be used with or without the fan running.

There are two brightness settings with the default setting being Standard Brightness.

- To switch on, press the “☀️” button on the control panel and the default Standard Brightness will be set.
- Press the “☀️” button again and the light will become brighter.
- Press the “☀️” button again and the light will turn off, and so on.

7 Care and Cleaning

NOTE: Cleaning and user maintenance shall not be made by children without supervision

- Ensure that the Appliance is switched off and unplugged from the charger.
- Never stick anything inside the Appliances charging port. Only clean the outside.
- Never spray the appliance with liquids or submerge the appliance or USB cable in water or any other liquid.
- Do not use flammable liquids, chemicals, abrasive creams, steel wool or scouring pads for cleaning the appliance or accessories.
- Clean the body with a clean, damp cloth and wipe dry.

8 Storage

- Switch off and unplug the Appliance.
- Coil the USB cable loosely. Do not kink or pull the cable tight.
- Store your Appliance in a cool, dry location.

9 Troubleshooting

Will Not Switch On	Check that the battery is fully charged.
	If the USB cable is still plugged in to the unit, ensure the charger is turned on.
The appliance keeps turning off when in use.	<p>The battery is flat.</p> <p>Recharge battery or plug in the USB cable and switch on the charger.</p>
When using the fan with the USB cable plugged in, the product stops working	<p>The Fan can be used by USB power alone (5V 2A), however, if the fan is used on High Speed setting 3, the battery will not charge at the same time.</p> <p>If using whilst the USB is powering the fan at 5V 2A, the battery will charge at the same time when using fan speed settings 1 or 2 and with the light on and the fan oscillating side to side.</p>
Fan head pauses at the end of its first swing.	<p>This is normal.</p> <p>The unit is calibrating the head position the first time and will then swing (Oscillate) normally.</p>

10 Warranty Against Defect

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre, 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd. C/- Customer Service Centre, 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

IMPORTANT! For all technical queries or difficulties in operating the product and for spare parts, contact H.E. Group customer service 1300 105 888 (Australia) and 09 8870 447 (New Zealand).