

# anko


## 35mm Reusable Camera

### Instruction Manual

K: 43-576-135 | T: 71-106-236  
Model No.ZB2025011304



#### Product diagram

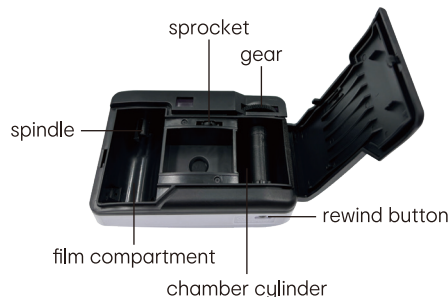

STEP1: Toggle the rear cover switch downward to open the rear cover.



STEP2: Push the small spindle upward in the left film compartment.



STEP3: Place the film cartridge upside down (with the film bulge facing downward) into the film compartment, ensuring it is fully seated.



STEP4: Press the spindle downward to secure it.



STEP5: Insert the hole at the end of the film leader into the sprocket at the bottom-right corner of the film chamber.



STEP6: Hold the film in place with one finger while using your other finger to turn the gear on the upper-left side. Rotate the gear until the film wraps around the chamber's cylinder for more than one full rotation (ensure the film does not snap back).



STEP9: Press the shutter button to take a photo. After each shot, repeat Step 8 before taking the next photo. Do not open the rear cover while shooting, as this will expose the film and the developed photos will turn white.



STEP10: After finishing the entire roll, press the rewind button located at the bottom-right corner of the camera.



STEP7: Press the film leader firmly against the central sprocket, then continue rotating the top-right gear to ensure the film lies flat and taut. And close the rear cover securely.



STEP8: Continue rotating the top-right gear until it stops.



STEP11: Lift the main spindle from the top-left compartment and rotate it in the direction indicated by the arrow.



STEP12: Once the film is fully rewound, open the rear cover, pull out the spindle, and remove the film cartridge. The film is now ready for development.

**WARNING:** NOT SUITABLE TO USE FILM BELOW ISO400 ESPECIALLY INSIDE OF THE ROOM OR IN BAD WEATHER OUTSIDE. DO NOT OPEN THE REAR COVER WHILE SHOOTING, AS THIS WILL EXPOSE THE FILM AND THE DEVELOPED PHOTOS WILL TURN WHITE.

#### 12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

#### MADE IN CHINA

#### CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567