

Walkie Talkies

5+ years


A QUICK LOOK AT YOUR DEVICE



USING YOUR WALKIE TALKIES

1. Press the ON/OFF button on each walkie talkie until the screen lights up. The walkie talkie is ready for use.
2. Hold one walkie talkie close to your mouth. Press the talk button, and speak clearly to transmit a message to the other walkie talkie.
3. Release the talk button when you are finished talking so that you can hear any incoming messages from the other walkie talkie. (Talking range: up to 500 metres talking range in ideal conditions).
4. For flashlight function, press the Flashlight button.
5. Within the signal range (up to 500 metres), pressing the call button on either walkie talkie will trigger a ringing tone on both devices simultaneously, notifying users of an incoming call.
6. Long press the ON/OFF button for about 1 second to turn off the walkie talkies.
7. Check the walkie talkie's battery level through the screen.

BATTERY INSTALLATION

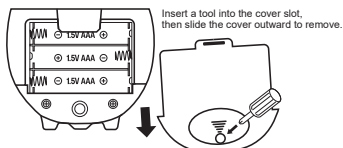

EACH WALKIE TALKIE REQUIRES 3 x 1.5V AAA BATTERIES (NOT INCLUDED).
TOTAL REQUIRES 6 x 1.5V AAA BATTERIES (NOT INCLUDED).

WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

WARNING: TALKING RANGE DEPENDING ON CONDITIONS. OPERATING RANGE CAN BE SIGNIFICANTLY REDUCED DURING USE DUE TO INTERFERENCE FROM ELECTRICAL EQUIPMENT SUCH AS COMPUTERS AND/OR LARGE METALLIC OBJECTS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

ADULT SUPERVISION REQUIRED.
PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.
PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.

K: 43-577-156
T: 71-215-020