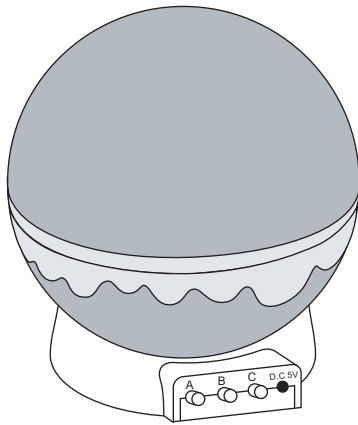 
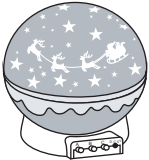 

 
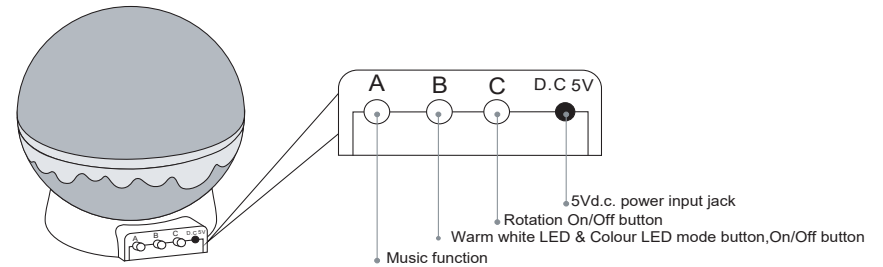 


BATTERY OPERATED CHRISTMAS PROJECTOR (Model No.: BD24480MC K: 43592142 / T: 71335704)





Contents:

<p>A.</p>  <p>Snowglobe projector x 1</p>	<p>B.</p>  <p>USB plug x 1</p>	<p>C.</p>  <p>Plastic cover x 1</p>
--	---	--



- A - Music function
- B - Warm White LED & Colour LED mode button, On/Off button
- C - Rotation On/Off button
- 5Vd.c. power input jack.

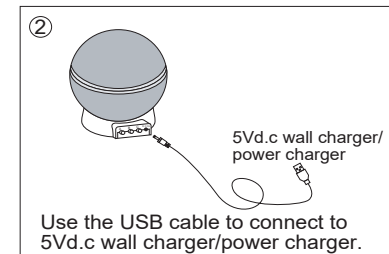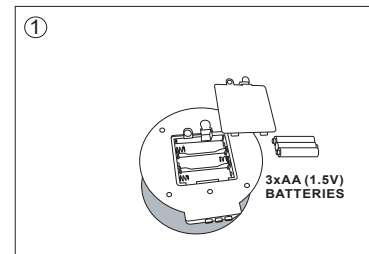  Connecting Power:



Power Connection:

2 power connection is available as below

1. Install 3 x AA batteries into the battery compartment (batteries not included)
2. Connect the USB cable to USB power source



Operation Instruction:

Follow below step to operate your unit

1. Connect provided USB cable to USB power source or install 3 x AA batteries to battery compartment.
2. When connect to USB power or batteries, unit will be auto on 20 seconds and rotating function will be stopped.
3. Press A button to turn on/off the music function.
4. Press B button to select color mode.
5. Press C button to turn on/off snowflake and reindeer with sleigh moving.
6. Remove batteries when using USB power

Product Specification:

Input power: USB 5V 1A or 3 x AA batteries (not included)

Effective projection distance up to 3M approx.

Battery Installation:

- ▶ Open the battery compartment cover at bottom of unit.
- ▶ Unscrew the screw and lift the cover off.
- ▶ Insert 3 x AA 1.5V batteries (not included) according to the polarity indicated in the battery compartment.
- ▶ Reinstall the battery compartment cover.
- ▶ Remove the batteries if they are flat or you do not use the device for a longer period of time.

Safety Instruction:

WARNING: FOR DECORATION ONLY. THIS IS NOT A TOY. KEEP AWAY FROM CHILDREN AND PET.

- Before using the unit, please read the manual carefully.
- An adult must carry out battery replacement and installation.
- Remove exhausted batteries from this product.
- Do not dispose of batteries in a fire, batteries may explode or leak.
- Do not short-circuit the battery terminals.
- Do not mix used and new batteries.
- Do not mix alkaline standard (carbon-zinc), lithium or rechargeable batteries.
- Do not mix different types of batteries.
- Do not use rechargeable batteries in this product.
- Do not recharge non-rechargeable batteries.
- Do not allow any part to come in contact with heat or a direct flame.
- Do not allow water to come into contact with the batteries or wiring.
- Install carefully to prevent any damage to the batteries.
- When installing [3 x 1.5V AA (LR6)] batteries in the battery compartment, ensure the batteries are placed as marked (+)(-).
- Only the recommended batteries should be used.
- Remove batteries from product when not in use for long periods of time.
- Keep this product out of the reach of small children.
- Store unused batteries in their original packaging.
- Dispose of used batteries responsibly.
- This product is suitable for INDOOR use only.
- Remove all packaging before use.
- Keep away from fire and sources of heat.
- Use provided USB cable only.
- The light source of this projector is not replaceable; when the light source reaches its end of life the projector shall be replaced.