 


anko

K: 43592654 | T: 71354248 (Model: JLR-80770-2)

1080P Smart Projector

User Manual

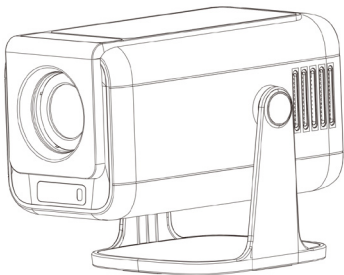

Thank you for your purchase.
Please read this Instruction Manual and Retain for future use.

Warning:

1. The projector is non dustproof or waterproof.
2. In order to reduce the risk of fire and electric shock, do not expose the projector to rain and fog.
3. When projector is working, please do not look directly into the lens, the strong light will flash your eyes and cause slight pain. Children should use the projector under the supervision of adults.
4. Do not cover the vents of projector. Heating will reduce the life of projector and cause danger.
5. Regularly clean projector vents, or dust may cause cooling malfunction.
6. Do not use the projector in greasy, damp, dusty or smoky environment.
Oil or chemicals will cause malfunction.
7. Please handle with care during daily use.
8. Please cut off the power if the projector is out of use for long time.
9. Please pay attention to important information related to the operation and maintenance of the projector. You should read this information carefully to avoid problems. Following safety instructions will increase the life of projector.
10. Please consult the qualified personnel for installation and repair services, and do not use damaged wires, accessories and other peripherals.
11. Projector should be kept away from flammable, explosive, strong electromagnetic interference (large radar stations, power stations, substations etc.), strong ambient light (avoid direct sunlight), etc.
12. Please use the original power adapter.
13. Do not bend or drag the power cord.
14. Do not put power cord under projector or any heavy objects.
15. Do not cover other soft materials on power cord.
16. Do not heat the power cord.
17. Avoid touching power adaptor with wet hands.

Specifications

Power Input: AC100V- 240V 50/60Hz 1.5A(Max)

Video Input: HDMI 1.4 input

 
 
Projection Distance: 1-4.5M

Contrast Ratio: 1200: 1


Audio output: 3.5mm AUX output

Device Name: anko43592654


Product size: 23.5cm(L) x 11.5cm(W) x 12cm(H)

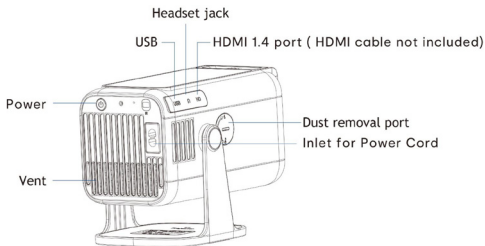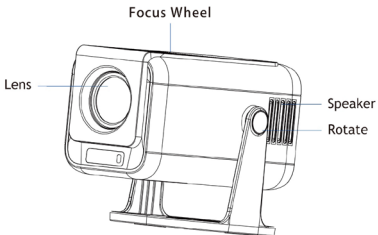

Power Cord

 

Remote Component and Functions

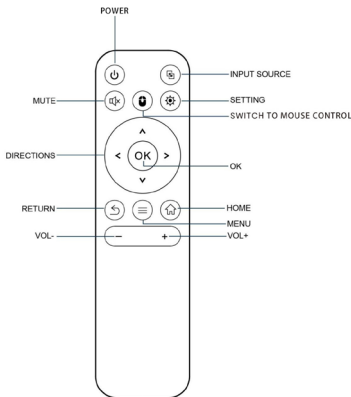 


Note:

1. Requires 2 x 1.5V AAA batteries for remote control (Not included)
2. Press "Input Source" to enter HDMI or USB playing.
3. Press "Switch to mouse control" to enter or exist the mouse mode.

Power on

1. Connect the power cord to the projector, then plug it into a suitable power outlet.

 
2. Press the **Power** button on the projector or on the remote control to turn it on.
3. Adjust the **focus wheel** until the projected image is clear.
4. Connect the projector to your home network for enhanced functionality. For details, refer to the **Network** section.

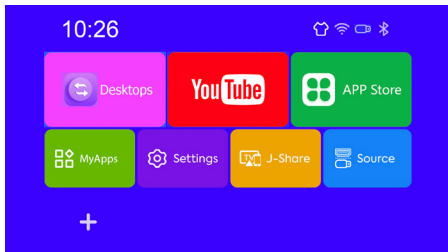

Home Screen and Desktop Switching

To switch to an alternative Android-style desktop interface:

 1. On the main home screen, select the "Desktops" icon (purple tile).
2. The system will switch to a more minimalist interface with black background.
3. You can access apps such as YouTube, Google Play Store, or return to the original desktop.
4. To switch back, click the "Desktop" icon again from the new interface.

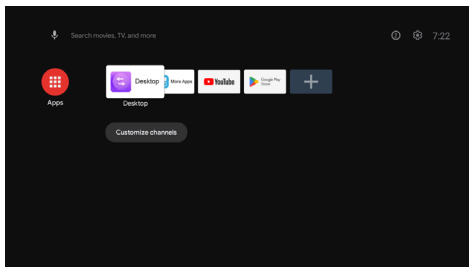

USB playback


Insert a USB flash drive or USB hard drive (up to 256GB supported) into the projector. Then, either press the **OK** button on the remote control, or select the **Source** icon on the home screen and choose **USB** to access the file list.

Supported files formats for USB input:


VIDEO FORMAT: DAT/MPEG/MPG/TS/MP4/AVI/MOV/MKV

AUDIO FORMAT: MP2/MP3/WAV/OGG/FLAC/AAC/M4A

 IMAGE FORMAT: JPEG/BMP/GIF/PNG

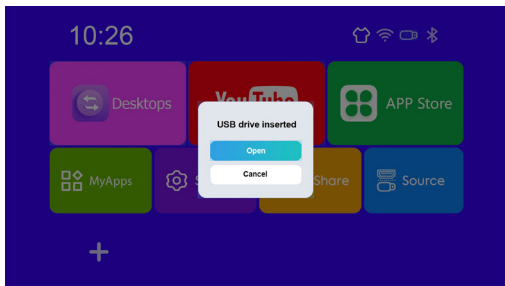

 
USB drive inserted select your file from device and press the "OK" button to enter.

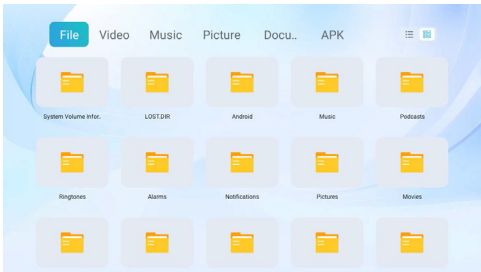

HDMI playback

5. Insert the HDMI cable into the projector.

 6. Select **Source** icon on the home screen or press **Input Source** on the remote control, then choose **HDMI** to begin playback.

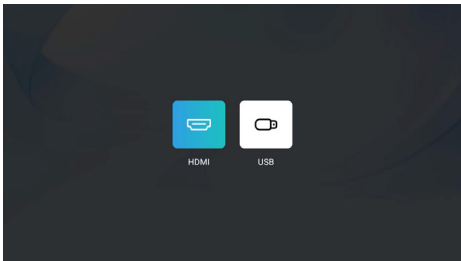


Note: When HDMI is connected, if you exit the HDMI input manually and wish to return to it, follow the steps below:

- Press the **Home** button on the remote control to exit HDMI playback.
- On the **home screen**, select the **Source** icon, or press the **Input Source** button on the remote control, then select **HDMI** to return to the HDMI input channel.

Setup Page

 
Select **Settings** on the projector **home screen**.

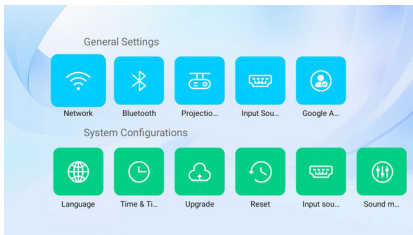

General Settings


Wi-Fi Connection

 Go to **Settings > Network**. Set **WLAN** to **ON**. Select the desired Wi-Fi network (SSID) from the list. Enter the correct password and confirm to establish the internet connection.

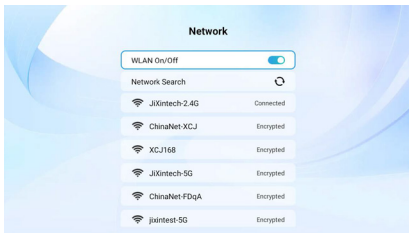

Bluetooth connection

 
Go to **Settings > Bluetooth**, select **Device Scan**, then choose the target device to pair.

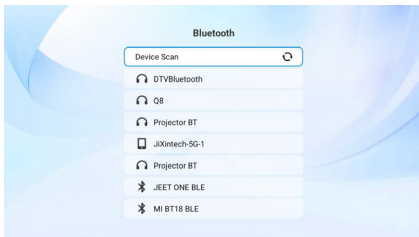

Projection Settings


Go to **Settings > Projection Settings** to configure:

 - Projection Mode
- Screen Zoom
- Trapezoidal Correction Mode
- Vertical Correction
- Horizontal Correction
- Upper & Lower Correction

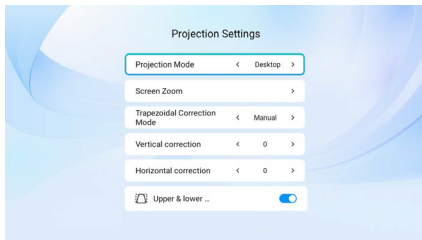

Google Account Settings

 
Go to **Settings > Google Account** to log in or log out of your Google account.

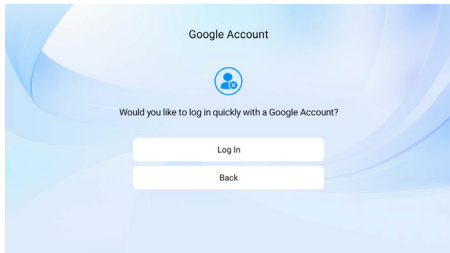

System Configurations


Language Setup

 Go to **Settings > Language** to select the desired language.

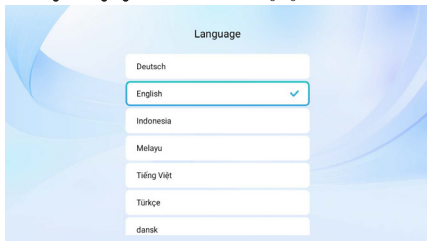


Time & Time zone

 Go to **Settings > Time & Time Zone** to set the current time, choose between 12-hour or 24-hour clock format, and configure the time zone.

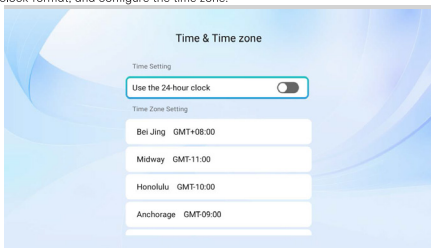

Upgrade

 Go to **Settings > Upgrade**, perform firmware updates either online or local.

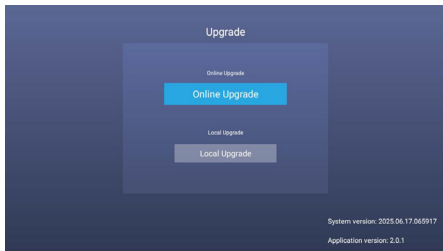

Reset

Go to **Settings > Reset** to restore the projector to factory default settings.

Reset

Factory reset yes or no ?

Yes

No

Input Source setting

Go to **Settings > Input Source Setting** to enable or disable the CEC and ARC functions.

Input source settings

CEC



ARC



Sound mode

Go to **Settings > Sound Mode**, select the desired sound profile: Standard, Theatre, Classical.


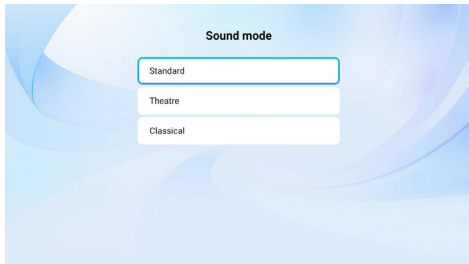 


Image Mode

 
Go to **Settings > Image Mode**, to choose the preferred image mode: Bright Mode, Vivid Mode, Movie Mode, Sports Mode, Self Definition.

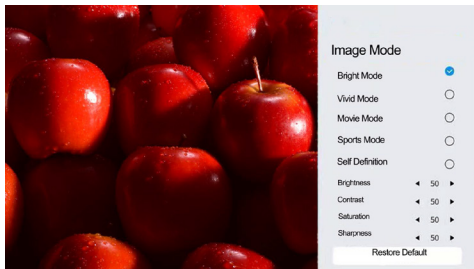

Screen Saver


Go to **Settings > Screen Saver**, to enable or disable the screen saver function. When enabled, you may select one of the following timeout options: 5, 10, 15, 20, or 30 minutes.

 (Default: 5 minutes)

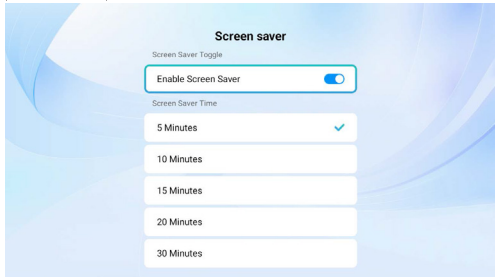

About Projector

 Go to **Settings > About Projector**, to view basic device information.

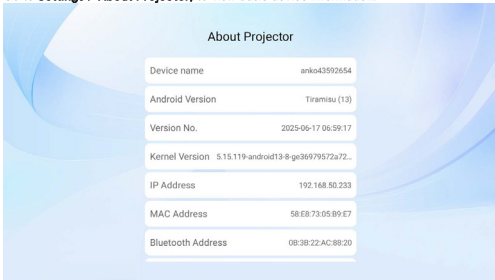

Screen Mirroring Setup (Android/iOS Devices)

Ensure that your Android (phone, tablet, etc.) or Apple devices (iPhone, iPad, etc.) are connected to the **same local Wi-Fi network** as the projector.

Option 1: Connection via Eshare app:

- 1.On the projector, go to the **Home Screen** and select **J-Share**.
- 2.Launch the **EShare** app on your mobile device.
- 3.Enable the **Phone Mirroring** function within the app.
- 4.From the list of available devices, select "**anko43592654**" to establish the connection.

Option 2: App-Free Connection

- 1.On the projector, open the **settings panel (lower-right corner)**, and enable both **AirPlay** and **Miracast**.
- 2.For Android devices: connect via **Miracast**.
- 3.For Apple devices: connect via **AirPlay**.


EShare - Enjoy Sharing Life

jixintest-5G


Get Started Now


1 Open your EShare app
Now to EShare? Get the app at [h.eshare.app](#)


2 Select **anko43592654**
Or Scan QR code




ⓘ Ensure all devices are connected to the same network.
Copyrighted content from Hulu, Disney+, Netflix or other streaming services CANNOT be shared due to copyright restrictions

 AirPlay


 Miracast

 GoogleCast

 ClickCast

App-free options also available

v1.2.0508 192.168.50.233 58 a8 73 05 b8 e7



12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The Bluetooths word mark and logos are registered trademarks owned by Bluetooth® SIG, inc.. and any use of such marks by KMART AUSTRALIA is under licence.



MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567