



UV/LED GEL NAIL LAMP

SUN X7Plus

K: 43-593-033 T: 71-351-353

User Manual



**PLEASE READ AND KEEP THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.

1. Always disconnect the USB cable with power supply when not in use, before cleaning or storing.
2. Never use the appliance if the cable, main unit or any part are damaged.
3. Do not expose the appliance to direct sunlight or high temperatures.
4. Keep the appliance away from flammable and explosive substances.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.
7. This appliance must be always used in accordance with the user instructions supplied with the product and must not be used for other purposes.
8. Do not touch the power plug or the product with wet hands.
9. Never immerse the appliance in water or other liquids.
10. **WARNING:** Keep the appliance dry.
11. For electrical safety, any repairs to the product should be carried out by a qualified electrical person only or the product must be disposed of.
12. Ensure that the USB cable is not stretched tightly or kinked.
13. This product is for household use only and not designed for commercial use.
14. Do not use solvents, abrasive or aggressive cleaning agents to clean the appliance.
15. Cleaning and user maintenance shall not be made by children without supervision.
16. The appliance must only be supplied by AS/NZS 61558.2.16 certified SELV power supply with output 5V 2A.
17. For cleaning, please refer to CLEANING AND STORAGE section.
18. When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
19. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
20. Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
21. Operate and store carefully to ensure the product does not incur damage by being dropped.
22. Do not leave the product in excessive heat or high temperature as it can cause the product to malfunction.
23. The LED lights are non-replaceable.
24. For indoor use only. This is not a toy. Keep away from children.
25. This product is not to be directly connected to the mains supply.


**KEEP THESE INSTRUCTIONS
FOR FUTURE REFERENCE**

CONTENTS

Please make sure that your appliance is received with the right contents:

UV/ LED gel nail lamp x1	UV gel polish x1
UV base coat x1	UV top coat x1

UV/ LED GEL NAIL LAMP

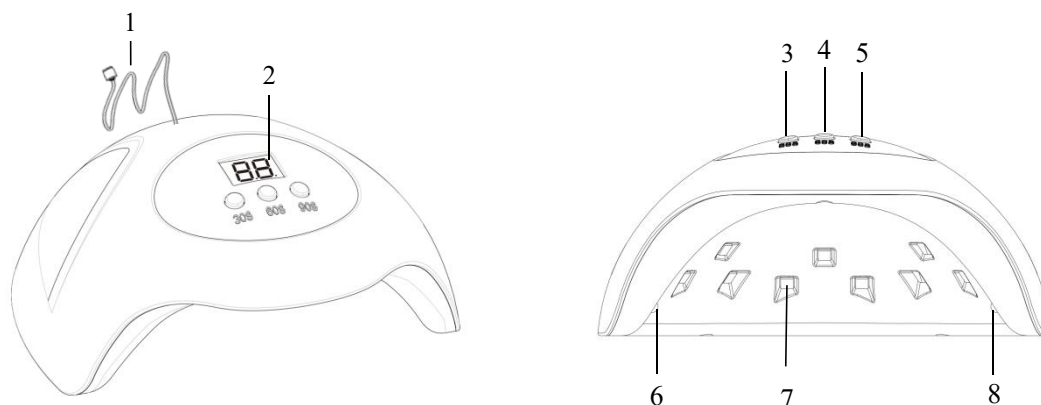

1. USB plug and cord	5. 90 seconds timer button
2. LED timer display	6. Sensor (signal receiver)
3. 30 seconds timer button	7. LED
4. 60 seconds timer button	8. Sensor (signal transmitter)

UV/LED GEL NAIL LAMP INSTRUCTIONS

1. Connect the appliance to a USB power source (5V 2A).
2. After each coat of base coat, gel polish or top coat, place your hand under the UV/LED nail lamp. The UV lamp will light up automatically and begin counting from '0' to '99' which is the default timer setting. If you remove your hand at any time during the process, the UV lamp will automatically stop and reset to the default timer.
3. Press the 30S / 60S / 90S timer function to change the default timer settings. If you remove your hand at any time during the process, the UV lamp will automatically stop counting down and resume when putting hand back in.
4. Repeat the process as many times as required until each layer of UV gel is dry.
5. Disconnect the appliance from the power source after use.

CAUTION! UV emitted from this product, Minimize exposure to eyes or skin. Use appropriate shielding.

CAUTION! This product emits ultraviolet (UV) radiation. Repeated exposure to UV light when combined with certain beauty, chemical or medicinal products may potentially result in photo sensitivity leading to skin irritation, burns, or other adverse effects. If concerned seek medical advice prior to use.

GEL POLISH APPLICATION

1. Clean and manicure your nails to your preferred shape and length.
2. Apply a thin layer of base coat and cure with a UV/ LED nail lamp. (60-90s)
3. Apply a thin layer of color gel and cure with a UV/ LED nail lamp. (60-90s)
4. To achieve a desired look, apply an additional thin layer of color gel and cure with a UV/ LED nail lamp. (60-90s) Repeat if needed.
5. Apply top coat and cure with a UV/ LED nail lamp. (180s or until it is fully cured/hardened)
6. Apply cuticle oil to nourish your cuticle and nails if needed.

GEL POLISH REMOVAL

1. File the nail surface with a nail file.
2. Soak the nails into acetone-based nail polish remover for about 5-10 minutes.
3. Gently remove the gel polish with a cuticle pusher.

CLEANING AND STORAGE

1. Clean the product regularly to maintain optimal performance and prolong the life of the product.

WARNING! Do not use a steel ball, abrasive cleaners or corrosive liquid to clean the product.

2. Wipe the appliance with a dry microfibre cloth. Do not rinse, soak or spray water or other liquids into the product to avoid damage to the appliance.
3. Ensure the product is clean and dry before storage.
4. Store the product indoors in cool and dry location.

TECHNICAL SPECIFICATION

Input: 5V D.C. 2A

Power Max: 10W



12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us