

anko

Portable Projector with Built in Speaker



Model:AMK720PP

220-240V ~ 50/60Hz, 50W

CONTENTS

General Safety	4
Product Overview	8
Remote Control	9
First Time Setup	10
Installation	11
Settings	
Setup	12
Picture	13
Sound	14
System	15
Time	16
Specifications	17
12 Month Warranty	18

GENERAL SAFETY

Read this manual thoroughly before you start using the Projector.

Store this manual, the completed warranty card, your receipt and the product packaging.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.



The cover (or back) of the unit should not be removed to prevent risk of electric shock.

This unit must be serviced by a qualified service personnel only.



The lightning flash with symbol within the triangle is intended to warn you of a non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.



The exclamation point within the triangle is intended to warn you to the presence of important operating and maintenance instructions in the documents included with the product.

IMPORTANT INFORMATION

The lightning flash symbol within the triangle is intended to warn you of non-insulated dangerous voltage the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.

- Only using furniture that can safely support the Products.
- Ensure the Product is not overhanging the edge of the supporting furniture.
- Do not place the product on a high furniture without securing both the furniture and the product to a stable support.
- Do not place the product on cloth or other conductive materials.
- Warn children of the dangers of climbing on furniture to reach the projector or its controls and to call for an adult to assist.

GENERAL SAFETY (CONT.)

IMPORTANT INFORMATION

- Do not expose this appliance to rain or moisture as it may result in fire or an electric shock hazard.
- Do not tamper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.
- Please do not expose the product to splashing or water contact
- Please do not place any object on top of the product including objects filled with liquids such as vases.
- Replace with same or equivalent type.

Installation

Please follow instruction when installing this product in accordance with the instruction manual. This product must be positioned in a sufficiently stable location, it can be potentially hazardous due to falling and can cause injury, particularly to children if it positioned incorrectly.

- Before installing this Projector set, make sure your outlet voltage corresponds to the voltage stated on the product rating label.
- Do not use a damaged power cord, plug or loose outlet. Doing so may cause an electric shock.
- Do not plug several devices into the same outlet. Doing so may cause the outlet to overheat and start a fire. Make sure the outlet is readily accessible during operation of the equipment.
- Do not bend, twist or kink the power cord excessively.
- Do not allow anything to rest on or roll over the power cord. Doing so may cause a fire or an electric shock.
- Do not run the power cord near heat-producing appliances such as radiators, stoves or irons. The excessive heat could melt the insulation and expose live wires, resulting in fire or electric shock.
- Unplug this Projector during lightning storms or when unused for long periods of time. Not doing so may result in fire or electric shock.
- Do not cover the ventilation openings of the product with items such as newspapers, tablecloths, curtains etc or insert objects into the slots available on the products.
- As this could result in the product temperature rising and could cause a fire.
- If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center. Failure to do so may result in fire or electric shock.
- When not using the unit for long periods of time or when you are moving the unit please ensure to disconnect the power cord from the wall socket.

GENERAL SAFETY (CONT.)

- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or young children of any age, They must be supervised product by a person responsible for their safety.
- Batteries from the remote control must be only removed by an adult, the adult must ensure to keep them out of reach of infants and children. Seek medical attention immediately if a child has swallowed a battery.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.

! CAUTION !

DO NOT look directly into Project LENS. This can cause damage to a persons or children's eyes. Take all necessary precautions to make sure that no one looks into the LENS while turned on.

MAKE SURE this project is out of reach of children or baby so that they do not stand and look into the project LENS.

DO NOT cover the vents, the vents are needed to let out hot air. Placing objects near or covering the vents can cause the product to overheat and permanently damage the projector.

GENERAL SAFETY (CONT.)

Please make sure upon positioning this product, the place is:

- Not wet or damp and Well ventilated
- Away from direct sunlight or heaters.
- Away from splashes or food.
- Protected from excessive dust or grease.
- Do not install this equipment in a confined space such as a bookcase or similar unit.
- Do not install the Projector set near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
- Do not place containers with liquids, if liquid falls inside the products it may result in short-circuit, fire or electric shock.
- Do not place small metallic objects on top of the unit. Metal object falls inside the product it may result in short-circuit, fire or electric shock.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the Projector set.
- Install the unit at a reasonable distance from the wall to ensure sufficient ventilation.



“HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.”

PRODUCT OVERVIEW



1. Lens

2. Lens Focus Wheel

3. Power Button

4. Indicator Light

5. Earphone Jack

 
6. USB Disk Port

7. HDMI IN

8. Power Input

REMOTE CONTROL

Your projector comes with a Remote Control to access and control your projector from a distance. (2 * AAA Batteries not included).

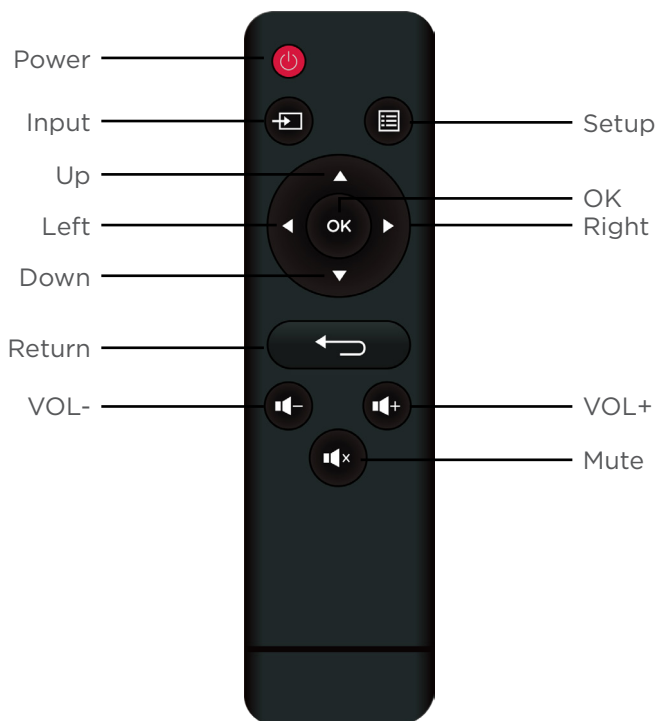



Using the Remote Control

- Do not mix old and new batteries in the remote
- Do not use different types of battery
- If you do not intend to use the unit for a long time, please remove batteries from the remote to avoid accident.
- Keep batteries away from children and pets.
- Never throw batteries into a fire.
- Do not drop, or impact the remote control as it void warranty immediately.
- The remote control operate at a range of 5 to 6M effectively
- Do not expose the remote control sensor to a bright light.

FIRST TIME SETUP

Make sure to place the projector on a flat and stable surface that is level. So that the projector project the video/image onto the wall nice and straight.

  1. Plug in power cable.
2. Once the power is plugged in, Press power to turn on the projector.
3. You can now need to connect a source of media to play from to project onto the wall.
This can be through HDMI/MEDIA PLAYER(USB)
4. When you plug in a media source, you must select INPUT source you want to view.
5. Once you have selected the source, you can now adjust the volume and manually adjust focus of the projector lens to suite your needs depending on the distance from the wall your projector is.

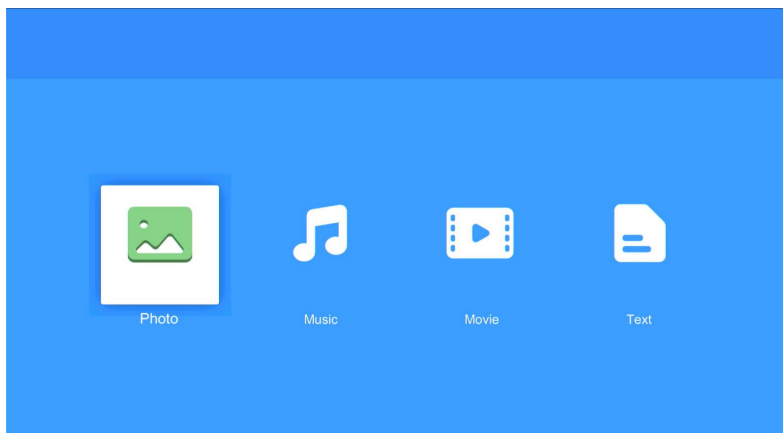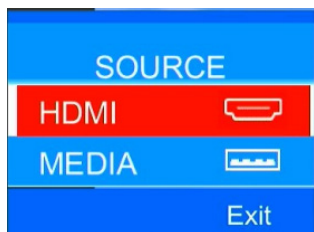

Important note: This projector does not support keystone, you can adjust projector placement to get a square picture if the picture is not so square.

INSTALLATION

DISTANCE BETWEEN PROJECTOR AND SCREEN

Projection Distance	1.6 M	2.2 M	3.2 M
Projection Size	50 inch	70 inch	100 inch
Light, brightness, etc. will affect the projection distance, this data is for reference only.			
Projection Position			
It is recommended to place the projector in front of the center of the screen.			

 
ADJUSTING FOCUS

Adjust the lens focus wheel until you get a clear picture.

SETTING - SETUP

To Access the setting **SETUP** menu:

- 1. Press the **SETUP** button on the Remote Control.

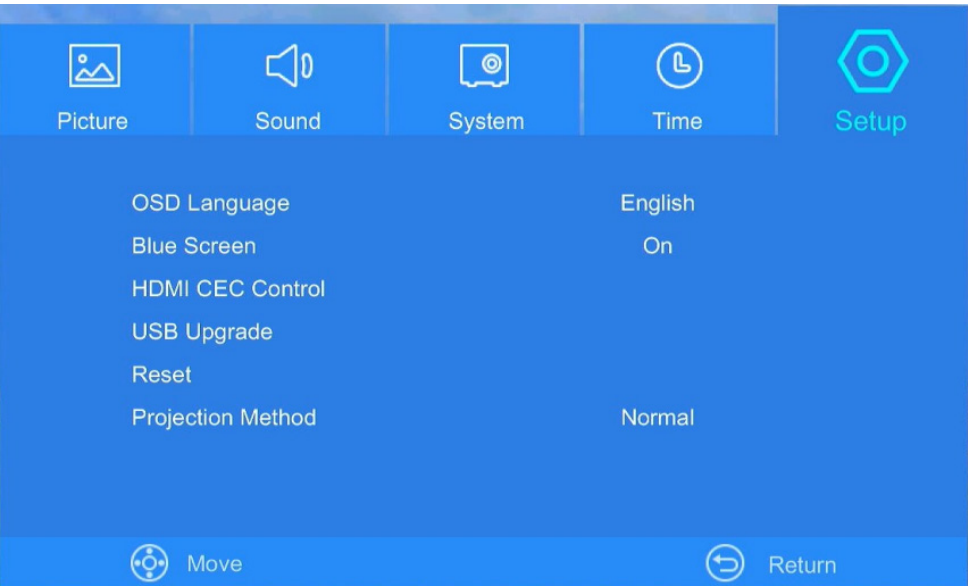


- OSD LANGUAGE:** Adjust between Languages English (default).
- BLUE SCREEN:** Adjust between ON or OFF.
- HDMI CEC CONTROL:** HDMI CEC control.
- USB UPGRADE:** USB upgrade.
- RESET:** Press to reset your projector settings.
- PROJECTION METHOD:** Normal, Flip mirror, Mirror, Flip

SETTING - PICTURE

To Access the setting **PICTURE** menu:

 - 1. Press the **SETUP** button on the Remote Control.
- 2. Navigate to **PICTURE** to set up.

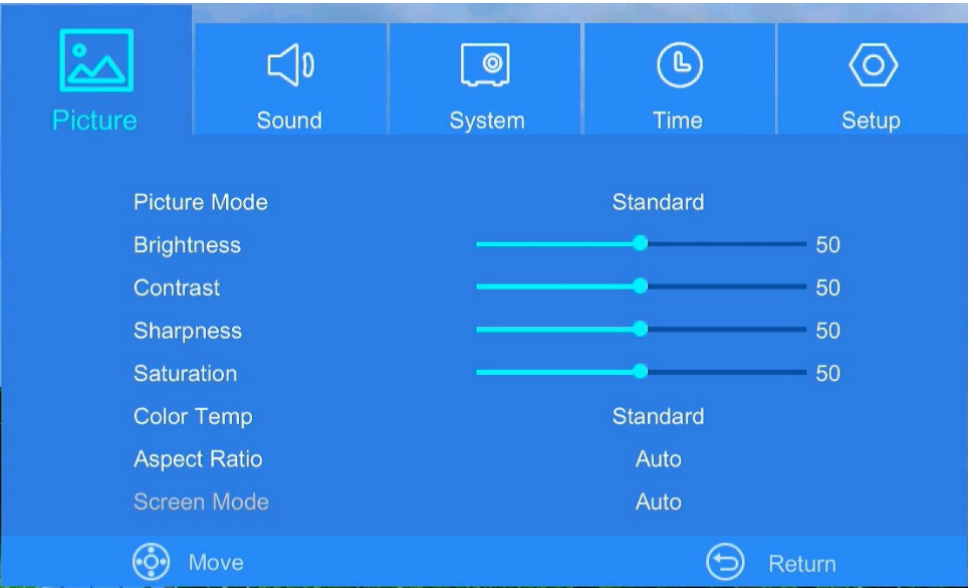


- PICTURE MODES:** Standard, Mild, Personal, Dynamic (Brightness, Contrast, Sharpness, Saturation).
- COLOR TEMP:** Adjust color temperature.
- ASPECT RATIO:** Auto, 16:9, 4:3, zoom1, zoom2.
- SCREEN MODE:** Auto, video, PC.

SETTING - SOUND

To Access the setting **SOUND** menu:

 - 1. Press the **SETUP** button on the Remote Control.
- 2. Navigate to **SOUND** to set up.

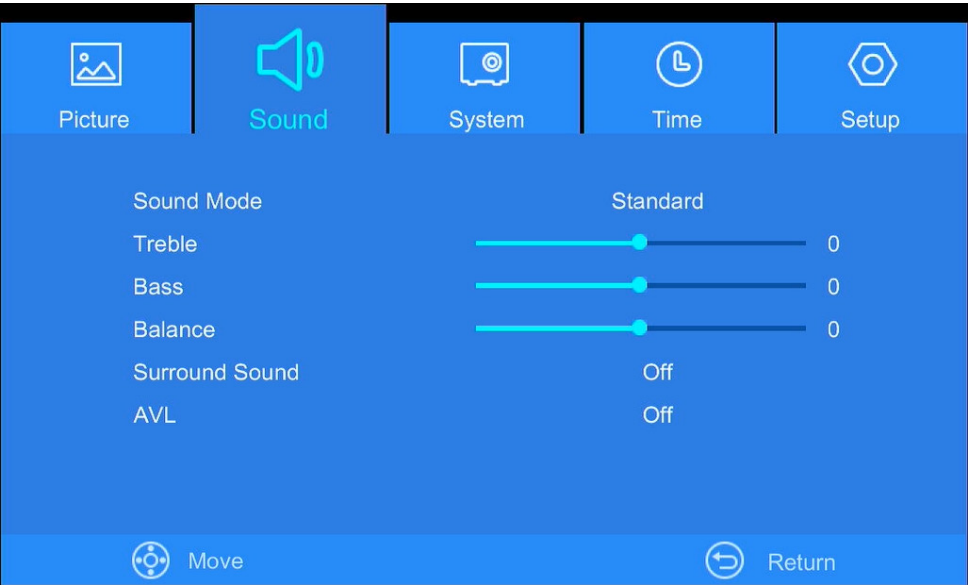


- SOUND MODES:** Standard, Personal, Music, Movie
When on Personal mode, you can adjust more settings such as Treble & Bass.
- BALANCE:** Adjust the Audio Balance of the left or right speaker.
- SURROUND SOUND:** Adjust between ON or OFF.
- AVL:** Adjust between ON or OFF.

SETTING - SYSTEM

To Access the setting **SYSTEM** menu:

 - 1. Press the **SETUP** button on the Remote Control.
- 2. Navigate to **SYSTEM** to check system information.

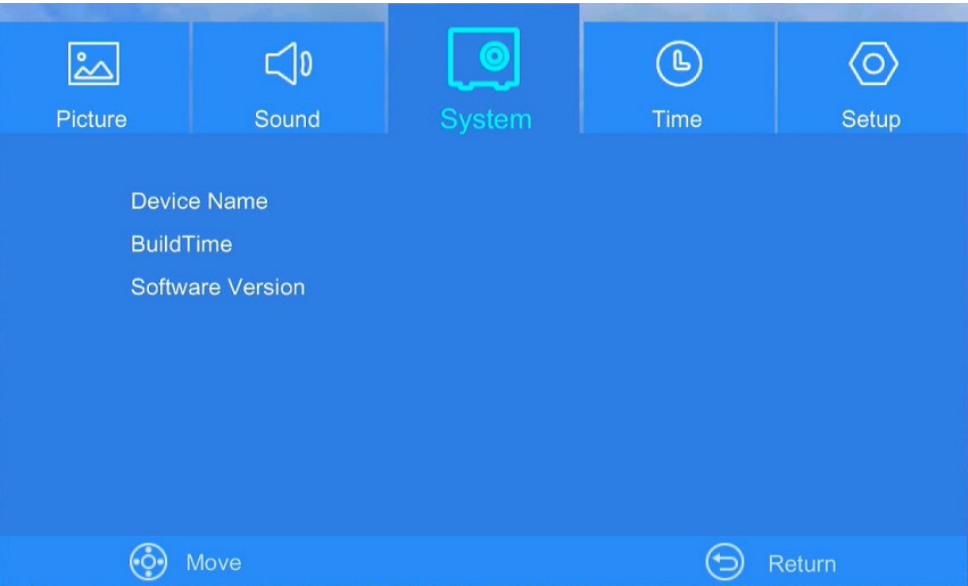


- DEVICE NAME:** Display the name of device.
- BUILDTIME:** Display the build time.
- SOFTWARE VERSION:** Display the software version.

SETTING - TIME

To Access the setting **TIME** menu:

 - 1. Press the **SETUP** button on the Remote Control.
- 2. Navigate to **TIME** to set up.

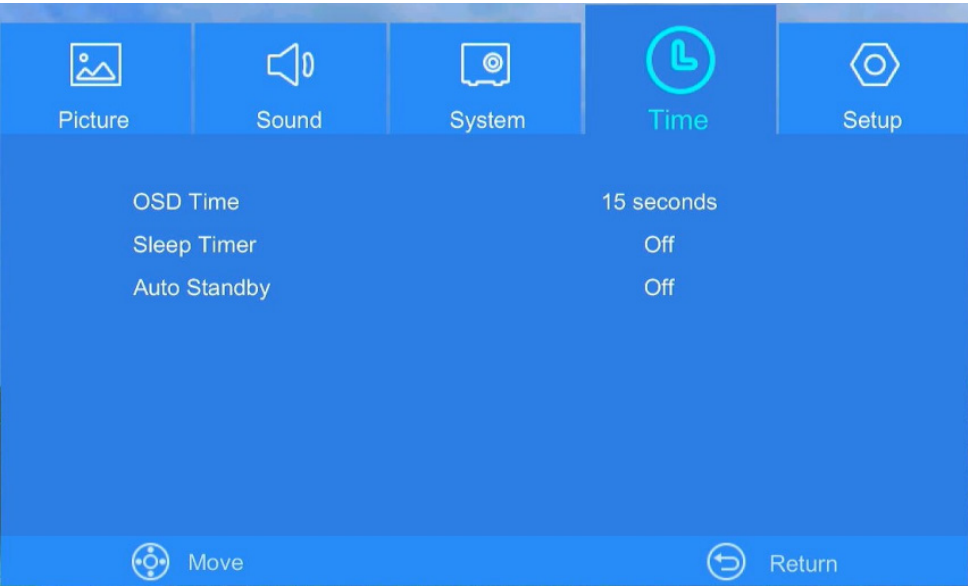

- OSD TIME:** On screen time set.
- SLEEP TIMER:** Set for time to enter shut off.
- AUTO STANDBY:** Set time to enter standby mode.

SPECIFICATIONS

Resolution	1280 x 720 Native Resolution	
Contrast Ratio	1000 : 1	
Lumens	120 ANSI	
Aspect Ratio	16:9, 4:3, AUTO	
Multimedia Playback Format under USB Mode	Movie: MKV, WMV, MPG, MPEG, DAT, AVI, MOV, ISO, MP4, RM	
	Music: WAV, MP3, MP2, FLAC	
	Photo: PNG, JPEG, BMP	
Power Source	220-240V 50/60Hz	
Power Consumption	50W	
Dimensions	120 (w) × 140 (d) × 150 (h) mm	
Weight	Net: 0.91 kg	
	Gross: 1.4 kg	
What's in the box	1 x Projector with Carry Handle	1 x Remote Control
	1 x Power Cord	1 x Instruction Manual

NOTE: This document is for reference only, the operation interface is subject to software.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au -for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

THIS PAGE HAS
BEEN LEFT BLANK

