



# LIGHT UP DANCE MAT

## Instruction Manual

3+  
years

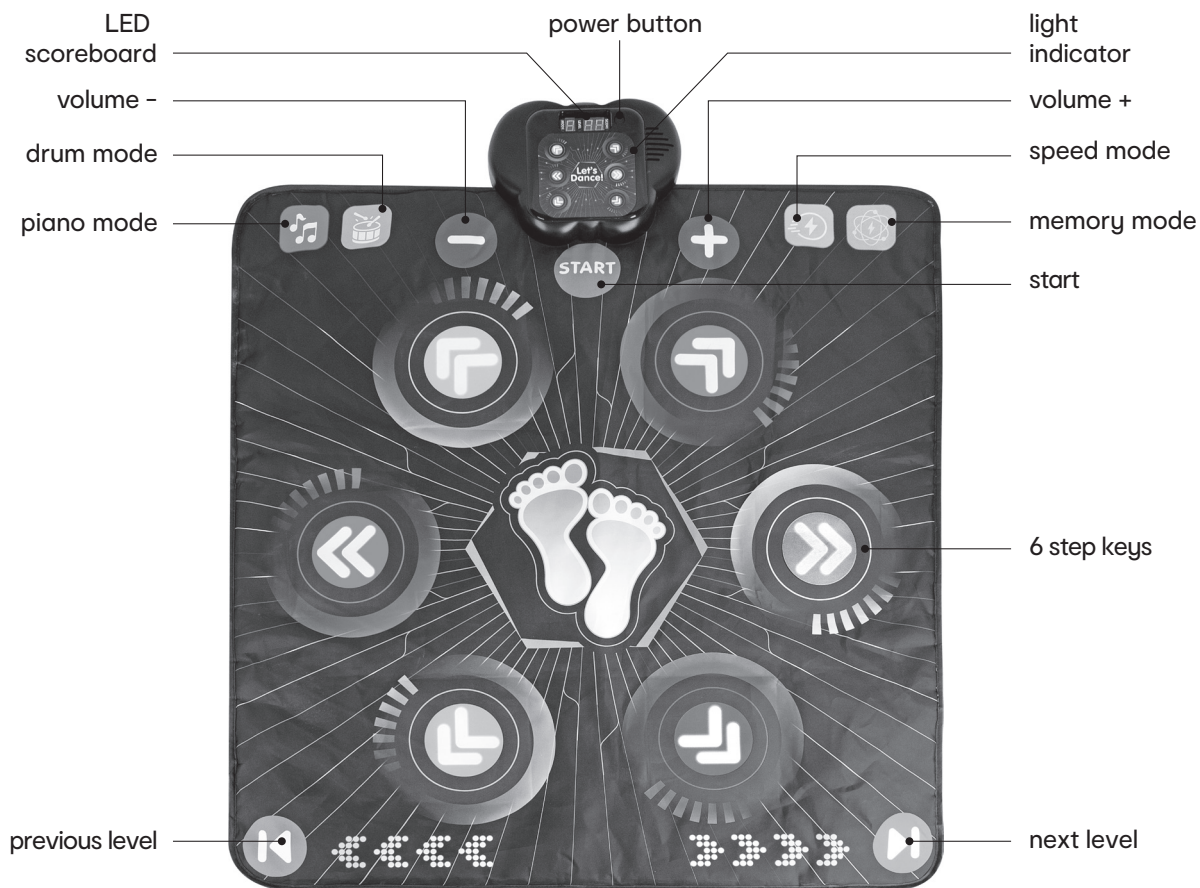

1. Press the power button to turn on/off.
2. : Play songs with piano sounds.  
: Play songs with drum sounds.  
: Dance with speed by following the light.  
: Memorise the order of the lights then step on the correct keys!
3. : Press 'START' once you have pressed your chosen mode.
4. : Press to adjust the volume.
5. : Return to previous level.
6. : Press to next level.

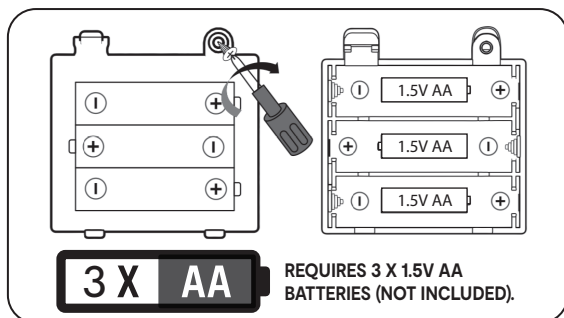

**CAUTION: BATTERY INSTALLATION BY ADULT REQUIRED.**



**WARNING:** BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY ADULT. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

**WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.**

**WARNING:** FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.



**WARNING:**  
**CHOKING HAZARD**  
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

K: 43-597-567 | T: 71-733-951

SURFACE CLEAN ONLY, WIPE WITH A DAMP CLOTH.  
ADULT SUPERVISION REQUIRED.

PRODUCT MAY VARY FROM IMAGE SHOWN.

PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.

**MADE IN CHINA**

**CUSTOMER SERVICE:**

**KMART AU:** 1800 124 125

**KMART NZ:** 0800 945 995

**TARGET AU:** 1300 753 567