

size:70mmx80mm



Mini Digital Camera
Instruction Manual
K-4389-0001 / T: 714-005-003
Model No.ZR2020S05395

Accessories:

- 1 x Camera
- 1 x Charge & data cable
- 1 x Strap
- 1 x Lens cap
- 1 x Lens cap
- 1 x Memory Card (32GB included)
- 1 x User manual

Product Specifications:

- Product dimensions: 42.47x28.25x22mm(L*W*H)
- Display size: 0.96 inches
- Input: DC 5V 500mA
- Output: approximately 300mAh
- Communication distance: <100CM

Operating Instructions

1. Charging

Before using the camera for the first time, please charge it. The device can be charged in the following way:

1. Connect to a charger.
2. Connect to a computer.
3. Connect to a power supply.

The red charging LED will light up when the charging is in progress. It will turn off when charging is completed.

2. Sound recording mode

Note: When the battery level is low, the camera will be powered down and cannot be turned on. Please charge the device before using it.

3. Power mode

Power on: Press and hold the on/off button (P) for 3 seconds. Power off: Press and hold the on/off button (P) for 3 seconds.

4. Photo shoot

When entering the memory card, the camera will enter Photo Shoot standby mode, after power opening on, and the camera icon will appear in the upper left corner of the screen. The camera icon (P) will light up, the flashlight will light up, and the speaker will make a beeping sound to indicate that the camera is ready to use. The number of remaining photos that can be taken is displayed in the upper right corner of the screen.

5. Video recording

When video recording mode, press the on/off button (P). The video icon (V) will appear in the upper left corner of the screen, and the device will enter video recording mode. The camera will start video recording. The video time counter will appear in the upper right corner of the screen. The screen will turn black when the video recording is completed. To delete the video, press the on/off button (P) to stop recording. The video file will be automatically saved to the memory card, and the device will return to video standby mode.

6. Main photo shoot/video recording mode

In standby mode, short press the on/off button (P), and the recording icon (P) will appear in the upper left corner of the screen. At this time, both the photo shoot and video recording modes are in music mode and the flashlight will light up.

7. Standby mode

In standby mode, press and hold the camera button (P) to enter sound recording mode and start recording automatically. Short press the camera button (P) to stop sound recording and enter sound recording standby mode. Press the camera button again to start a new sound recording.

8. Photo shoot

Press and hold the camera button (P) to enter sound recording mode or press and hold the camera button (P) to exit sound recording mode.

9. On flash light

Press and hold the light button (P) for 3 seconds to standby mode to turn the flash light on; press and hold (P) for another 3 seconds to turn it off.

10. Filter

Press the down button (P) to start playing mode to select a variety of effects. There are 6 filter effects to choose from.

11. Playback

When the on/off button (P) is switched to the playback mode, select the file you want to view using the up (P) and down (P) buttons. Press the on/off button (P) to play or stop. Press and hold the on/off button (P) to delete the file. Press again to select whether the current file or all files to be deleted.

12. Automatic switch off

If the device will not be used automatically in the following cases:

- If the battery is low, the device will be powered down.
- If the device is left idle for 30 minutes, the system will automatically power the video camera and stop automatically switch off.
- If the device is not used automatically switch off, if there is no operation for 2 minutes.

13. Reset

If the device freezes or gets stuck for unknown reasons, you can reset it next pin into the reset hole. Short press it to complete the reset, and then turn it on again normally.

14. How to connect to computer

When entering the memory card mode, the device and connecting the device to the computer with charge & data cable, indicated, it can be used as a UDSB disk. After a few seconds, the device will display the removable disk icon, and the files on the memory card can be read in the desktop.

15. Warnings

IMPORTANT INFORMATION PLEASE READ THIS INSTRUCTION MANUAL FOR USER WITH CARE TO PREVENT PERSONAL INJURY!

1. THIS PRODUCT IS NOT A TOY.
2. DO NOT CONNECT OR POWER EXCEEDS THE RECOMMENDED VOLT (5V 500MA).
3. THE CAMERA SHOULD BE KEPT AWAY FROM DAMAGE TO THE SUPPLY CORD, DISCONNECT OR CHAIN IN THE EVENT OF DAMAGE, IT SHALL NOT BE USED UNTIL THE DAMAGE HAS BEEN REPAIRED. PLEASE CONTACT THE SERVICE PROVIDER FOR REPAIR/REPLACE (availability dependent) for this product if it is reusable.
4. THIS CAMERA CANNOT BATTERIES THAT ARE NONREPLACABLE.
5. NEVER COVER SMALL HOLE THERE WILL BE A CHARGING HAZARD DO NOT PUT INTO THE HOLE.
6. THIS CAMERA CANNOT BE OPERATED DURING CHARGING BATTERY. AVOID CHARGING BATTERY AT 45°C.
7. THIS PRODUCT IS NOT WATERPROOF. KEEP IT AWAY FROM WATER AND HUMIDITY.

16. Do not touch the device

Do not touch the device when it is powered on. If the device is powered on, it will be automatically powered down. If the device is powered on, it will be automatically powered down. If the device is powered on, it will be automatically powered down.

17. Do not touch the device

Do not touch the device when it is powered on. If the device is powered on, it will be automatically powered down. If the device is powered on, it will be automatically powered down. If the device is powered on, it will be automatically powered down.

18. Do not touch the device

Do not touch the device when it is powered on. If the device is powered on, it will be automatically powered down. If the device is powered on, it will be automatically powered down. If the device is powered on, it will be automatically powered down.

19. Do not touch the device

Do not touch the device when it is powered on. If the device is powered on, it will be automatically powered down. If the device is powered on, it will be automatically powered down. If the device is powered on, it will be automatically powered down.

20. Do not touch the device

Do not touch the device when it is powered on. If the device is powered on, it will be automatically powered down. If the device is powered on, it will be automatically powered down. If the device is powered on, it will be automatically powered down.

Warranty:

We provide goods with guarantees that cannot be replaced or returned for a major failure and compensation for any other type of damage. If you are not satisfied with the goods, please return them to the original purchase point for a refund or exchange. We are not responsible for any damage to the goods caused by the user's misuse or improper use.

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in workmanship for the period of 12 months from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

New Zealand customers, this warranty is in addition to statutory rights covered under New Zealand legislation.

We will provide you with your choice of a refund, repair (where a similar replacement exchange (availability dependent) for this product) or replacement (where a similar replacement exchange (availability dependent) for this product) becomes defective within the warranty period. The business will be responsible for the reasonable expense of returning the product. This warranty will not cover goods where the defect is the result of accident, misuse, negligence or tampering with the product.

*Please insert the receipt or proof of purchase and contact our Customer Service Centre or Retailer locally, for the entity you purchased this product from, for any difficulties with your product.

MADE IN CHINA

CUSTOMER SERVICE:

TEL: 0065 6300 0545
FAX: 0065 6300 0546
EMAIL: info@anko.com.sg
WEBSITE: WWW.ANKO.COM.SG

Warranty:

We provide goods with guarantees that cannot be replaced or returned for a major failure and compensation for any other type of damage. If you are not satisfied with the goods, please return them to the original purchase point for a refund or exchange. We are not responsible for any damage to the goods caused by the user's misuse or improper use.

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in workmanship for the period of 12 months from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

New Zealand customers, this warranty is in addition to statutory rights covered under New Zealand legislation.

We will provide you with your choice of a refund, repair (where a similar replacement exchange (availability dependent) for this product) or replacement (where a similar replacement exchange (availability dependent) for this product) becomes defective within the warranty period. The business will be responsible for the reasonable expense of returning the product. This warranty will not cover goods where the defect is the result of accident, misuse, negligence or tampering with the product.

*Please insert the receipt or proof of purchase and contact our Customer Service Centre or Retailer locally, for the entity you purchased this product from, for any difficulties with your product.