


**size:70mmx80mm**



**Mini Digital Camera**  
Instruction Manual  
K-4298-014 (1) 71-7704-041  
Model No.ZR2020510395

**Accessories:**

- 1 x Camera
- 1 x Charge & data cable
- 1 x Strap
- 1 x Lens cap
- 1 x Lens cap
- 1 x Memory Card (32GB included)
- 1 x User manual

**Product Specifications:**

- Product dimensions: 42.47x28.25x22mm(L\*W\*H)
- Display size: 0.96 inch
- Input: 1.7V/100mA
- Output: approximately 300mAh
- Operating frequency: 2.4GHz
- Operating range: distance <1000cm

**Operating Instructions**

**1. Charging**

Before using the camera for the first time, please charge it. The device can be charged in the following way:

- 1) Connect to a charger
- 2) Connect to a computer
- 3) Connect to a power supply

The red charging LED will light up when the charging is in progress. It will turn off when charging is completed.

**2. Power mode**

Power on: Press and hold the on/off button (P) for 3 seconds. Power off: Press and hold the on/off button (P) for 5 seconds.

**3. Photo shoot**

When entering the memory card, the camera will enter Photo Shoot standby mode, after power opening on, and the camera icon will appear in the upper left corner of the screen. The camera icon (P) will light up, the flashlight will light up, and the speaker will make a beeping sound to indicate that the camera is ready to use. The number of remaining photos that can be taken is displayed in the upper right corner of the screen.

**4. Video recording**

When video recording mode, press the on/off button (P). The video icon (V) will appear in the upper left corner of the screen, and the device will enter video recording mode. The camera icon will start recording. The video time counter will appear in the upper right corner of the screen. The speaker will make a beeping sound to start recording. The video file will be automatically saved to the memory card, and the device will return to video standby mode.

**5. Full photo shoot/video recording mode**

In standby mode, short press the left button (P) and the recording icon (V) will light up. The left button (P) will be the shutter of the screen. At this time, both the photo shoot and video recording modes are in music mode and the flashlight will light up.

In standby mode, press and hold the camera button (P) to enter sound recording mode and start recording automatically. Short press the camera button (P) to stop recording and press the camera button (P) to enter sound recording mode. Press the camera button (P) to start a new sound recording.

Press and hold the camera button (P) to enter sound recording mode or press and hold the camera button (P) to exit sound recording mode.

**6. Turn on flashlight**

Press and hold the left button (P) for 3 seconds in standby mode to turn the flashlight on; press and hold (P) for another 3 seconds to turn it off.

**7. Filter**

Press the down button (P) in standby mode to select a different type of effects. There are 6 filter effects to choose from.

**8. Playback**

When the on/off button (P) is switched to the playback mode, select the file you want to view using the up (P) and down (P) buttons. Press and hold the camera button (P) to delete the file. Press and hold the camera button (P) to delete the file again to select whether the current file or all files to be deleted.

memory card, and the device will return to video standby mode.

**9. Computer mode**

If the device has the memory card removed, it can be used as a computer camera by connecting it to the computer with the data cable. If the device has the memory card inserted, it can be used for computer cameras without a built-in camera, simply connect it to the computer with the data cable. The device will switch to the camera mode by the settings (camera name: "VIGI").

**10. New to connect to computer**

Press the memory card into the device and connecting the device to the computer with charge & data cable, and disconnect it. It can be used as a USB drive. After a few seconds, the device will display the removable disk icon, and the files on the memory card will be in the desktop.

**11. Reset**

If the device freezes or gets stuck for unknown reasons, you can reset it next pin into the reset hole. Short press it to complete the reset, and then turn it on again normally.

**12. Month Warranty**

Thank you for your purchase.

Your new product is warranted to be free from defects in workmanship for the period of 12 months, starting from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

New Zealand customers, this warranty is in addition to statutory rights covered under New Zealand legislation.

We will provide you with your choice of a refund, repair (where a similar replacement is available) or replacement (if it is available) becomes defective within the warranty period. The business will be responsible for the reasonable expense of returning the product. This warranty will not cover goods where the defect is a result of accident, accident, misuse, or other causes.

Please insert your receipt or proof of purchase and contact our Customer Service Centre or Retailer, for the entity you purchased this product from, for any difficulties with your product.

**Warranty:**

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a refund or repair for a major failure and compensation for any other loss suffered. Please note that this does not affect your rights. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

**Important Note:**

2024/01/23 25595 Y

Y M/D H/M/S

Y: Year of time watermark  
M/D: No time watermark  
H/M/S: No time watermark

**12. Automatic switch off**

The device will shut off automatically in the following cases:

- If the battery is low, the recording, the system will automatically stop the video content and then automatically switch off.
- If the device has no sound recording, it will automatically switch off. There is no operation for 2 minutes.

**Important Note:**

2024/01/23 25595 Y

Y M/D H/M/S

Y: Year of time watermark  
M/D: No time watermark  
H/M/S: No time watermark

**12. Automatic switch off**

The device will shut off automatically in the following cases:

- If the battery is low, the recording, the system will automatically stop the video content and then automatically switch off.
- If the device has no sound recording, it will automatically switch off. There is no operation for 2 minutes.