

# anko

## Instruction Manual



## 4K Action Camera with Wi-Fi

K: 43-598-205 | T: 71-414-621

Model No: EB500437

MADE IN CHINA

Thank you for your purchase of this action camera. Please carefully read this manual and all safety instructions prior to using the product. It is important to retain this manual for future reference.

## **Cleaning and maintenance before use**

Clean the lens with the included cleaning cloth to remove fingerprints or dust before recording.

Ensure all mounts and screws are properly tightened to prevent vibrations or accidental drops during use.

## **Safety & Usage Instructions**

1. Secure the camera to prevent drops.
2. Keep away from children especially during charging.
3. Never open housing or insert objects.
4. Avoid extreme temperatures, direct sunlight, dust, moisture, and strong magnetic fields (e.g., electrical machines).
5. Store in a cool, dry, dust-free location.
6. Keep away from hot surfaces, naked flames, and power surges.
7. Immediately disconnect power if device overheats, emits smoke, or produces strange smells.
8. Regularly inspect cables/product; stop use if damaged.
9. Use Class 10 (or higher) Micro SD cards for optimal performance.
10. Keep SD cards away from magnetic objects to prevent data errors.
11. Built-in battery is non-removable; do not attempt replacement.
12. Clean surface stains with a dry cloth only when unplugged.
13. Disconnect charger (if attached) before cleaning.

## Battery warnings

Never dismantle, crush, or pierce the battery, or allow the battery to short-circuit.

Do not expose the battery in high temperature environment, if battery leaks or bulges, stop continue to use.

Always charge using the designated charger. Risk of explosion if battery is replaced by an incorrect type.

Keep the battery out of reach of children.

Batteries may explode if exposed to naked fire. Never dispose batteries in a fire.

Follow your local regulations for disposing used batteries.

## Waterproof IP68



**WARNING:** It is imperative to securely fasten the cover on the camera before submerging it in water. Failure to do so may cause leaks that could potentially harm or render your camera inoperable. Please be advised that any water damage resulting from user error is not covered under warranty.

## The Diagram of Product





The Diagram of Product



Accessories



## Product Features

1. The device supports you to film 21 meters under water scene.
2. 2.0" Touch IPS+1.3" IPS screen display for convenient videos and image playback.
3. Allows for video recording while charging.
4. 4K video resolution.
5. Impressive 20 megapixels photo resolution.
6. Supports WiFi functionality.
7. Supports memory expansion through a Micro SD card, with a maximum capacity of 64GB. (Only included 1pc 32GB Micro SD card, others need to be purchased separately).
8. Supports multiple video recording formats, including 4K, 2.7K, 1080P, and 720P.
9. Supports MP4 recording format.
10. Various photo shooting modes are available, including Photo, Auto, Timer, Drama Shot.
11. Offers multiple video shooting modes, such as Video, Slowly, Loop, Lapse.

## Note:


1. Gently push the Micro SD card into the slot until it locks into place as above picture showing:  
Insert the Micro SD card in incorrect direction could damage the Micro SD card slot.
2. It supports memory expansion through a Micro SD card with a maximum capacity 64GB  
(Only included 1pc 32GB Micro SD card, others need to be purchased separately).
3. Please use the Micro SD card (Class 10 above).
4. Memory card is a small part which may be a choking hazard. Don't put into the mouth. If cannot read the Micro SD card, please take it out and insert again and check the direction is correct.



## Getting Started

**Power On:** Press and hold the Power/Mode Button for 3 seconds.

**Power Off:** Press and hold the Power/Mode Button again for 3 seconds.  
Or slide from up to down and touch the Power Off icon.

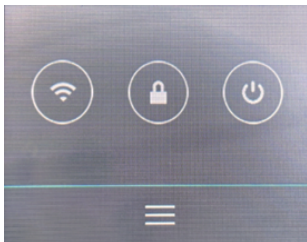

## Overview

Turn the camera ON and repeatedly press the Power/Mode Button to cycle through camera modes and setting. The modes will appear in following order:



Video Recording



Photo



Playback

## Setting


### 1. Mode Setting

Press Mode Button to cycle through Video/Photo Mode.

Or click the bottom of the screen in the Video/Photo Mode, then mode setting will display for your choosing.


**Video Mode:** Video/Slowly/Loop/Lapse

**Photo Mode:** Photo/Auto/Burst/Timer

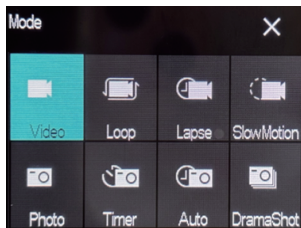


### 2. PlayBack


Playing back videos and photos:

(1) Verify the camera is in Playback menu .

(2) Press Up/Down Button to select files, press OK Button to playback video or photo.

Or Click the  on the bottom of the screen in the Video/Photo Mode to enter, then touch the left/right arrow to select files.

### 3. System Setting

If need to set the Video/Photo setting, verify it is in Video/Photo interface correspondingly, touch the  on the bottom of screen in the Video/Photo Mode to enter setting interface. Slip to cycle through main options, then click your preferred option to select.

## Video Setting

Video Resolution	4K30FPS,2.7K30FPS,1080P60/30FPS, 720P120/60/30FPS
Slowly Motion	1080P 2X, 720P 4X,
Loop Video Length	2min, 3min, 5min
Time-lapse Rec	0.5s/1s/2s/5s/10s/30s/60s
RecordingSound	On/Off

## Photo Setting

Pixel Inset	20M/16M/12M/8M/5M/2M
Timer	3S/ 5S/ 10S/ 20S
Auto	3s/10s/15s/20s/30s
Drama Shot	3P/S, 5P/S, 10P/S

## Wi-Fi Connection

1. After camera is power on, press and hold the Up Button, WIFI information will display.
2. Find the WIFI name and enter password in your smart phone or tablet to connect;
3. Point and open "XDV " APP program, you can preview the shooting screen on the APP, videos and photos can be remote, files can be play backed/ downloaded/ deleted/ shared.
4. For APP installation, the phone system requires Android 4.1 and above, or IOS 7 or more.

## System Setting

White Balance	Auto/Sunny/Cloudy/Incandescent/Fluorescent
Exposure Setting	-3, -2, -1, 0, 1, 2, 3
Image Rotation	On/Off
Driving Mode	On/Off
Frequency	Auto/ 50Hz/ 60Hz
LED Indicator	On/Off
Auto Screen Saver	Off/30S/1 Minute/2 Minutes
Auto Power Off	Off/3 Minutes/ 5 Minutes/ 10 Minutes
Time Watermark	On/Off
Language	English/German/French/Spanish/Italian/TraditionalChinese/Simplified Chinese/Japanese/Russian/Korean/Polish/Nederlanse/Portuguese/Thai
Date-Time	Year/Month/Day,
Format	Format/ Cancel
Reset to Factory	Confirm/ Cancel
Firmware Version	Product Model/Software Version/

## **Insert Micro SD card**

Please select the brand Micro SD card Class 10 max 64GB, formatted on the computer and then insert the Micro SD card slot.

## **Battery Charging**


1. Connect the computer or the power adapter can be charged.
2. Connect to the car charger can be charged in the car.

## **Indicator light**


Working LED light: Blue light

Charging LED light: Red light, flash red when in charging, and keep constant red when charging full.

## **Video Mode**

1. To record video, verify the camera is in Video mode.
2. If the video icon displays “” on screen, press the OK Button to start video recording accompanied with the blue light flashing.
3. Press OK Button again to stop the video, the blue light will stop flashing and emit a beep sound.

## **Photo Mode**

1. To take photo, verify the camera is in Photo Mode.
2. If the photo icon “” displays on screen, press OK Button to take photos.

## **Back & Front Screen Switching**

Long press Down Button, Back screen and Front screen can be switched to the video and photo, the back screen goes off after switching the front screen display, and the front screen goes off after switching the back screen display.

## Connect PC

Connect camera to PC and turn on camera, screen will display 3 mode: USB Mode, PC Camera, Charging Mode.  
Press up and down button to choose the mode you desire.

USB Mode: Press OK Button or Click to enter this mode for playback or download the videos and photos.

PC Camera: Press OK Button or Click to work as PC camera

Charging Mode: Press OK Button or Click for charging.

## Install APP and use of the WIFI

Before using WIFI function, please install “XDV ” APP program on the smart phone:

1. Scan below QR code to download APP or search “XDV ”.
2. Android smart phone need to download it on Google play store, IOS smart phone need to download it on Apple APP store.



**iOS**



**Android**



## Parameter

Dimension	4.61cm(H) x 6.59cm(W) x 2.64cm(D)
LCD	2.0" touch IPS +1.3" IPS Screen
LENS	160 degree wide Angle lens
Language	English/German/French/Spanish/Italian/ Traditional Chinese/Simplified Chinese/ Japanese/Russian/Korean/Polish/Nederlanse /Portuguese/Thai
Video	4K30FPS,2.7K30FPS,1080P60/30FPS, 720P120/60/30FPS
Video format	MP4
Compression format	H.264
Photo	20M/16M/12M/8M/5M/2M
Memory	Micro SD Card up to 64GB
Video mode	Video/ Slowly/ Loop / Lapse
Picture mode	Photo/ Auto / Timer/Drama Shot
Wi-Fi	Support
Light source frequency	Auto/50Hz/60Hz
USB	USB 2.0
Power	5V 1A
Battery	1000mAh
Video time	About 100 mins

## 12 Month Warranty:

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

### MADE IN CHINA

#### CUSTOMER SERVICE:

**KMART AU:** 1800 124 125

**KMART NZ:** 0800 945 995

**TARGET AU:** 1300 753 567

