



Instruction manual

K: 43-598-687 | T: 71-412-337

Model No.: 204981

LED Disco Ball

Instructions:

- 1.Please read this product manual carefully.
- 2.Read all warnings and follow all instructions in this product manual.
- 3.Use only a microfiber and dry cloth for cleaning the product.
- 4.Operate carefully to not cause any damage by dropping or physical shocking it.
- 5.Do not leave the product in excessive heat,high temperatures can cause the product to malfunction.
- 6.The light source of this luminaire is not replaceable.
- 7.When the light source reaches its end of life, the whole luminaire shall be replaced.
- 8.For indoor use only.
- 9.Supplied cable is only suitable for use with K: 43-598-687 | T: 71-412-337 led disco ball product.

1.Production Specification

USB Input Power: DC 5V 1A

Power supply mode: USB plug

2.Accessories Quantities:

USB Cable x1, Disco ball light x1

3.Connecting the light:

- 1.Plug the USB cable into a free USB port or USB wall changer with 5V 1A output.
- 2.You can turn on/off the light by the switch.
- 3.You can hang the handle on a hook or put on the desk (Installation pack is not included).
- 4.You can adjust the lamp head angle as you want.

