



# Bluetooth® Portable Party Speaker with Lights Operating Instructions




**Please read user manual carefully before use and retain for future use**

Includes:

- › Bluetooth® party speaker x 1
- › wired microphone x 1
- › 3.5mm aux-in cable x 1
- › micro USB charging cable x 1
- › user manual x 1





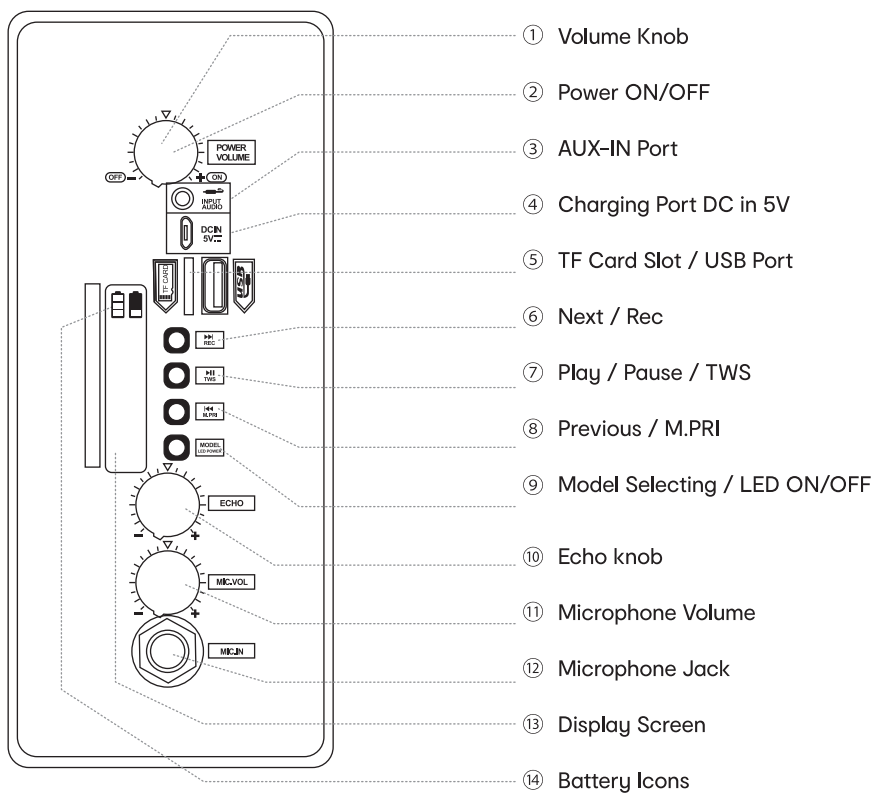







Function overview:



How to use this Speaker


Function Operation

Pause	Press  button
Play	Press  button
Next Track	Press  button to skip the track
Recording	Press and hold  (Please insert USB drive/TF card before using)
Previous Track	Press  M.PRI button to skip the track
Volume Up/Down	Turn  volume knob
Power ON/OFF	Switch  power knob
LED ON/OFF	Press and hold  button
Microphone ECHO Up/Down	Turn  ECHO volume knob
Microphone Volume Up/Down	Turn  Mic volume knob

### Bluetooth Pairing:

- › Speaker enters Bluetooth® pairing mode by default when switched on, ⑬ Display Screen flashes **bLUE**, indicating it is ready to pair with a Bluetooth device.
- › In the Bluetooth menu on the media device, search for **anko43598731** and connect.
- › You will hear a prompt sound once the speaker is connected successfully. **bLUE** shows via ⑬ Display Screen




### AUX in Mode:

- › Press ⑨  to choose **AUX-IN** mode then display screen will show **AUX**, use a 3.5mm AUX-IN cable to connect your device. Choose music from your media device and play.
- › Adjust ① Volume Knob to increase/decrease volume.

### USB Drive Mode:

- › Insert USB drive (not included, up to 32GB) into ⑤ USB port. It will play audio track automatically and shows <sup>USB</sup> :23 on display screen.
- › Press ⑥  button for next track, press ⑧  button for previous track. Adjust ① Volume Knob to increase/decrease volume.



### TF Card Mode:

- › Insert TF card (not included, up to 64GB) into ⑤ TF card slot. It will play audio track automatically and shows <sup>TF</sup> :23 on display screen.
- › Press ⑥  button for next track, press ⑧  button for previous track. Adjust ① Volume Knob to increase/decrease volume.

### Microphone Function:



- › Insert the wired microphone into ⑫ Microphone Jack. Switch on and start using the microphone.

### Recording Function:



- › Insert USB drive or TF card (not included) to respective port and plug in wired microphone to ⑫ Microphone Jack.
- › Press and hold ⑥  button, music or sound track from your USB drive or TF card will stop then shows **REC** on display screen, you can start via the microphone. Press and hold ⑥  button to end the recording.

*Note: Recorded soundtrack will be saved to USB drive or TF card as MP3 file in a folder named "RECORD". If both USB and TF are inserted to respective port, recorded soundtrack will be saved to USB drive.*

### M.PRI (Microphone Priority) Function:

- › Music sound **OFF** when you speak or sing into the microphone, music turns back **ON** when idle.
- › Under Bluetooth/USB drive/TF card mode, press and hold ⑧  button to activate M.PRI function and it will show **OPEN** on display screen. Press and hold ⑧  button to cancel M.PRI function and it will Show **OFF** on display screen.


### TWS Mode:

- › Switch both speakers **ON**, then select **BT mode**. Press and hold ⑦  button on either speaker to enter TWS Pairing.
- › You can hear voice prompt when TWS pairing is successful.
- › Press and hold ⑦  button to cancel TWS pairing.

## LED Light ON/OFF:

- › Press and hold ⑨ MODEL  
LED POWER to turn ON/OFF LED light.

## Charging:

- › This speaker is powered by a rechargeable battery. Please use provided micro-USB cable for charging.
- › Plug the micro-USB cable end to the unit and the other USB A end in to a wall charger or other 5V charging devices.
- › When charging, ⑭ the left and right battery icons flash alternately.
- › When fully charged, the left battery icon  stays ON.

## Specifications:

**Bluetooth Pairing Name:** anko43598731

**Version:** V5.3 Multimedia Bluetooth Chipset

**Working Distance:** 10 Metres in open area

**Speaker Power Output:** 20W

**Driver Size:** 8" X 1 + 1" X 1

**Powered by rechargeable battery**

## 12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations for instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Services Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.



**WARNING** Do not dispose of unit in fire or water. › Never attempt to disassemble and reassemble. › Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. › Check with your local authority for recycle advice. › Keep your device and all accessories out of the reach of children and animals. › Small parts may cause choking or serious injury if swallowed. › Avoid exposing your device to very cold or very hot temperatures (below 0 °C or above 45 °C). › Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. › Do not allow your device to get wet—liquids can cause serious damage. › Do not handle your device with wet hands.

**MADE IN CHINA**

### CUSTOMER SERVICE:

**KMART AU:** 1800 124 125

**KMART NZ:** 0800 945 995

**TARGET AU:** 1300 753 567