 


anko

Bluetooth Tripod Party Speaker with RGB
User Manual
K: 43598748
Model: 43430888

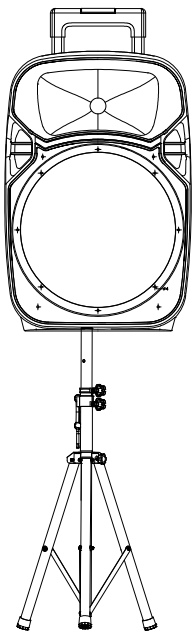

Please read all instructions carefully and keep for future use.

Warning:

1. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
2. Leave a minimum distance of 100cm around the speaker for sufficient ventilation.
3. The ventilation should not be impeded by covering the ventilation opening.
4. keep device away from flames and other heat sources.
5. When the mains plug or and appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- 6.Working temperature:-10 C~+45 C .
- 7.The use of apparatus in moderate climates.
- 8.Do not use this apparatus near the water.

 
 
Battery Information:

- 1.Disposal of this product, and the battery should be in accordance with local government requirements.
- 2.Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- 3.Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
- 4.Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- 5.Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- 6.A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- 7.Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- 8.The internal battery is non-user replaceable.

Product features:


- 3 lighting effects .
- Bluetooth version 5.0, compatible with audio devices with Bluetooth function, as MP3/4, mobile, computer, iPad.
- Built-in rechargeable lithium battery

Button and interface:

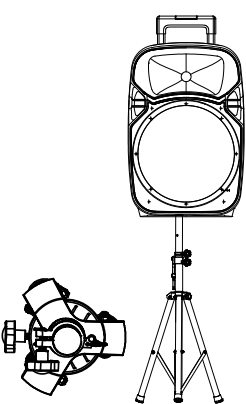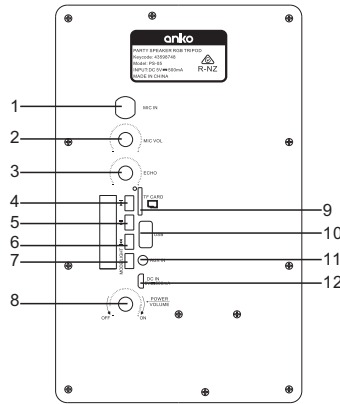

- 1.Mic Input : Insert the wired microphone.
- 2.Mic Volume : Microphone volume adjustment knob.
- 3.Echo Volume : Echo volume adjustment knob.
- 4.Next Key : Press for next track in BT/USB sources, or to goto CH+ in FM source.
- 5.Play/Pause Key : Short press for play or pause the track in USB or BT modes. Long press to turn on TWS pairing function in BT mode.
- 6.Previous Key : Press for previous track in USB or BT mode, or to goto CH- in FM mode.
- 7.MODE/LIGHT Key : Short press to change the modes, long press to change the light effects.
- 8.POWER/VOLUME Knob : Power ON/OFF Knob.
- 9.TF Card Input : Insert the TF Card to play the tracks.
- 10.USB Input : Insert the USB driver to play the tracks.
- 11.Aux Input: Insert the 3.5 mm cable.
- 12.DC Input

 Speaker and Tripod

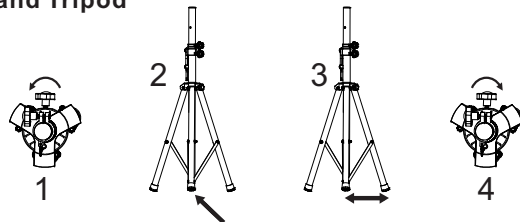


Unfolding the Tripod

- 1.Turn the thumb screw handle on the tripod base counterclockwise until the tripod is able to open.
- 2.Holding the center column firmly in one hand, grip and carefully pull one of the legs outward until the tripod begins to unfold, and the center column sides up.
- 3.Push the center column up until the tripod is fully opened and the center column cannot be pushed up any more.
- 4.Turn the thumb screw handle clockwise until tight.

Adjusting the Tripod's Height

- 1.Turn the two thumb screw handle on the upper part of the tripods center column counterclockwise until loose.
- 2.Raise or lower the adjustable center rod to the desired height, and insert the pin to fix the height.
- 3.Turn the thumb screw handle clockwise until tight to screw.

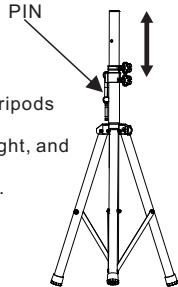

Mounting the Speaker

- 1.Unfold the tripod and adjust to the desired height.
- 2.Mount the hole on the bottom of the speaker once the rod of the tripod and turn the thumb screw handle on the speaker clockwise until tight to screw the speaker.

NOTE:

- 1.Please use and place the tripod on a flat ground to avoid unbalanced placement.
- 2.When the speaker and the tripod are used together, please ensure tighten all knob screws from both.
- 3.Please don't place the speakers with different mounting hole to the tripod, the maximum diameter of the speaker's mounting hole is 3.5cm, which may cause place unstable and product fall down.
- 4.The Tripod stand height up to 120CM, recommend to use for 0.8M, too high may cause fall down.
- 5.Please take care of the children not to touch or play with the tripod to prevent accidentally push down.

Powering ON/OFF

- 1.Make sure that the speaker has been charged.
- 2.Turn the [POWER/VOLUME] knob clockwise until it clicks to power ON.
The speaker will enter Bluetooth pairing mode.
- 3.The speaker may automatically re-pair to any nearby, previously paired device.
- 4.Turn the [POWER/VOLUME] knob counterclockwise until it clicks to power OFF.

Charging the Speaker

The speaker comes with a built-in rechargeable battery, follow the below steps to charge it:

- 1.Plug the end of USB charging cable (included) with USB charger (not included) to the DC 5V input slot, another end plug into a wall outlet to start charge.
- 2.The battery indicator will show RED on the back and turn off when fully charged.
- 3.When the speaker battery is in lower power, a DIDIDI tone will be heard indicating that need charge.

Changing Function Modes

- 1.Press the [MODE/LIGHT] button to switch function modes.
- 2.The LED screen of the speaker will indicate the mode.

Note: You must have a micro TF card or USB device inserted or AUX cable connected to switch to these modes.

Adjusting Volume & Playback

- 1.Adjust volume with the [POWER/VOLUME] knob or the controls on a connected device.
- 2.Press the [►►] and [◄◄] buttons of the speaker to switch the tracks in Bluetooth/ USB mode or stations in FM mode .
- 3.Press the [►||] button to pause and resume playback in Bluetooth/USB mode.

Switching the Speaker Light Effects

- 1.The LED light effect will automatically turn on when the speaker is powered on.
- 2.Long press the [MODE/LIGHT] button on the back of the speaker to switch LED light effects and turn the lights off.

Using the FM Radio(FM Antenna cable the same as AUX cable,included)

- 1.Power on the speaker and switch to FM mode. The LED screen will display the current FM frequency.
- 2.Insert the FM/AUX cable into the AUX jack.
- 3.Long press the [►||] button to start scanning and saving available stations. The LED screen will show scanning progress.
- 4.Press the [►►] and [◄◄] buttons to the switch to the saved stations.

Connecting to an AUX Device

Insert one connector of 3.5mm AUX cable (included) into the 3.5mm AUX input jack on the back of the speaker. Insert the other connector into the headphone jack or audio output jack of your media playing device. The LED screen will display the word "AUH".

In AUX mode, all playback will be controlled by your connect device.

Connecting with Bluetooth

- 1.Power on the speaker. The LED screen will display the word "BLUE."
- 2.Open the bluetooth on your mobile device and search Bluetooth name 43598748 to pair.
- 3.In Bluetooth mode, playback and volume can be controlled by your paired device or the controls on the back of the speaker.

TWS Connecting

*This speaker supports TWS pairing function, please buy two same speaker to enjoy this function.

- 1.Long press [►||] button on two speakers to turn on the TWS pairing function, there is a DI sound from the speaker and "t-07 " will short display on the screen.
 - 2.The TWS will pair automatically once both speakers turn on the TWS function.
 - 3.Turn the volume knob on the back panel of any speaker increase or decrease the music volume.
- * Please Adjust two speakers' volume level at the same level to avoid the intermittent sound during the playing.
- 4.If not using the TWS function, please long press [►||] to disconnected TWS.

Connecting to Wired Microphone



Insert 6.35mm wired microphone, and use control knob to adjust the sound level.



When playing with the wired microphone, please use MIC Volume knob and Echo volume knob to adjust the volume and echo effect of microphone.

Product Specification

Charging input rating: 5V 500mA
Charging time: 5 Hours
Playback time at 50% volume: 3Hours
Power: 15W
Speaker: 12 Inch
FM Radio: 87.5-108MHZ
AUX In: 3.5mm
Microphone Input: 6.35mm

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, inc., and any use of such marks by KMART AUSTRALIA is under licence.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.
This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us