

anko

RETRO KARAOKE SET



User Manual




K: 43-598-847 | T: 71-413-006
MODEL: EBA0-240034A

Includes:

- › Karaoke Speaker
- › 2 Microphones
- › USB-A to USB-C Charging Cable
- › User Manual

Country of origin: CHINA

Function overview:

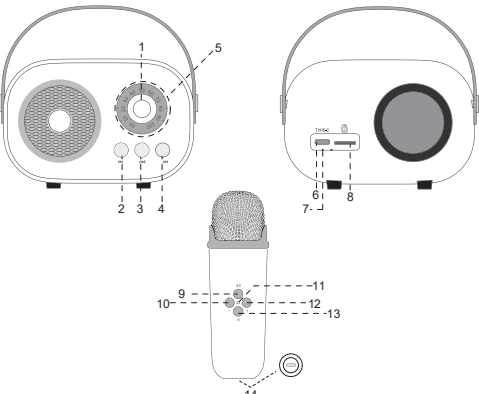

- | | |
|-------------------------------|-------------------------|
| 1. Volume Adjust | 8. TF Card Input |
| 2. Previous Song | 9. Sound Effect |
| 3. Power ON/OFF
Play/Pause | 10. Volume Down |
| 4. Next Song | 11. Indicator Light |
| 5. Bluetooth Indicator Light | 12. Volume Up |
| 6. USB-C Charging Port | 13. Power ON/OFF |
| 7. Charging Indicator Light | 14. USB-C Charging Port |

How to use this speaker

► Function Operation — Speaker

Power ON/OFF Long press button 3 seconds **Play/Pause** Short press button

Previous Song Click button to skip the track to skip the track **Next Song** Click button to skip the track to skip the track

Volume Adjust The knob from left to right corresponds to the volume from low to high

► Function Operation — Wireless Microphones

Power ON/OFF Long press button 3 seconds **Sound Effect** Click button to change sound effect

Volume Down Click button to decrease the microphone volume **Volume Up** Click button to decrease the microphone volume

Specifications:

Model no: EBA0-240034A	Output: RMS 5W (THD≤10%)
Version: Bluetooth V5.3	Charging voltage: DC=5V
Working distance: 10 Meters	Battery capacity: Speaker 3.7V 1000mAh Microphone 3.7V 500mAh
Play files type MP3/WAV	Charging time: Speaker Approx 2 hours Microphone Approx 1.5 hours
Product size Speaker size 114*61*76mm Microphone size 40*40*124mm	Working time: Speaker Approx 4-5 hours(80% volumn) Microphone Approx 20-25 hours(80% volumn)

Power On Devices

- › Press and hold speaker button for 3 seconds to turn on the speaker, its blue indicator light will flash. The speaker will power on and enter Bluetooth mode automatically. If no Bluetooth device is connected within 5 minutes, the speaker will automatically shut down with a prompt tone.
- › Press and hold microphone button for 3 seconds to turn on the microphone(s), its blue indicator light will flash, and will automatically pair with speaker. When connected with speaker, microphone's indicator will stay in blue. If speaker is not connected within 10 minutes, microphone will automatically shut down with a prompt tone. (Two wireless microphones operate in the same way)

Bluetooth Mode

- › Once the speaker is powered on, and the speaker automatically enters Bluetooth mode, the indicator light will flash.
- › Search for "anko43598847" (Bluetooth name) and connect from the Bluetooth menu on the source device that has Bluetooth turned on.
- › Once the speaker is successfully paired and connected, the indicator light will stay on in blue.
- › When the device is turned on again, it will automatically reconnect to your media device via Bluetooth as it did last time.

Wireless Microphone Operation

Sound Effect

Click to change sound effect in sequence (total of 6 modes):
KTV Mode—Original Sound Mode—Male Voice Mode—Female Voice Mode—Childlike Voice Mode—Magical Sound Mode.
When Click , microphone's indicator light will flash one time.

Mute and restore the Original Vocal

Click to mute the original vocal when music is playing and the microphone's indicator light will flash once. To restore the original vocal, press this button again, and the indicator light will flash once more.

Volume adjustment

Volume Up Click once to increase the volume by one level, with the indicator light flashing once (total of 10 levels).
Volume Down Click once to decrease the volume by one level, with indicator light flashing once (total of 10 levels).

*When the volume is turned up to the maximum or down to the minimum, there will be a prompt tone.

Charging

- › This Speaker and microphone(s) are powered by rechargeable Lithium battery. Please use provided USB-A to USB-C charging cable (Plug the USB-C end into the device's charging port and the other USB-A end into a charger with a minimum output of 5V/1A). The indicator light of speaker or microphone(s) will turn red while charging and will turn off when fully charged.

Warning/Cautions:

- replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types);
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; and
- a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Operating Environment & Storage Environment

- › Operating environment
Temperature: -5 °C~45 °C
- › Storage environment
Temperature: -20 °C~60 °C

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.



12 month warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Statement

- This product shall not be connected to power supply source exceeding PS1 (5V d.c. 1A).
- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- The apparatus is only suitable for mounting at height < 2m.
- The marking located on the bottom of the apparatus.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mildura Vic 3700 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic. 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us