



## Instruction manual

### MISTING FAN ASSORTED

K: 43598977 | T: 71413440

Model No.: JLR-78076

#### Safety instructions:

Please read all safety instructions warnings carefully before using this product.  
Improper use of this product may result in damage to this or attached products.

1. Use only with water.
2. Do not use in moist or underwater conditions.
3. Do not use in conditions near heater or high temperature service.
4. Do not use in conditions with direct and strong sunlight.
5. Do not use chemical solvents when cleaning this product.
6. Keep fan away from hair and jewellery.
7. The fan is not a toy, keep away from children.
8. Do not mix new batteries with old ones.
9. Always turn off when not in use.
10. Remove water and ice when not in use.
11. Remove batteries for storage. Dry the bottle before storage.
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

#### Product Parameters:

Power Supply: 2 X 1.5V AA batteries (not included)

Water Tank Capacity: 300 mL

Fan Blade Diameter: 7 cm

Fan Head Diameter: 9.5 cm

Product Size: 9.5\*27.5\*7.0 cm

Product Weight: 141 g

#### Product Details:

1. On /Off button (rear of fan head)
2. Battery Compartment (rear of fan head)
3. Water Tank
4. Water tank cover
5. Spray Control Lever



**Use Instructions:**

1. Unscrew batteries compartment ② to insert batteries (2 AA batteries).
2. Once batteries have been placed and the compartment well closed, turn the fan upside-down.
3. Open the tank cover ④ and fill in water.
4. Close the tank cover ④ before starting to use the fan.
5. Press on/off button ① once to turn on the fan, press again to turn off it.
6. Press the spray control lever ⑤ to spray water.

**12 Month Warranty**

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

**MADE IN CHINA**

**CUSTOMER SERVICE:**

**KMART AU:** 1800 124 125

**KMART NZ:** 0800 945 995

**TARGET AU:** 1300 753 567