

anko

Gingerbread Cat Scratcher House



Contents

A



B



C



A. Bottom & Side paper x 1 pc	B. Paper Scratcher x 1 pc	C. Top paper x 1 pc
-------------------------------	---------------------------	---------------------

Assembly Instructions

Step 1.

Open the bottoms and sides of paper A, then connect the corners by using the cardboard tabs. Refer to the below images:



Don't forget to tuck the tabs in along the entrance holes as per below image:



Step 2.

Place the paper scratcher part B into the bottom of your assembled structure:



Step 3.

Connect the top paper C to your assembled structure using the cardboard tabs as shown below:



WARNING: Pet toy – Not intended for children.

It is the responsibility of the pet owner if this toy is suitable for their pet's style of play.

No pet toy is indestructible and can be damaged during play.

For your pet's safety, inspect regularly and remove if damaged.

Always supervise your pet during play.