

Nursery Clothes Rack


Instruction Manual



MAXIMUM LOAD WEIGHT
OF HANGING BAR



MAXIMUM LOAD WEIGHT
OF SHELF

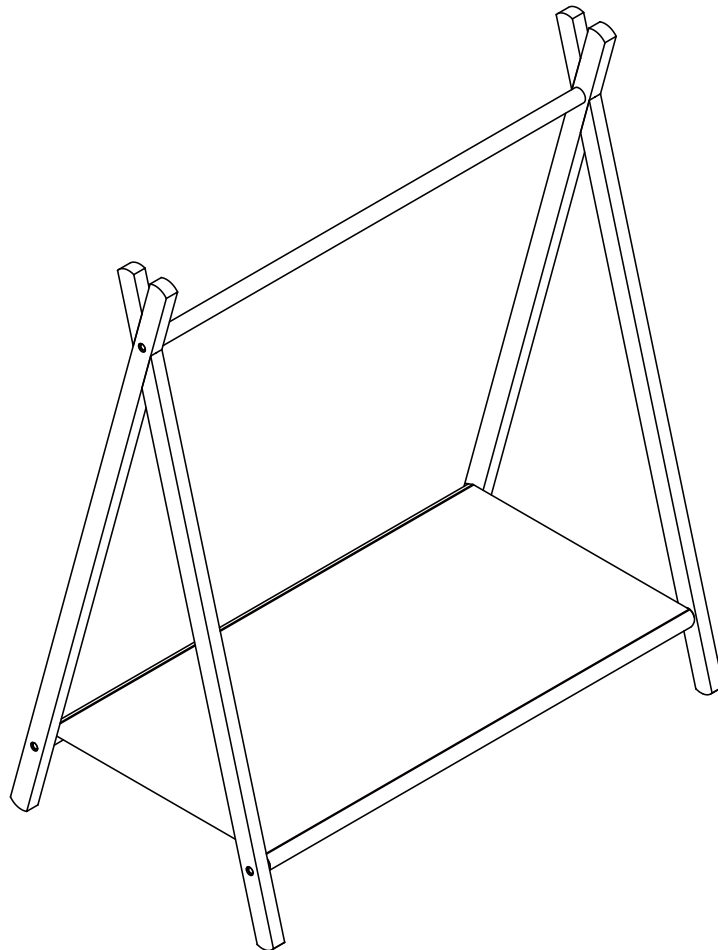

The photos and illustrations shown in this instruction manual are generic.
The manufacturer reserves the right to change any specification or feature without prior notice.

IMPORTANT: KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

Read all instructions BEFORE assembly and USE of product.



 
IMPORTANT! RETAIN FOR FUTURE REFERENCE PLEASE READ CAREFULLY

NURSERY CLOTHES RACK

Instruction Manual

Parts list

A x 6
Φ5X65mm
Connecting bolt

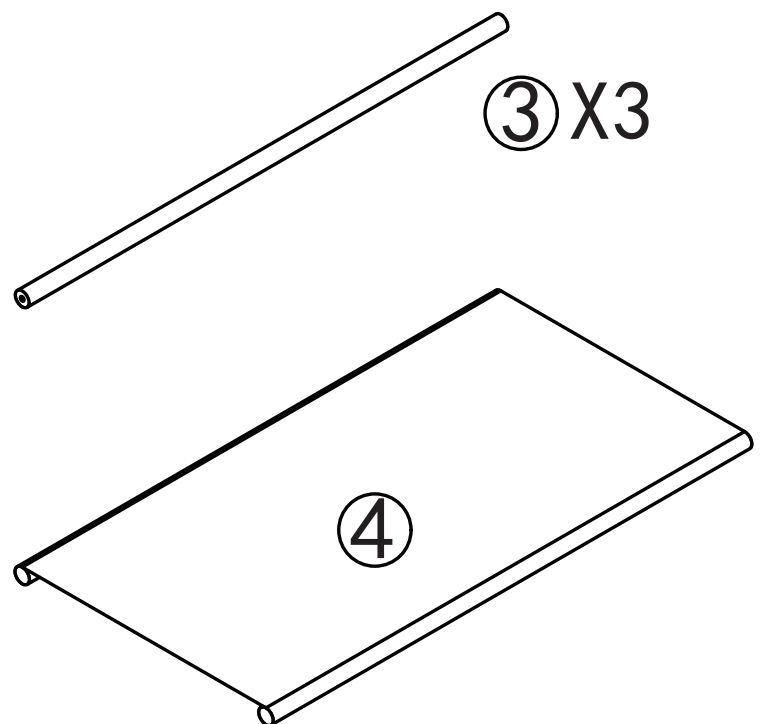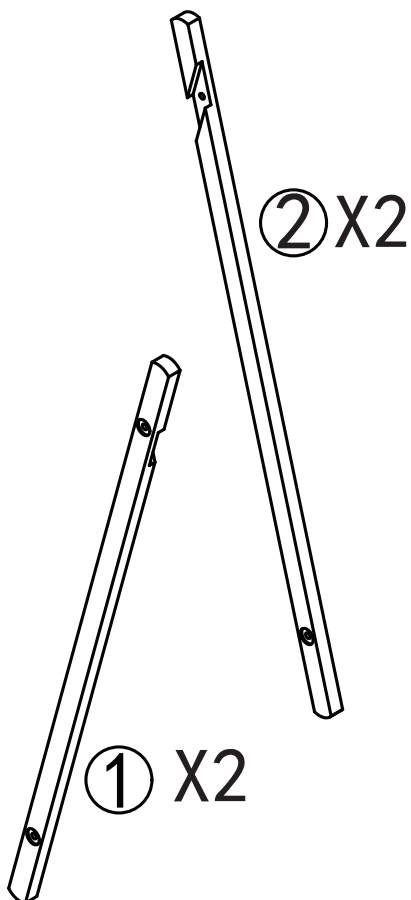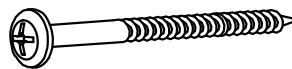

Adult assembly required.

A 3D perspective diagram of a truss structure. The structure consists of several members: two vertical legs (labeled 1), two diagonal bracing members (labeled 2), and two horizontal base members (labeled 3). The members are connected at joints. Five fasteners, labeled 'A', are shown being inserted into the joints. Dashed lines indicate the path of the fasteners through the members. The fasteners are positioned at the top and bottom joints of the structure.

WARNING!

- Adult assembly required.
- Read all the instructions before assembly and use of the product.
- Take care when unpacking and during assembly.
- Dispose of all packing materials carefully after assembly.
- Regularly check that all fittings remain tight. Tighten if required.
- Inspect the product before assembly and periodically during use. Never use this product if there are any loose or missing fasteners, joints or broken parts.
- Be aware of the risk of open fires and other sources of strong heat, such as electric bar fires, gas fires, etc., in the near vicinity of this product.
- For indoor use only. Always use this product on a flat level floor.
- Any additional or replacement parts should only be obtained from the manufacturer or distributor.
- Never substitute parts.
- This item is not a toy. Do not allow children to play with it.

Care and maintenance:

- Wipe the wooden frame and shelf with a soft, damp cloth if required and dry thoroughly.
- Do not soak, submerge, or expose wooden components to excessive moisture or direct sunlight.
- Do not use abrasive cleaners, bleach, or harsh chemicals, as these may damage the wood or finishes.
- Regularly inspect the structure for signs of wear, damage, or splinters. Discontinue use if any component is compromised.
- Store in a dry, well-ventilated area when not in use.
- When moving the nursery clothes rack, always lift and place in position. Do not drag the nursery clothes rack as damage may result.

IMAGES/ DRAWINGS IN THE MANUAL ARE FOR VISUAL PURPOSES ONLY. ACTUAL PRODUCT MAY VARY SLIGHTLY.

K: 43-602-988 | T: 71-442-068

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567