anko

14' Inflatable Projector Screen

Instruction Manual K: 43603565 | T: 71449302 Model: JLR-80849





Packing List:

1 x 180W Blower 2 × Carry Bags 1 × User Manual

1 × Fastening Rope 6 × Ground Stakes 6 × Tie-Down Ropes

Please read this manual carefully before use and retain it for future reference.

▲ CAUTION

ELECTRICALLY OPERATED PRODUCT

This product must not be operated by individuals under 18 years of age. As with all electrical products, proper precautions must be taken during handling and use to prevent electric shock.

Blower Rating: 220-240V~50Hz,180W

⚠ WARNING

Failure to follow all safety and set-up instructions may result in serious injury or property damage. Read all warnings, set-up instructions, and the user manual thoroughly before use

- > This appliance is **not intended for use by individuals with reduced** physical, sensory, or mental capabilities, or by those lacking experience and knowledge, unless they are supervised or instructed someone responsible for their so
- Children must be supervised to ensure they do not play with the
- If the power supply cord is damaged, it must be replaced by the service agent, or similarly qualified personnel to
- > Do not use during windy conditions. Sudden gusts may cause the product to lift or become unstable.

 Immediately cease use and unplug the blower during any inclement
- Set-up must be performed by adults only (18+).
- Never leave children unattended near this product.
 Children must not play on or near the projection screen or the electric
- Ensure at least 3 meters (10 feet) of clearance on all sides of the
- projection screen.
 Avoid overhead obstructions. Do not install near or under power
- > Follow all anchoring instructions carefully. Anchoring must always be completed by adults.
- Assess ground conditions before anchoring. Soft or unstable soil may reduce anchoring effectiveness.

Ensure product is thoroughly dry before storing. **Do not store while**

- damp.For residential use only. Not suitable for rental or public/commercial
- use.

 Not intended for permanent installation or continuous operation.

 Do not place near open flames, heaters, or smoking materials.

 This is not a bounce house. Do not allow children to operate under
- any circumstances.

 Never wrap tethers or ropes around any part of the body.

A IMPORTANT SAFETY NOTICE

These warnings and safety guidelines address many common risks but cannot cover all possible scenarios. Always exercise caution, common sense, and good judgment when using this inflatable product.

Retain these instructions for future reference.

★ Product Care

Before each use, inspect the product for damage or wear. Do not place near gas or electric heaters, fireplaces, candles, or other heat

- Always unplug the blower when not in use. Store in a cool, dry location away from direct sunlight.

 > Keep out of reach of small children.
- Neep out of reach of sinducting.
 Do not hang any objects or ornaments from the power cord or wiring.
 Protect the electric blower and power cord from water exposure. This helps prevent electric shock.
 If ambient temperature drops below -14°C (10°F), the motor may
- temporarily stop. It will resume normal operation at higher
- temperatures.

 Do not attempt to inflate the product in **strong wind conditions. If** it becomes too windy, allow the inflatable to deflate and resume use only when safe.

Product diagram





1 x 180W Blower











6 × Tie-Down Ropes 6 × Ground Stakes

 
Product Specification:

Frame Size: around 14ft Aspect Ratio: 16:9 Viewing Angle: 160 Degree
Frame Material: Oxford Cloth
Screen Material: Polyester, spandex Blower Rating: 220-240V~50Hz,180W

How to inflation

Remove all contents from the packaging and lay them out in a clean, flat

Take out the white projection screen and attach it securely to the inflatable frame. Close all zippers completely. Ensure that the inflatable frame is positioned with the white screen facing upward.

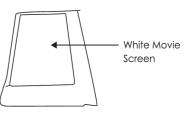

Unpack the air blower and connect the lip tightly to the air intake sleeve on the frame using the attached fastening row Ensure the blower is placed in an open area, free of obstructions that


Plug the power cord into a **suitable power outlet**, and turn the switch to the **"ON"** position to begin inflation.

This may take several minutes. **Ensure that all zippers are fully closed** to allow proper inflation.

Once fully inflated, stand the screen upright carefully, ensuring the



For outdoor use, secure the inflatable frame using ropes and stakes: Pass the ropes through each of the **six anchoring points**, tightly with the provided stakes into stable ground.

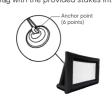




How to Deflate and Store

1. Detach and neatly **fold the white screen**, and store it in a dry, safe Switch the blower power button to the "OFF" position or unplug it from

3. Fold in half 3 times vertically. Open the air-release zipper to begin

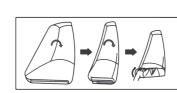

 $4. \ Fasten \ with \ a \ rope \ and \ Place \ in \ carry \ bag. \ Once \ fully \ deflated, \ fold \ the \ inflatable \ vertically \ into \ thirds. \ Secure \ the \ folded \ unit \ with \ a \ rope \ or$ strap and place it into the carry bag for storage.



Storage Tips:

1. Ensure the product is completely dry before storing to prevent mold or material damage.

2. Store in a cool, dry, and well-ventilated location away from direct

Usage tips:

Inspect the blower thoroughly before each use. If any part is

- damaged, repair or replace it before operating.

 Ensure the blower is placed on stable, dry ground. Avoid use in standing water, wet, or excessively dusty areas.

 Confirm that the power supply is stable and meets product specifications. Keep the blower powered on during operation
- This blower is intended for inflating purposes only. Using it for other applications may cause safety hazards or injury.
 Attach the inflation tube without twisting, and securely tie the rope
- around the blower's air outlet port. Ensure the rope is tightly fastened around the blower still outer port. Ensure the rope is tightly tastened around the port lip.

 > Keep children away while the blower is powered. A responsible adult must supervise its operation at all times.

 > Always plug the blower into a grounded outlet and switch it on before

Maintenance & Care

Before Each Use

 \succ Carefully inspect the **blower**, **inflatable frame**, and **screen fabric** for

- any signs of damage, wear, or tears.

 > Ensure all fasteners, cords, and anchoring points are securely attached.

> Check that the **blower's safety screen**, power cord, and plug are in good condition. **Do not operate if any part is damaged.**

Regularly clean the blower's air inlet and fan blades using a soft brush or vacuum. Make sure the blower is turned off and unplugged during

 Do not use pressure washers or submerge the blower in water. Wipe the exterior with a dry or slightly damp cloth. Use only non-toxic and non-flammable cleaning agents.

Projection screen

Cleaning Instructions

Use a vacuum cleaner to remove dust and debris from the screen surface and inflatable frame.
 For light stains, wipe with a mild, non-abrasive cleaning solution and

Gently clean the screen area if needed, avoiding excessive moisture

Do not machine wash or tumble dry any part of the screen or

Drying & Storage

> Do **not** store the product while wet. Make sure both the **blower and** projection screen are completely dry before packing.
Dry all parts within 72 hours after use to prevent mold or mildew

Coil and store the power cord neatly. Avoid twisting, pinching, or placing heavy items on the cord.

 Store the entire product in a cool, dry, and well-ventilated area, away from direct sunlight and hea

▲ Important Notes

> The blower contains sealed bearings and does not require lubrication Operating the blower without it being connected to an inflatable may cause motor damage due to lack of back pressure.
 Unplug the blower when not in use or during maintenance.

Electrical Safety

> Ensure the power supply matches the blower's operational

 When using outdoors, minimize the use of extension cords. If necessary, use only outdoor-rated extension cords and power > Protect power cords from twisting, moisture, heat, chemicals, sharp

edges, and wear. Replace fraged or damaged cords immediately.

> Always unplug the blower before performing cleaning or

> This blower requires back pressure from an attached inflatable to operate correctly. Running it without connection may cause motor damage.

Trouble shooting

Blower Won't Turn On:

> Blower won't turn on: Check that the power switch is "ON." Reset circuit breakers if tripped. Inspect all cords and connections for nage or looseness

Blower starts then stops: Remove any obstructions from inlet/outlet

 Blower vibrates: Check for bent motor shaft or fan blades; straighten or replace if necessary. Clean accumulated dirt or dust.

Scraping noises: Inspect the blower housing for dents or warps.
Ensure nothing contacts the fan blade during operation.

Motor runs but blower does not turn: Inspect motor and shaft for

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and

observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims

for expense incurred in returning this product can be addressed to the espective Customer Service Centre



MADE IN CHINA CUSTOMER SERVICE: KMART AU: 1800 124 125 KMART N7: 0800 945 995

12 Month Warranty

workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights

This warranty will no longer apply where the defect is a result of alteration,

Our goods come with guarantees that cannot be excluded under the Our goods come with guarantees and calinito be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fall to be of acceptable quality and the failure does not amount to a major failure.

