 


# Thermoelectric Cooler and Warmer Instruction Manual

Keycode:43605309

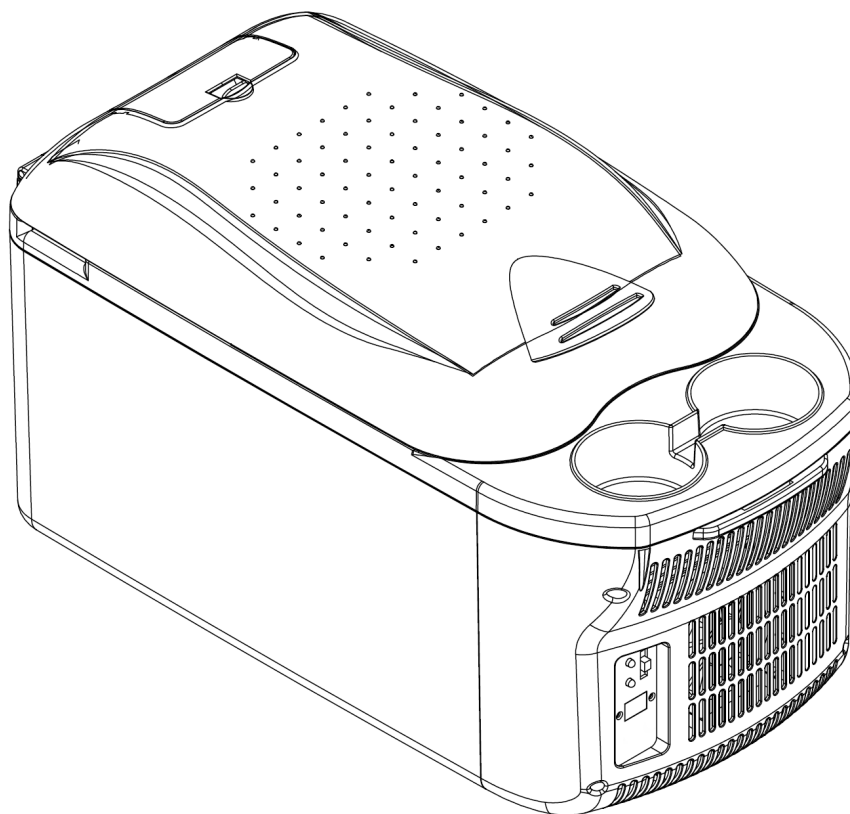

## Characteristics of our products:

Mini Thermoelectric Cooler and Warmer is a compact, lightweight unit ideal for travel

- Perfect for day trips, picnics, lunches or the beach.
- Thermoelectric system cools or heats to temperatures below or above the ambient level.
- Insulated construction helps maintain the contents' temperature—keeping them cool or warm—even after the unit is disconnected from the power source.

Use as a cooler to keep canned and bottled drinks, sandwiches, fruit, and salads fresh and cold—without the need for ice or cold packs. It's also ideal for storing temperature-sensitive medications while traveling.

Use it as a warmer to keep prepackaged or preheated meals, takeout food, soups and stews, leftovers, baby food jars, and baby bottles warm and ready to eat while on the road.


## Performance:

For optimal cooling performance, we recommend placing pre-chilled food and drinks inside the unit.

It may take 2 to 3 hours to cool items from room temperature.


Please note: the cooler/warmer is not designed to heat cold food, but rather to maintain the temperature of hot food. It can keep food warm for several hours.


## Operation Guide:

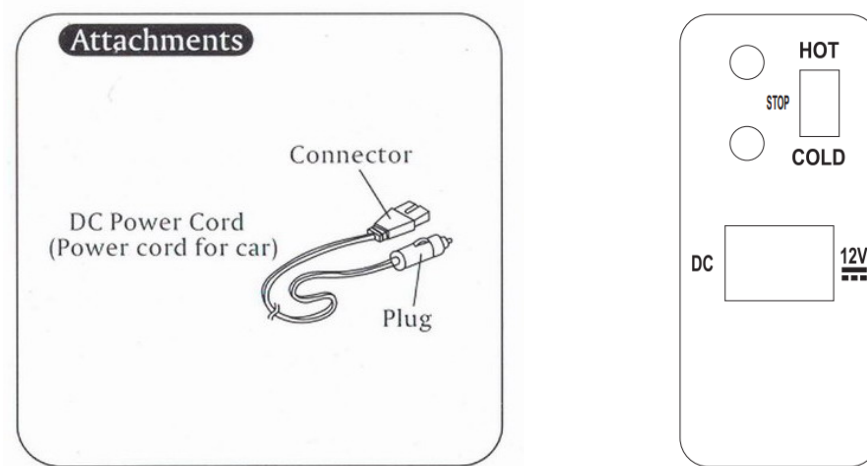

1. Ensure the car engine is running. First, make sure the power switch on the side of the cooler/warmer is set to the STOP position.
2. Connect the DC power cord. Insert the connector of the DC power cord into the DC 12V socket on the control panel of the unit.
3. Plug into the car. Insert the plug of the DC power cord into the car's cigarette lighter socket.
4. Cooling mode: Set the power switch to the COLD position. The green indicator light will turn on, indicating that the unit is in cooling mode.
5. Heating mode: Set the power switch to the HOT position. The red indicator light will turn on, indicating that the unit is in heating mode.

## Attaching the carrying strap:

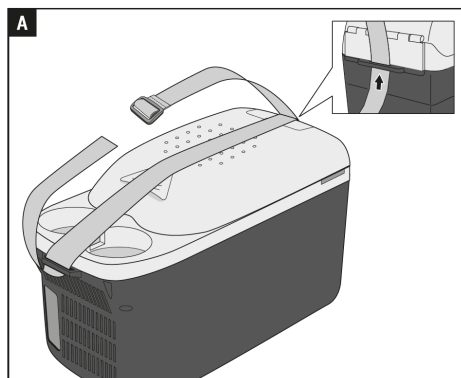

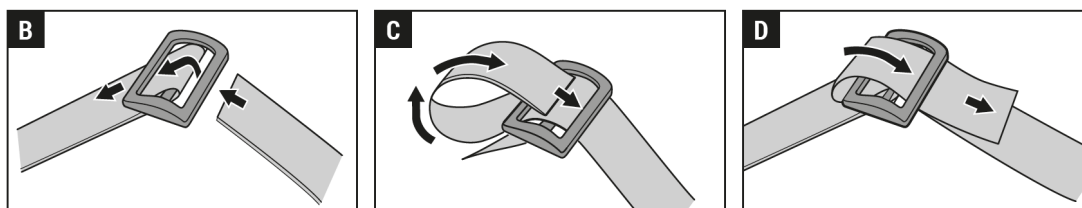

Attach the carrying strap to make it easier to carry.

1. Attach the strap. Pass the release end of the strap through the strap holders located on the front and back of the device (see Fig. A).
2. Adjust the strap. Thread the loose end of the strap through the belt adjuster until it fits securely (see Fig. B–D).

### **Cleaning Tips:**

1. Turn off and unplug. Ensure the cooler/warmer is turned off and unplugged from the power source.
2. Wipe surfaces. Clean the interior and exterior surfaces using a soft, damp cloth.
3. Do not submerge. Never wash the unit directly with water or immerse it in water.
4. Avoid abrasives. Do not use abrasive cleaners or scouring pads, as they may damage the surfaces.

### **Warning and Notice:**

For proper operation, please read the following instructions carefully before using the appliance.

Misuse of the appliance may result in damage, injury, or malfunction.

1. Do not block the fans. Blocking the fans can cause the motor to overheat and may result in a fire. Do not place any objects over the fan openings.
2. Please prevent poor contacts of the socket from heating up, causing broken or even burning.
3. Keep the appliance away from the flammable items and dampness.
4. Do not switch the function from cool to warm directly. Switch to Stop for 30 minutes then change.
5. Do not expose to rain.
6. Children should be supervised to ensure they do not play with the appliance.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.



**MADE IN CHINA**