

2IN1 Thermal Printer & Digital Camera

Instruction Manual

K: 4360673 T: 71480718 Model: JLR-80786



Package contents:

- 1x Thermal printer camera
 - 1x User manual
 - 1x USB A-C cable
 - 1x 32GB TF memory card (pre-installed)
 - 1x Wrist strap
 - 3 x Thermal paper rolls
- Please read carefully before use and retain this manual for future use.

Important Safety Warnings


This product contains a built-in, non-replaceable rechargeable lithium-ion battery. Do not attempt to replace, disassemble, crush, puncture, short-circuit, or incinerate the battery or the device. Do not expose the battery or device to excessive heat, the direct sunlight, or temperatures above 45°C. Do not immerse the device or battery in water or other liquids. Avoid exposing it to open moisture, or high humidity. Do not use or charge the device if it appears damaged (cracked casing, bent connectors, melting, swelling, unusual color, overheating, or deformation). If any of these occur, STOP USING IMMEDIATELY. Place the device in a fireproof container away from flammable materials and contact Customer Service. Do not touch leaking material.

Keep the device and its components away from small children. The battery power ingestion and chemical burn hazards. Charge ONLY using the provided USB-C cable connected to a certified 5V/1A USB power adapter (not included). The power adapter must comply with relevant Australian safety standards. Using incompatible or damaged cables or chargers may cause this electric shock or damage. Do not charge the device near flammable materials. Charge only on a stable, non-flammable surface in a well-ventilated area. Do not leave the device unattended while charging. Disconnect the charger once charging is complete.

The charging indicator light will be red while charging and will turn off when fully charged. A full charge typically takes approximately 2.5-3 hours.

Do not operate the printer while the device is charging. Do not attempt to print if the battery level is critically low. **Before cleaning, ensure the device is disconnected from the charger/power source and powered off.** Clean the exterior surfaces only with a soft, dry cloth. Do not use liquids, solvents, or abrasive cleaners. Regularly inspect the USB cable, charger (if used), and the device itself for any signs of damage (fraying, cracking, deformation). If damage is found, STOP USING IMMEDIATELY and contact Customer Service.

Product Diagram

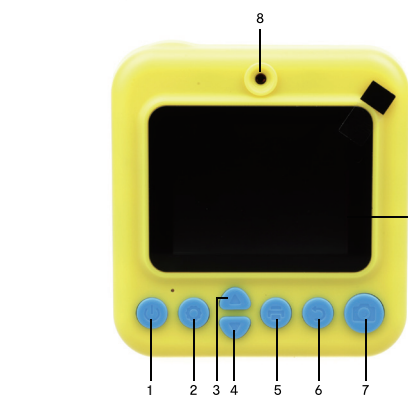


- Power button
- Setting button/left button
- Up button
- Down button
- Instant Print button/Right button
- Back button
- Photo/OK/Play/Pause button
- Speaker
- Front camera
- Paper Exit

Product specifications:

Product size: 8.8cm x 5.5cm x 4.5cm
Screen: 2.4 inches LCD
Camera: Front 0.3MP / Rear 0.3MP
Memory Card: Up to 32GB TF memory card included, up to 64GB TF card (not included)
Video format: AVI
Photo format: .jpg
Music format: .mp3
Battery: 500mAh, 3.7V (Rechargeable lithium-ion, non-replaceable)
Input Rating: 0V-1A
Compatible with Android 4.0, iOS8.0 or later
Works well with: K: 43478002 T: 70254676 3pk thermal camera stickers
K: 4342904 T: 70607563 3pk thermal camera paper
K: 4350479 T: 70454448 1pk thermal camera paper
K: 4350473 T: 70454431 1pk thermal camera stickers
K: 4350527 T: 7040092 3pk Colored thermal printer paper
K: 4352651 T: 7040950 3pk Colored Self-Adhesive thermal print paper

Icons & Buttons Introduction

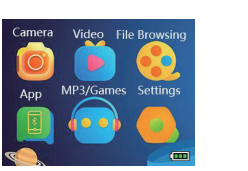

- Button Functions:**
- 1. Power button: Short press: toggle screen on/off; Long press: power device on/off

Settings button/left button

Short press: File Browser; Delete current/all files
Camera/Video: Enter settings
MP3: Open file browser
Camera: Moves left
Convert: Short press: Select shooting mode (burst/time-lapse or effect (filter/frame/sticker))
Long press: Zoom in
MP3: Short press: Previous song
Long press: Increase volume
File Browser: Scroll up
Settings: Scroll up to sub-menu
Camera: Moves left
MP3: Short press: Next song
Long press: Decrease volume
File Browser: Scroll down
Settings: Scroll down sub-menu
Camera: Moves left
MP3: Short press: Toggles instant print ON/OFF in Camera Mode
Camera: Moves left
MP3: Short press: Return main manual

Up button

Short press: Previous song
Long press: Increase volume
File Browser: Scroll up
Settings: Scroll up to sub-menu
Camera: Moves left
MP3: Short press: Next song
Long press: Decrease volume
File Browser: Scroll down
Settings: Scroll down sub-menu
Camera: Moves left
MP3: Short press: Toggles instant print ON/OFF in Camera Mode
Camera: Moves left
MP3: Short press: Return main manual

Down button

Short press: Previous song
Long press: Increase volume
File Browser: Scroll up
Settings: Scroll up to sub-menu
Camera: Moves left
MP3: Short press: Next song
Long press: Decrease volume
File Browser: Scroll down
Settings: Scroll down sub-menu
Camera: Moves left
MP3: Short press: Toggles instant print ON/OFF in Camera Mode
Camera: Moves left
MP3: Short press: Return main manual

Instant Print button/Right button

Short press: Toggles instant print ON/OFF in Camera Mode
Camera: Moves left
MP3: Short press: Return main manual

Back button

Short press: Return main manual

Photo/OK/Play/Pause button

Short press: Take photo (auto-print if enabled)
Long press: Switch front/rear camera
Video: Short press: Start/stop recording
MP3: Short press: Start/stop recording

Speaker

Short press: Take photo (auto-print if enabled)
Long press: Switch front/rear camera
Video: Short press: Start/stop recording
MP3: Short press: Start/stop recording

Front camera

Short press: Take photo (auto-print if enabled)
Long press: Switch front/rear camera
Video: Short press: Start/stop recording
MP3: Short press: Start/stop recording

Paper Exit

Short press: Take photo (auto-print if enabled)
Long press: Switch front/rear camera
Video: Short press: Start/stop recording
MP3: Short press: Start/stop recording

How to Use

Insert memory card

WARNING

CHOKING HAZARD: Memory cards are small parts. Keep away from children under 3 years.
ADULT SUPERVISION REQUIRED during installation.

Initial paper

Check the paper compartment buckles on both sides and open the cover.
Insert the paper roll as shown in the picture, pull out a small portion of the paper, and close the cover.
Long press the power button to turn on the device for use.

Power on/off

Long press the power button to turn the device on or off.
After powering on, the screen will display the main page as shown below. Press the left (L) and right (R) buttons to select the desired mode.

Accessing the settings menu

Press the left (L) button to select the settings menu.
Alternatively, short-press the (Q) button to directly access the settings menu in Camera/Video mode.

Formatting memory card

WARNING: Formatting erases all files. Back up your data first.
All photos and videos will be deleted. Proceed with caution.
Always format a new memory card in the device before initial use. (Otherwise, it may not function properly.)

Print Settings

Print Density: Level 1 (Weakest contrast) to Level 7 (Strongest contrast). Increase/Adjust according to your needs.
Print Mode: Photo Print, Gray Print, Sticker Print, Label Print, Document Print, etc.

How to Print Image

On the Home page of the APP, select "Picture print" to enter the printing process.
After entering "Print picture", you can click "Take a photo" option to take a photo directly/print or click "Photo" to select from your phone's photo album to print.
After entering "Picture processing" to select "Crop" (top right corner) to crop the photo.
After importing the image, you can adjust the size according to your need, and then select (L) in the upper right corner to proceed next step.
After entering the print preview, you can adjust the image density according to your needs (IOS: default medium density is 20, and then select (L) to print (upper right corner)).
The printer will automatically print out images after receiving printing instructions.
On the Home page, you can click (Q) to scan QR and print the content you scanned.

12 Month Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a refund or replacement if the goods are faulty or damaged. We are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

After entering camera mode:

- Frames/stickers/Filter/picture effects / Time-lapse/Burst shooting: short press the (A) / (M) buttons to switch.

In camera mode:

- Press (Q) to take a photo.
- Press (Q) to toggle instant printing (open on screen).
- Press (Q) to access print density/mode settings.
- Press (M) to File Browser to view saved photos/videos.

Additional Controls:

- Switch front/rear camera: Long press (Q).
 - Zoom in: Long press (A) (zoom in) / (M) (zoom out).
- Note: Zoom unavailable in video mode.

Effects & Modes:

- Press (A) / (M) to cycle through:
 - 22 Frames/Stickers
 - 4 Filters
 - 4 Picture Effects
 - Time-Lapse/Burst Mode
- Note: Effects unavailable in video mode.

Video Recording

Enter video mode: Main menu -> Video icon -> Press (Q).

Recording

- Press (Q) to start/stop and save recording.
- Switch camera: Long press (Q) (when not recording).

Warnings:

- Insert memory card before use.
- Max 3 minutes per video (records until card full).
- No zoom/effects during recording.
- Accidental press: Short Pressing (Q) / (M) will also save the video and exit recording.

File Management

Access file browser: Main menu -> File Browser icon -> Press (Q).

Import Songs:

- Remove memory card -> Insert into card reader (sold separately).
- Copy MP3 files to card.
- Reinsert card to device.

Tip:

- Use card reader or USB cable for transfers.
- Do not disconnect during transfer.
- Device has to internal storage (card required).

Puzzle Games

Access games: Main menu -> Game icon -> Press (Q).

Controls:

- Select game: Press (Q) / (M).
- Start game: Press (Q).
- Adjust volume: Long press (A) / (M) / (M) / (M).
- Exit game: Press (M).

MP3 Playback

Access MP3 Mode: Main menu -> Music icon -> Press (Q).

Controls:

- Play/pause: Press (Q).
- Previous/next track: Short Press (A) / (M).
- Adjust volume: Long press (A) / (M) / (M) / (M).
- Supported format: MP3 only.

How to connect Bluetooth printer

Connection method: Enable Bluetooth connection on your mobile and switch on the camera printer.

iOS connection method

- Open the WalkPrint APP and log in to enter "Equipment selection" page. Select the "Photographer Printing Cam" option to enter main page. You can also click the up right corner printer icon to go back to "Equipment selection" page to choose the device you need.
- Select "Profile" on bottom to enter next page and click "My printer" option to enter "Bluetooth list".
- In the "Bluetooth list", select the Bluetooth device named "YH-XXXX", where XXXX can be combination of digits and letters (e.g., "YH-XXXX"). Click to connect and the device can be used after successfully connected.

Android connection method

- Enable Bluetooth connection on your mobile and switch on the camera printer.
- Open the WalkPrint APP and log in to enter "Printer Choose" page. Select the "Photo Printer" option to enter main page. You can also click the up right corner printer icon to go back to "Printer Choose" page to choose the device you need.
- Select "Mini" on bottom to enter next page and click "My printer" option to enter "Bluetooth list".
- In the "Bluetooth list", select the Bluetooth device named "YH-XXXX", where XXXX can be combination of digits and letters (e.g., "YH-XXXX"). Click to connect and the device can be used after successfully connected.
- Kind reminder: Bluetooth must be used, otherwise the printer will not work.

How to use the New Note Function

Apple phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Android phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Apple phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Android phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Apple phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Android phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Apple phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Android phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Apple phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Android phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Apple phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Android phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Apple phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Android phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Apple phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Android phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Apple phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Android phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Apple phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Android phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Apple phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Android phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Apple phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Android phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Apple phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Android phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Apple phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Android phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Apple phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Android phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Apple phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L) to print (top right corner). The printer will automatically print out content after receiving printing instructions.

How to use the New Note Function

Android phone interface as shown in the picture: Select to enter the New Note interface to print text messages. Edit and input the text or select more content (e.g., pictures/stickers/more) that needs to be printed, click (L) to next step (upper right corner). After entering the printing "Print preview", you can adjust the font density as needed (IOS: default medium density is 20). Adjust the content density and click (L)