

anko

Instruction Manual



720P MINI PROJECTOR WITH TRIPOD

K: 43-609-932 | T: 71-567-174

Model No: EB500647

MADE IN CHINA

Projector

 
Please read the entire instruction manual before using this product and retain for future use.

Safety

- The projector LES lens is RG2 grade.  
- Do not block or cover any of the air vents. Leave at least 5 cm (2 inches) of free space around the entire product.
- Do not put the product close to sources of heat such as radiators, fan heaters, cookers, candles or other objects that produce heat.
- Avoid using the product near powerful magnetic fields.
- Make sure that the power cable cannot be trodden on, crushed or damaged.
- Keep the product out of the reach of children.
- Unplug the product from the wall socket during thunderstorms or if you are not going to use it for a long period.
- Never insert foreign objects into the product's air vents. The high voltage can cause an electric shock and/or a short circuit.
- Do not use the product in a damp environment such as in a bathroom or a steam-filled kitchen or near a swimming pool.
- Do not pull or carry the product by its power cable. When you are unplugging the product from the wall socket, always pull on the plug and not the cable.
- Only use accessories that are recommended by the manufacturer or retailer.

Product description

What is included:

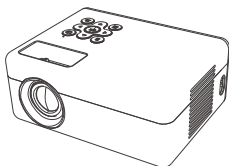


Projector



Remote control






 AC cable



Tripod

   Projector

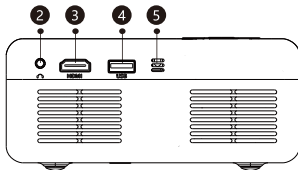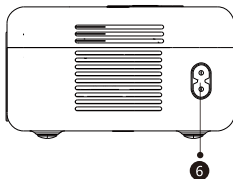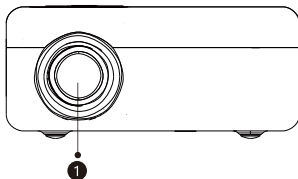


- 1. Lens
- 2. Audio Port

- 3. HDMI Port
- 4. USB Port

- 5. IR Receiver
- 6. Power Jack

 Remote control

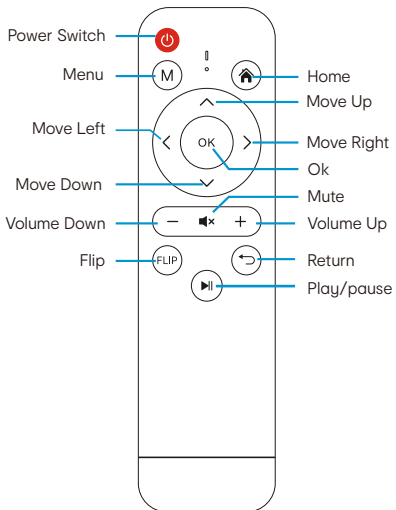

Power: Press to power ON. / Press once to power OFF.

Mute: Press to mute volume.

VOL+ /VOL-: Press to adjust audio level.

Arrows / OK: Press to navigate and confirm selections in Settings and other menus.

 
 
Return/ Exit: Press to exit the projector menu.

FLIP: Press to adjust the projector screen direction.

Home: Press to enter the home menu.

Menu: Press to access projector Settings.

Play/ Pause: Press to play or pause an individual chapter or track.

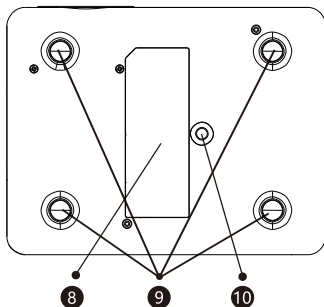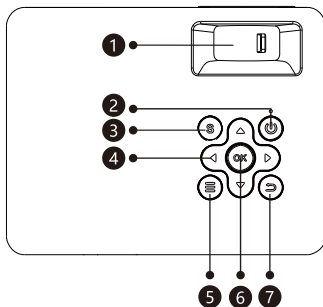

1. Focusing

2. Power Key

3. Source Key

4. Arrow Keys

5. Menu Key

6. Ok Key

7. Return Key

8. Bottom Label

(Remove the cover screws, you can remove the bottom dust cover to clean up the dust)

9. Hanger Fixing Screw Holes

 
(4 Points: Remove the machine foot pads before hoisting)

10. Hole For Stand(1/4 Inch)

Installation

Positioning

Put the projector on a firm, level surface in front of the projection screen. Adjust its position so that it projects the image as close to the center point of the screen as possible – both horizontally and vertically—to make sure that the image is symmetrical and even.

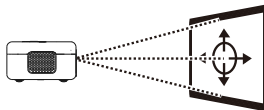

Use the Keystone settings to adjust the image so that it is rectangular and the focus wheel to focus the image correctly.

Note: If you cannot make the image rectangular using the Keystone settings, you must position the projector so that it is straighter in relation to the projection screen

Position the projector at the distance from the screen that gives the image size you want.

Distance from the projection screen	2.16 m	2.68 m	3.17 m
Image size	80 inches	100 inches	120 inches

Connections

Connect the mains adapter to the projector's power input socket and then plug it into a wall socket.

HDMI

Connect the HDMI cable to any device and then to the projector's HDMI input. HDMI port can be used with an HDMI cable with HDMI version 1.4 standard or above.

Headphone socket

Connect a pair of headphones to the 3.5 mm socket. You can also use this socket to connect to an external audio system such as active speakers or amplifiers.

USB

1. Switch off the projector.
2. Insert a USB stick (max 32 GB, max 200 files per folder).
3. Start the projector and press .
4. Select the media type from the homepage to play video or music, or show photos from the USB stick.

Settings menu

Press  and select from one of the following settings:

Picture

This menu allows you to adjust the image settings so that they match the projection area.


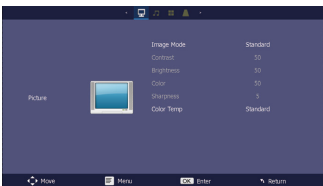 


Image mode - Choose one of the pre-installed modes: Standard, Dynamic or Mild or User (your own mode so that you can adjust the settings manually)

Color Temp - Adjust the image temperature by selecting Standard, Cool or Warm.

Sound

 Sound Mode - Choose from various different settings: Music, Movie, Sports, Standard or User (your own mode that you can adjust the bass and treble manually).

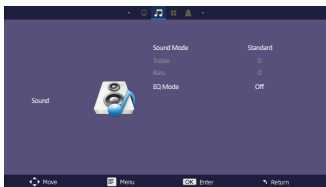

EQ Mode - Click the EQ mode, can turn on/off the EQ mode. After turn on the EQ mode, can choose from Normal, Rock, Pop, Jazz, Classic, Vocal, and Customer (adjust the sound based on your preference).

Options

 
OSD language: can adjust 13 kinds of languages

Flip - Rotate the image, Front table, Front Ceiling, Back table, or Back Ceiling.

Software Upgrade: can upgrade the software version.

Factory Reset - Resets all the projector's settings to the defaults.

Auto Sleep - Set a timer for automatic shut-off.

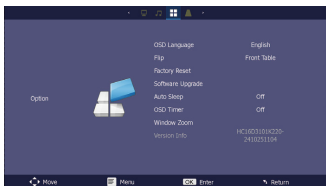

OSD Timer - Set how long the menu will be shown on the display before it closes.

Window Zoom - Adjust the zoom size for the image, can choose from the following formats:

4:3 - Used for older TV formats, would have black edges at the sides in widescreen.

16:9 - Standard for wide screen.

Zoom- or Zoom+ - Adjust the zoom size.

Reset - Reset to default 16:9.

Keystone

 
Adjust the aspect ratio using + and -.

Select Auto for automatic adjustment or

User for manual adjustment. Press Auto

Calibrate to start automatic calibration.

Use Reset to return to the default values.

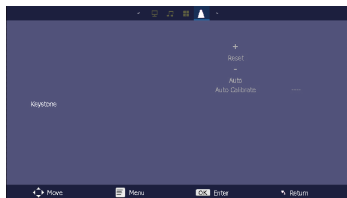

Care and maintenance

 
Use a soft, dry microfibre cloth to wipe dust and dirt from the surface of the projector.

Use a lens brush or air blower to remove dust carefully from the lens.

If there is still dirt on the lens, use a lens cloth and lens cleaning fluid. Wipe the lens dry using gentle, circular movements to avoid scratching it.

Replacing the battery

Remove the battery cover on the remote control and insert two AAA/LR03 batteries (sold separately). Make sure that you insert the batteries in the right direction by following the polarity markings.

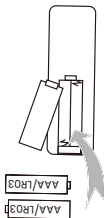

NOTES:

Batteries shall not be exposed to excessive heat such as sunshine, fire.

Be sure that the batteries are installed polarity correctly.

Do not mix old and new batteries.

Only same or equivalent type batteries as recommend are to be used.

Do not dispose of batteries in fire, battery may explode or leak.

Do not try to recharge a battery.

Specifications


Mains adapter	Input AC 100–240 V, 50/60 Hz;
Power input	AC in
Power consumption	38 W
Brightness (ANSI lumens)	80±10% ANSI lumens LED rated life: approx. 20,000+ hours
Optical resolution	1280x720
HDMI video mode	1080p, 1080i, 720p, 576i, 480p and 480i
Colour temperature	6000–8000K
Projection size	40–120 inches Recommended size 50–70 inches
USB and SD card support	Up to 32 GB capacity
Photo Format Supported	JPEG, PNG, JPG, GIF, BMP
Audio Format Supported	MP3, ape, flac, m4a, ogg
Video Format Supported	MPEG1, MPEG2, MPEG4 , MJPEG, dat, mpg, mpeg, mpg, avil, mp4, mov, avi
Noise level	32 dB
Speakers	1 x 2W

Projector Setup

Home Screen

Projector Settings Menu Icon

 Inserted USB Icon

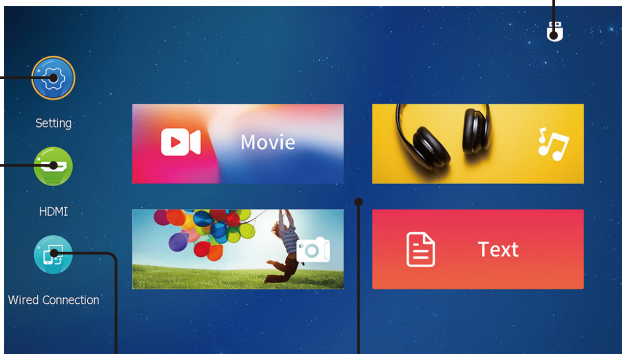

USB Phone Connection Icon

Movie/Music/Photo/Text Icons
(For use with USB Storage Devices)

HDMI Connection Icon

12 Month Warranty:

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

We accept no liability for any errors in the text or images and we reserve the right to make any necessary changes to technical data. If you have technical problems or other questions, please contact our customer service team (see the address details on the back).

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567



