

80mmx90mm

anko

 
 
 
 
Selfie Digital Camera Instruction Manual

K: 43-609-994 | T: 71-557-112

Model No. ZB2025041105

Accessories:

- › 1 x Camera
- › 1 x Charge & data cable
- › 1 x Lanyard
- › 1 x Camera bag
- › 1 x Memory card (32GB included)
- › 1 x Instruction manual

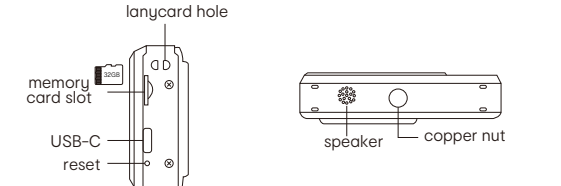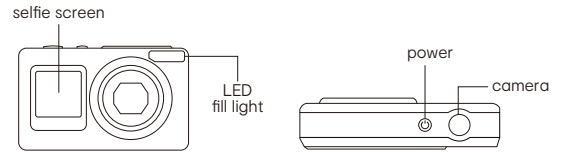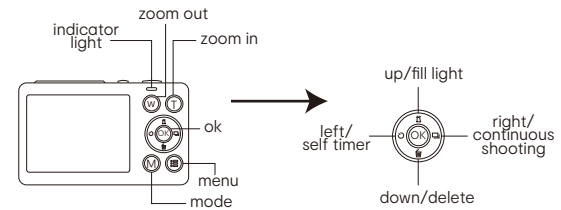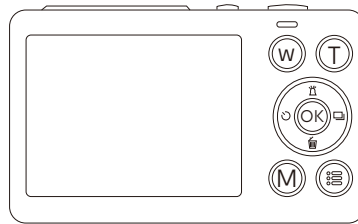

Product Specifications:

1. Product dimensions: 95.5 x 58.5 x 24.5mm
2. Display size: 2.4 inches (back colour screen)
1.3 inches (selfie screen)
3. Input: 5V DC 1A
4. Battery capacity: 800mAh

Operating Instructions:

1. Power on/off:

Press and hold the Power button (⏻) for 3 seconds to turn on/off the camera.

2. Take Photography:

After turning on the camera, half press the Camera button (○) until the focus frame on the screen change to green, then you can press the Camera button (○) to take a photo.

3. Video Recording:

Press the Mode button (Ⓜ) to switch to Video Mode, press the Camera button (○) to start recording the video, and then press the Camera button (○) to end recording.

4. Playback Mode:

Press the Mode button (Ⓜ) to switch to Playback Mode, then press Left (⬅) /Right (➡) Button to select files, press OK Button (Ⓚ) to playback video or photo.

5. Delete Video and Photo:

In Playback Mode, you can press the Left (⬅) /Right Button (➡) to select the files need to delete, and press the Down Button (⬇) to choose "delete current" or "delete all".

6. System settings:

Press the Mode button (Ⓜ) to switch to the System Settings Mode, press the Up (⬆) /Down (⬇) Button to select submenus, then press the OK button (Ⓚ) to confirm, and then press the Mode button (Ⓜ) to exit the system menu.

7. Video and Photo settings:

Under Video/Photo Mode, press the Menu button (Ⓜ) to enter the Video/Photo Mode settings.

8. Auto focus:

Press and hold the Camera button (○) halfway, and the camera will automatically focus. The focus frame on the screen will change to green to complete the focus. Then you can press the Camera button (○) fully to capture the current image (during this process, keep the camera still and do not release the Camera button (○)).

9. Selfie Mode:

Press and hold the OK button (Ⓚ) for 3 seconds to switch between front and rear screens. this allows you to quickly activate selfie mode.

10. Effects

Press the Menu button (Ⓜ) to open the menu options, locate and select the "Effect" option, you can choose (Auto / B&W / Sepia / Negative / Embossment).

11. Battery Charging:

You can use the provided USB charging cable to charge the camera through an adapter (5V/1A). When charging, the red indicator light will light up, and when fully charged, the red indicator light will turn off.

12. Connect PC:

Using the provided USB charging cable to connect to the

computer, the following pop-up window will appear:

1.Mass Storage:

Select "Mass Storage", and the computer will display the camera's memory card drive. You can transfer files from a removable disk to your computer.

2.PC Camera:

Select the "PC Camera", the camera can be used as a web-camera for real-time streaming and other media.

3.Charge:

Select the "Charge", the camera supports normal recording function.

13. About Camera:

System requirements users can transfer videos and photos to their computers through the following methodsto configure:
Intel Pentium 2.0GHz or higher/Microsoft Windows XP or higher operating system 2GB RAM or above 40GB available disk memory/standard USB interface/1GB GPU or higher 1920x1080 pixels or higher resolution.

BATTERY WARNING!

1. REPLACEMENT OF A BATTERY WITH AN INCORRECT TYPE THAT CAN DEFEAT A SAFEGUARD.
2. DISPOSAL OF A BATTERY INTO FIRE OR A HOT OVEN, OR MECHANICALLY CRUSHING OR CUTTING OF A BATTERY, THAT CAN RESULT IN AN EXPLOSION.
3. LEAVING A BATTERY IN AN EXTREMELY HIGH TEMPERATURE SURROUNDING ENVIRONMENT THAT CAN RESULT IN AN EXPLOSION OR THE LEAKAGE OF FLAMMABLE LIQUID OR GAS.

4. A BATTERY SUBJECTED TO EXTREMELY LOW AIR PRESSURE THAT MAY RESULT IN AN EXPLOSION OR THE LEAKAGE OF FLAMMABLE LIQUID OR GAS.

WARNING!

IMPORTANT INFORMATION: PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE USE AS IT CONTAINS IMPORTANT INFORMATION.

1. THIS PRODUCT IS NOT A TOY.
2. DO NOT CONNECT TO POWER EXCEEDING THE RECOMMENDED VALUE (5V DC 1A) .
3. THIS CAMERA CONTAINS BATTERIES THAT ARE NON-REPLACEABLE.
4. MEMORY CARD IS SMALL PART WHICH MAY BE A CHOKING HAZARD DO NOT PUT INTO THE MOUTH.
5. THIS PRODUCT IS NOT WATERPROOF. KEEP IT AWAY FROM WATER AND MOISTURE.
6. THE CAMERA SHOULD BE REGULARLY EXAMINED FOR DAMAGE TO THE SUPPLY CORD, ENCLOSURE, OR OTHER PARTS. IN THE EVENT OF DAMAGE, IT SHALL NOT BE USED UNTIL THE DAMAGE HAS BEEN REPAIRED. (PLEASE CONTACT THE SERVICE PROVIDER FOR REPLACEMENT; DO NOT REPLACE IT BY YOURSELF.)
7. THIS CAMERA CANNOT BE OPERATED DURING CHARGING BATTERY. ADULT SUPERVISION REQUIRED AT ALL TIMES.
8. DO NOT PLACE THE DEVICE NEAR STRONG MAGNETIC OBJECTS SUCH AS MAGNETS AND MOTORS.
9. PLEASE AVOID GETTING CLOSE TO ANY OBJECT THAT EMITS STRONG

RADIO WAVES, AS HIGH MAGNETIC FIELDS MAY CAUSE DEVICE MALFUNCTION OR DAMAGE TO IMAGES AND SOUNDS.
10. IT IS RECOMMENDED TO USE HIGH-QUALITY MEMORY CARDS TO SAVE HIGH-QUALITY VIDEO FILES.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation. We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product.

Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567