

- It is parents' responsibility to check main parts of the toy before use, and they must regularly examine for potential hazards, such as the battery, charge, cable or cord, plug, screws that fasten the enclosure or other parts. If damage occurs, do not use the toy until it is repaired.
- Make sure the plastic parts of the vehicle are not cracked or broken.
- Occasionally use a lightweight oil to lubricate moving parts such as wheels.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle is not in use.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electrical system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- Do not drive the vehicle in loose dirt, sand, or fine gravel, which could damage moving parts, motors or the electrical system.
- When the vehicle is not in use, all the electrical sources should be turned off. Turn off the power switch and disconnect the battery.

Disposal Of Battery

 


- Your sealed lead-acid battery must be recycled or disposed of in an environmentally sound manner.
- Do not dispose of your lead-acid battery in a fire. The battery may explode or leak.
- Do not dispose of a lead-acid battery in your regular, household trash. The incineration, land filling or mixing of sealed lead-acid batteries with household trash is prohibited by law.

OWNER'S MANUAL

READ AND UNDERSTAND THIS ENTIRE MANUAL BEFORE USING!

Disney
Stitch BUMPER CAR
6V Electric Ride On

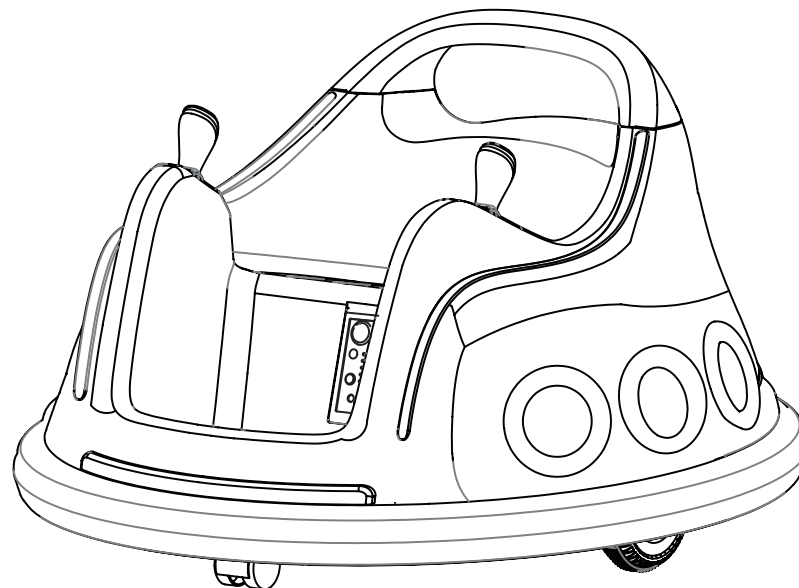

43610617



WARNING

Must be assembled by an adult.



- Suitable for 3 years +
- Maximum user weight: 30 kg

Read and understand this entire manual before using!

Please keep this manual for future reference as it contains important information.

Before first use, charge the battery for 4 to 6 hours.

A

ABOUT YOUR NEW VEHICLE

On the purchase of your new Ride-On:

This ride-on car will provide your child with many miles of enjoyable riding.

To help assure you and your rider a safe ride, please read this manual carefully and keep it for future reference.

Follow the recommendations in this manual, they are designed to improve the safety and operation of your ride-on car and its rider.



IMPORTANT!

Always stop the vehicle when changing direction to avoid damage to the gears and motor.

Specification

Vehicle size	73x73x42cm	Power Mode	Rechargeable
Age Grade	3 years +	Charging Spec	DC8V 500mA
Loading Limitation	30 kg	Charging Time	8 to12 hours
Input	100-240VAC 50/60Hz	Protector	Self-resetting
Battery Spec	6V4Ah	Motor	6V

G

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Vehicle does not run	Battery low on power	Recharge battery
	Thermal protector has tripped	Wait 10 seconds for automatic reset
	Battery connector or wires are loose	Check that battery connectors are firmly plugged into each other.
	Battery is dead	Replace battery.
Vehicle does not run for very long	Battery is undercharged	Check that the battery connectors are firmly plugged into each other when recharging
	Battery is old	Replace battery.
Vehicle runs sluggishly	Battery low on power	Recharge battery.
	Battery is old	Recharge battery.
	Vehicle is overloaded	Reduce weight on the vehicle; maximum user weight is 30 kg.
Vehicle needs a push to go forward	Vehicle is being used in harsh conditions	Avoid using vehicle in harsh conditions, see page 3 B SAFETY
	Poor contact of wires or connectors	Check that the battery connectors are firmly plugged into each other.
Vehicle needs a push to go forward	“Dead Spot” on motor	A dead spot means the electric power is not being delivered to the terminal connection and the vehicle needs repair.
Difficult shifting from forward to reverse or vice-versa	Attempting to shift while the vehicle is in motion	Completely stop the vehicle and shift.
Battery will not recharge	Battery connector adapter connector is loose	Check that the battery connectors are firmly plugged into each other.
	Charger not plugged in	Check that the battery charge is plugged into a working wall outlet.
Charger feels warm when recharging	This is normal and not a cause for concern	

Charge the battery in a dry area ONLY.

- Battery posts, terminals and related accessories contain lead and lead compounds. Wash hands after handling.
- Do not open the battery. Battery contains lead acid and other materials that are toxic and corrosive.
- Do not open the charger. Exposed wiring and circuitry inside can cause an electric shock. Only adults may handle or charge the battery. NEVER allow a child to handle or charge the battery.
Battery is heavy and contains lead acid (electrolyte).
- Do not drop the battery. Permanent damage to the battery could occur or cause serious injury.
- Before charging the battery, check for wear or damage to the battery, charger, its supply cord and the connectors. DO NOT charge the battery if any damage to parts has occurred.
- Do not allow the battery to drain completely. Recharge the battery after each use or once a month if not used regularly.
- Do not charge battery upside down.
- Always secure the battery with the bracket, as it can fall out and injure a child if the vehicle tips over.
- The POWER SWITCH must be turned in OFF position when charging.
- Before the first use, you should charge the battery for 4-6 hours.
- After each use or once a month, recharge for a minimum of 8 to 12 hours, up to a maximum 20 hours.
- When the vehicle begins to run slowly, recharge the battery.

B

SAFETY



WARNING:

ADULT ASSEMBLY REQUIRED.

Read all instructions carefully before assembling this product.

Pay attention on the potential hazards of using the toy in areas other than private ground.



WARNING: ASSEMBLY

- Keep these instructions for future reference.
- Prior to assembly, this package contains small parts: hardware which is a choking hazard and may contain sharp edges and sharp points. Keep product away from children until assembled.
- Ensure working area is free of danger, always dispose packaging material in such a way that it may not cause any harm. Plastic bags can be dangerous. To avoid suffocation, please keep plastic bags away from babies and children.
- To prevent serious injury, children must not use the equipment until completely assembled.
- Changing of spare parts should only be done by an adult. The battery is very heavy and the internal contents has acidic electrolytes. If battery leaking occurs, avoid contact with eyes. If there is accidental direct contact with battery leakage, it is imperative that the skin area is rinsed under cold water for at least 15 minutes. Please seek immediate medical attention.

IMPORTANT - MUST READ CAREFULLY

WARNING: USE

TO AVOID SERIOUS INJURY: Continuous adult supervision is required while this vehicle is in operation.

- To reduce the risk of injury, adult supervision is required. DO NOT leave the child to play in the vehicle alone to avoid accidents.
- NEVER use in or near roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water and dangerous places, always wear shoes, and NEVER allow more than 1 rider.
- NEVER allow children to ride at night.
- Instruct children on proper use of this product and to sit properly when driving. DO NOT RIDE VEHICLE STANDING UP.
- It is recommended that the rider always wears safety equipment (not included) such as a fitted helmet when riding the vehicle.
- Ride-on toys should be used with caution since skill is required to avoid falls or collisions which may cause injury to the user.
- The vehicle is intended for use on flat, level surfaces
- DO NOT ride the vehicle indoors. It is intended for outside use ONLY. Interior floors can be damaged by riding the vehicle indoors.
- DO NOT tow objects behind the vehicle or overload the vehicle as doing so will cause damage.
- This toy contains batteries that are non-replaceable.
- WARNING: Not to be used in traffic, it has potential hazards of using the ride-on electric toy in areas other than private grounds.
- The transformer, power supply or battery charger used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.

F

CHARGING

 
WARNING!

ONLY AN ADULT CAN CHARGE AND RECHARGE THE BATTERY!

WARNING!

This product with **Charging Protection**: when charging, all functions will be cut off! Only an adult can charge and recharge the battery!

Put the charger plug into the socket as pictured

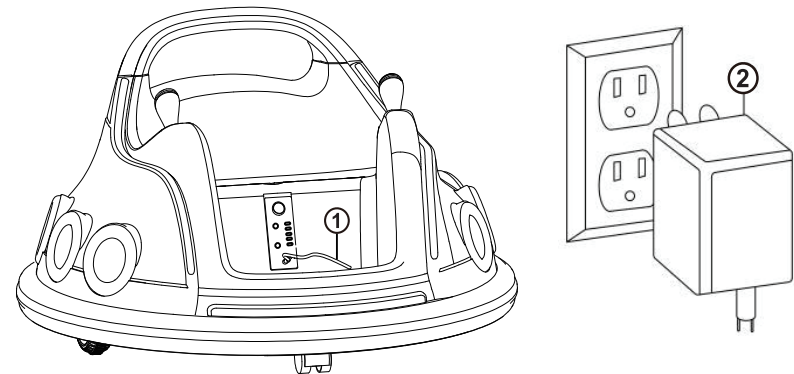

E

 
POWER CONNECT & FUNCTION

Power Connect: Remove the securing screws using cross-head screwdriver, lift the seat cushion to reveal the battery compartment.

① Plug the red power connector on the vehicle into the red connector from the battery.

② Replace the seat.

③ Tighten the screws by cross-head screwdriver.

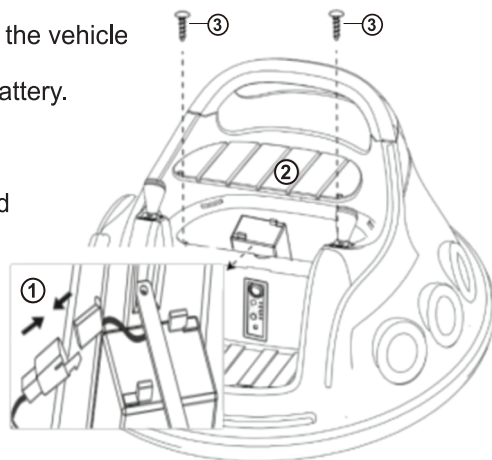

Function

① Forward-backward button: control the vehicle forward or backward, the middle position is stop. Applying downward force enables the vehicle to rotate.

 
② Power button: Turn the vehicle on and off.

③ Power display: Clearly display the battery power, in order to charge.

④ Socket: charge.

⑤ Light: Turn on/turn off the lights.

⑥ Sound: Press button for horn

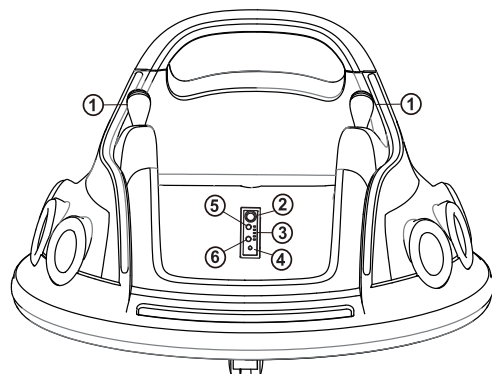

C

PARTS LIST

Number	Name	Quantity	Remark
1	Charger	1	
2	Manual	1	
3	Backrest	1	
4	Push handle switch	2	
5	Push handle cover	2	
6	M3.5*20 screw	2	
7	Buffer strip	1	
8	Buffer fixing block	1	
9	M4*10 screw	1	

Assembly tools required:



Cross-head screwdriver (not included)

 
WARNING!

FOR THE SAFETY OF YOUR CHILDREN, PLEASE READ ALL WARNINGS AND ASSEMBLY/USE INSTRUCTIONS. KEEP THIS GUIDE FOR FUTURE REFERENCE.

- ADULT ASSEMBLY REQUIRED. The product contains small parts, which are for adult assembly only. Keep children away when assembling.
- Always remove protective material and poly bags and dispose before assembly.

1. Install backrest:


Clip the backrest into the body

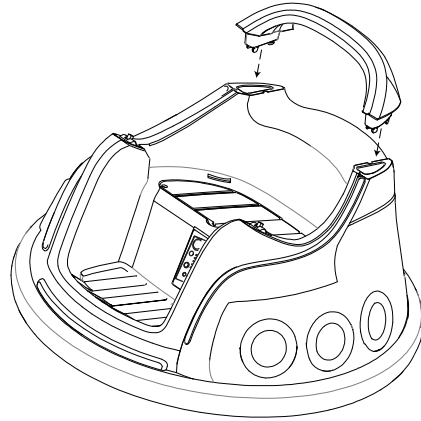

2. Install push handle:

As shown in the figure: install the forward and backward switch to the designated position of the body.

 
- ① Clip the push handle into the specified position on the vehicle body.
- ② Use M3.5*20 screws to fix the push handle to the vehicle body.
- ③ Tighten screws securely with a cross-head screwdriver.
- ④ Align the push handle cap with the top of push handle and snap into position.

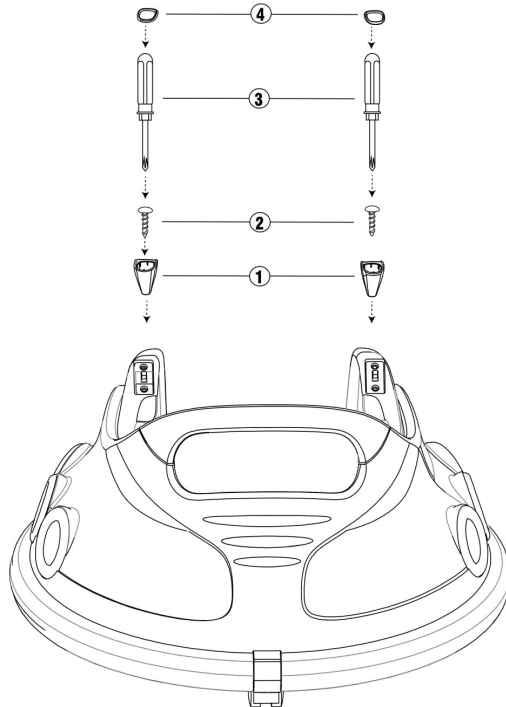


3. Install Buffer strip:

As shown in the figure: wrap the buffer strip around the specified position on the body, and clip one end of the buffer fixing block into the body slot and the other end with M4*10 screw fixation.

 
Step 1

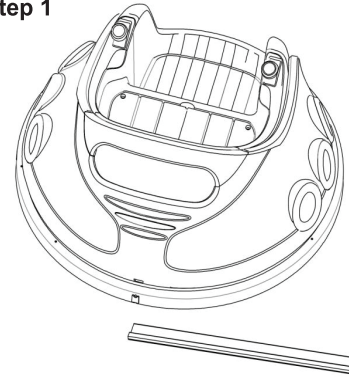

 
Step 2

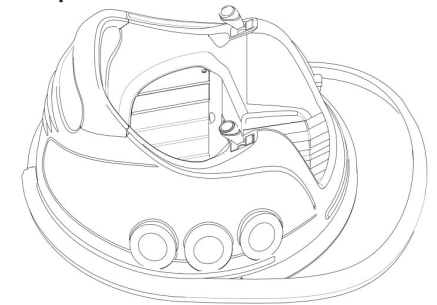

 
Step 3

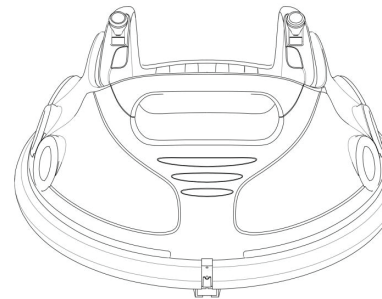

 Step 4

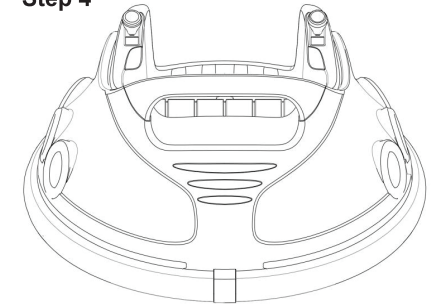

 Step 5

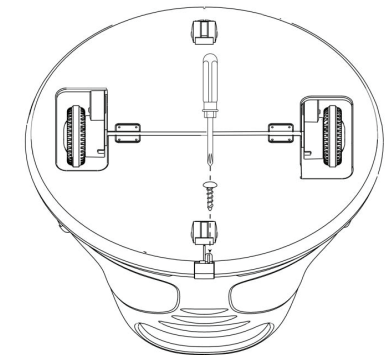

Buffer Strap Installation Note:

The buffer strip comes with extra length for flexibility. During assembly, you may cut it to your desired length as needed. However, ensure to leave at least 2 cm of space at the end to properly install the buffer fixing block (Step 3).