

12 Month Warranty

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above. From the date of purchase, provided that the product is used in accordance with accompanying recommendations for instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Services Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., And any use of such marks by KMART AUSTRALIA is under license.

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567



anko

Pro Home Soundbar

Operating instructions



Please read this user manual carefully before and retain for future use

Includes

- › Bluetooth® HDMI soundbar
- › AC power cord 1.5m



K: 43-611-799 | T: 71-573-656

Model: CRSNDBRPRO

Safety instructions

Do not disassemble this product.

The speaker must not be exposed to dripping or splashing and objects filled with liquids.

Do not expose speaker to water. It may result in permanent damage to the speaker or power source.

Keep the speaker away from direct sunlight, fire, flames or other heat sources and high voltage equipment.

Working temperature: -10°C – 40°C.

Disposal of this speaker should be in accordance with local government requirements.

Before cleaning the speaker, always remove the mains cable from the wall socket and switch off the speaker.


Clean the housing with a slightly moist cloth.

Prevent any damage to the mains cable, please stop to use the cable if it is damaged

Make sure the cable causes no risk of tripping or falling.

Prolonged listening to high volume levels can cause hearing damage.

Function overview

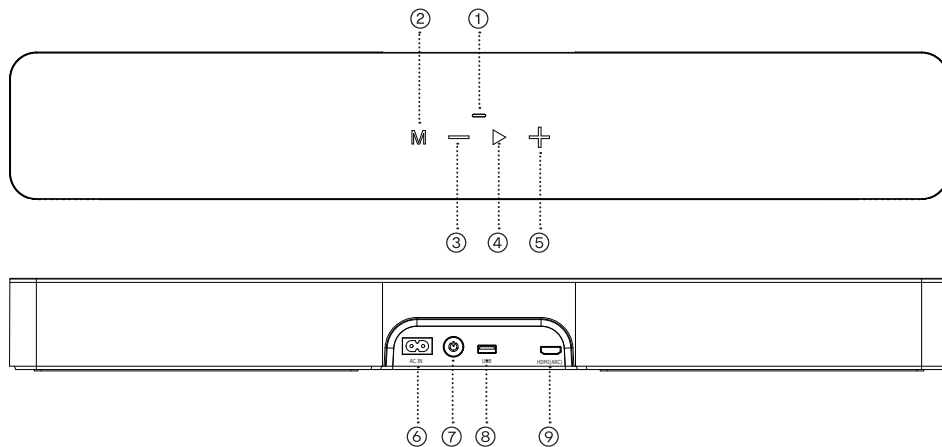

- ① Indicator Light
- ② Mode
- ③ Volume down/Previous Track
- ④ Play/Pause
- ⑤ Volume Up/Next Track
- ⑥ AC IN
- ⑦ Power ON/OFF
- ⑧ USB Port
- ⑨ HDMI ARC Port

How to use this product

Power: ON/OFF: Press and hold ⑦.

Mode: Press ② **M** to switch between Bluetooth/HDMI/USB modes.

Play/Pause: Press ④ **▶** to play or pause music.

Volume Up/Next Song: Press and hold ⑤ **+** to increase volume. Press ⑤ **+** to skip to next track.

Volume Down/Previous Song: Press and hold ③ **-** to decrease volume. Press ③ **-** to skip to previous track.

Connecting the AC power cord

Connect the small end of the AC power cord to the AC in port on the rear of the soundbar.

Plug the AC power cord into a mains socket.

The speaker will turn on automatically.

Bluetooth® pairing

Press and hold ② **M** button to activate Bluetooth pairing mode on the soundbar.

The blue indicator light will flash, indicating it is ready to pair with a Bluetooth device.

In the Bluetooth menu on the media device, search for “**anko43611799**” and connect.

You will hear a prompt sound and the blue indicator light will stay on once the soundbar is connected successfully.

Note: When powered ON, the speaker will enter Bluetooth pairing mode automatically if a HDMI or USB connection is not detected.

HDMI Function

Connect a HDMI cable (not included) into the HDMI ARC port located on the rear of the soundbar and plug the other side into a TV or other device with HDMI (ARC) port.

It will play an audio track automatically.

Refer to the TV or other device's user manual for HDMI ARC output settings.

USB Function

Plug a USB driver (not included, up to 64GB) into the USB port on the rear panel of the soundbar.

If there are music files on the drive, they will start playing automatically.

Note: The USB port cannot be used to charge other devices through a cable.

Specifications

Model no.: CRSNDBRPRO

Bluetooth® Version: 5.4

Working Distance: 10m in open area

Speaker Power Output: 60W

Input rating: 230-240V ~ 50/60Hz 0.5A