

WOODEN CLIMBING FRAME INSTRUCTIONS

Keycode: 43-613-182

WARNING! Requires adult assembly only. Use only under adult supervision.

Not suitable for children under 3 years. Only for one child use.

WARNING! Not for commercial use. Do not repeatedly assemble and disassemble the climbing frame. Do not jump on this product.

Make sure all screws, nuts and bolts are firmly tightened before using the product. Only use on flat ground. Do not expose to the sun. For indoor use only.

Not for children with a body mass of more than 30kg.

Remove the wooden climbing frame and related pieces from the box. Set all the parts out and read the assembly instructions prior to use. Keep the packaging until assembly is complete.

CONTENTS:

The product consists of below components, please assemble each part step by step.



A. 2 triangular wooden panels

B. 2 long wooden panels

C. 2 short wooden panels

D. 13 wooden rungs

E. 22 short screws

F. 4 long screws

G. 1 Hex key

H. 2 sets of paired screws


I. 2 fixing bolts

J. 2 sets of corner connector with matched screw and nut

K. 4 rubber stickers

Assembly Instructions


Note: Please do not tighten screws firmly before all wooden rungs are assembled.

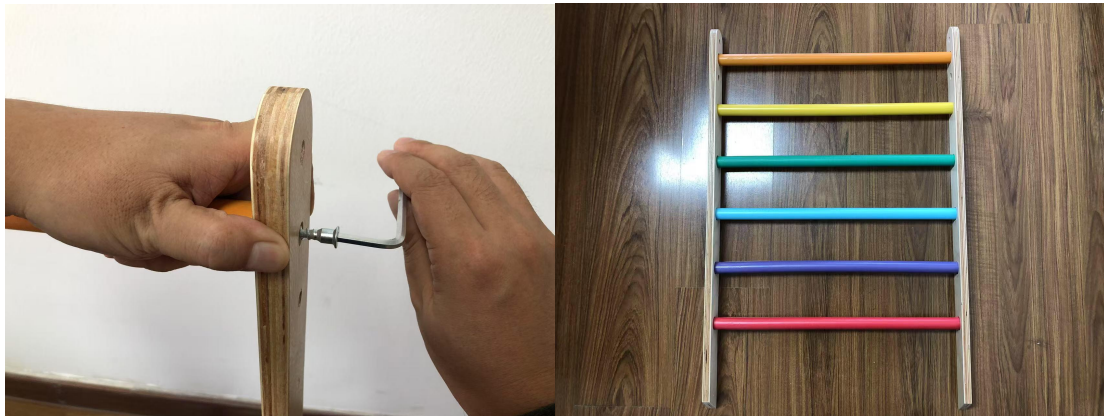

Step 1. Put one end of the wooden rung to the hole on the short wooden panel then take the short screw and pass it through the hole, using the tool (hex key or cordless drill) to tighten.

Fix one end of all 6 wooden rungs to the short wooden panel, tighten half firstly, then fix another end of rungs to the other short wooden panel.

Make sure each wooden rung is put correctly into the hole on panel and then tighten all wooden rungs firmly.

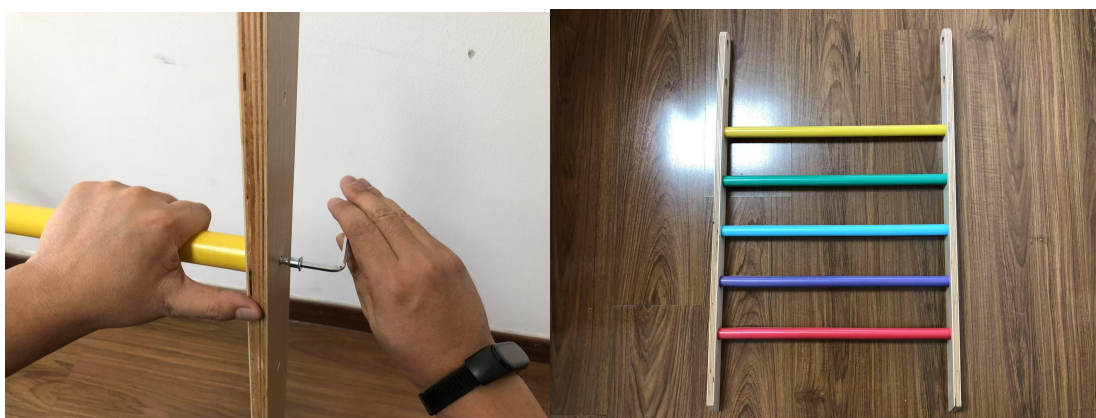

Step 2. Fix 5 wooden rungs to the long wooden panels with the short screws and the same method of Step 1 except the top 2 wooden rungs. Tighten half.





Step 3. Fix the top 2 wooden rungs to the long wooden panels and the triangular panels with the long screws.




Step 4. Fix the the short panels with rungs to the triangular panels with 2 sets of paired screws. Tighten the the paired screws with the screwdriver or cordless drill.

LOCKING HOLE

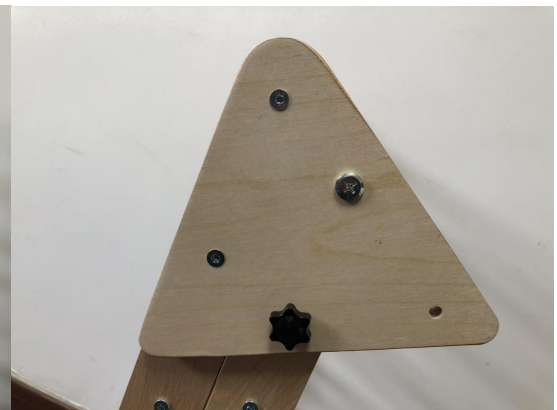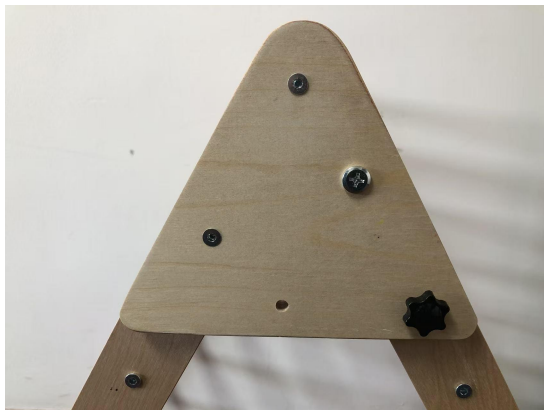

After assembling all the above parts, use the fixing bolt through the different locking hole on top of panel to fix the climbing frame.

ANTI SLIP

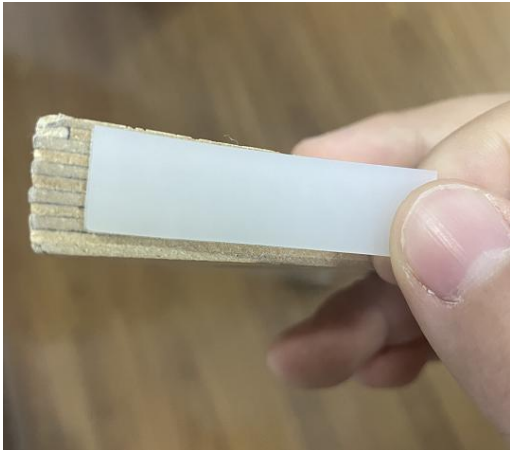

In order to ensure the climbing frame is stable and non-slip, please stick the rubber stickers to the bottom of the panels.

CORNER CONNECTOR



Fix one end of the corner connector to the bottom of the wooden panel with the matched screw and nut. Tighten the screw with the screwdriver or cordless drill. Fix the other end of the corner connector to ground with the suitable screw (not included).



Storage & Care Instructions

- Check and tighten all parts regularly.
- Keep away from water and direct sunlight.
- For indoor and domestic use.

MADE IN CHINA

CUSTOMER SERVICE

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567