

anko

Electric Pencil Sharpener  
Instruction Manual

WARNING: THE PRODUCT CONTAINS  
FUNCTIONAL SHARP EDGE. PLEASE  
USE AS INTENDED. NOT FOR  
CHILDREN UNDER 8 YEARS.

Product Description

- 1.The product is small in size and easy to carry.
- 2.Can sharpen pencils, colored lead and carbon pens and other pencils.
- 3.The safety design of stopping when the scrap cover is pulled open and the safety design of the big hole cover.

Technical Parameters

Name: Electric Pencil Sharpener  
Sharpening diameter: 6-12mm  
Product size: 68mm x 68mm x 68mm  
Product weight: 132g  
Power supply: 4 x AA batteries (not included)

Cautions

- Children under the age of 8 are prohibited from using this product.
- Children aged 8-14 should use this product under adult guidance.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Instructions  
How to sharpen a pencil



Install 4 x AA alkaline batteries according to the correct positive and negative poles, and cover the battery cover.

6-8mm



Insert a pencil with a diameter of 6-8mm into the small hole, hold the pencil holder and press down to start the pencil sharpener. When you feel reduced resistance, the sharpening process will be finished and the pencil can be safely removed from the pencil hole.


1

2

3


4

8-12mm

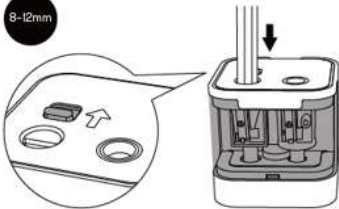

Hold down the handle of the large hole cover with your left hand and pull back.  
Insert a pencil with a diameter of 10-12mm into the hole and hold the pencil holder down to start the pencil sharpener. When you feel reduced resistance, the sharpening process will be finished and the pencil can be safely removed from the pencil hole.

How to dump waste chips

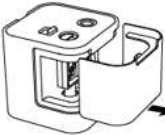

Hold the pencil sharpener body with your left hand, and hold the transparent cover with your right hand and pull it out.



Tilt the body of the pencil sharpener, pour out the scraps, and put the transparent cover back on.



MADE IN CHINA  
KEYCODE K: 43-616-299 | T: 71-602-370  
CUSTOMER SERVICE:  
KMART AU: 1800 124 125  
KMART NZ: 0800 945 995  
TARGET AU: 1300 753 567