
ITEM NAME: PEDAL GO KART

KEYCODE: 43617630

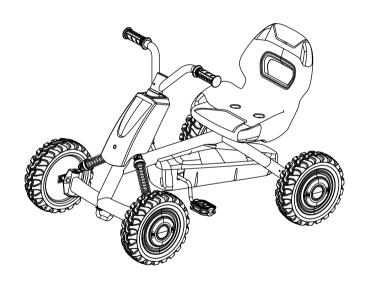

IT IS IMPORTANT TO READ THIS MANUAL THOROUGHLY BEFORE ASSEMBLING, RIDING, OR PERFORMING MAINTENANCE ON THIS KART.

KEEP THIS MANUAL FOR FUTURE REFERENCE.

MARNING:

For the safety of your child, please read all warnings and assembly instructions carefully. Keep this manual for future reference.

SAFETY INSTRUCTIONS

- Never leave the child unattended while using the go kart. Adult supervision is required at all times.
- The go kart should be used with caution since certain skills are required to avoid falls or collisions that may cause injuries to the user or third parties.
- Protective equipment should be worn while using the go kart.
- Never use the go cart on roadways, near vehicles, on or close to steep inclines or steps, swimming pools or water bodies.
- · Always wear shoes when using the go kart.
- Always be seated on the seat when using the go kart.
- Do not use in traffic.
- This go kart is not suitable for children under 37 months due to its speed. Maximum user weight is 50 kgs.
- This go kart is not equipped with brakes.

RULES FOR SAFE RIDING

- Ensure children ride within safe riding areas. Never use the go kart on roadways, near vehicles, on or close to steep inclines or steps, swimming pools or water bodies.
- Use the go kart only on flat and level surfaces such as inside your house, garden or playground.
- Never use in the dark. A child could encounter an obstacle and have an accident. Ride only during day-time or in a well-lit area.
- · Do not let children touch the wheels or be near them when the go kart is moving.



ADULT ASSEMBLY REQUIRED

This product contains small parts that can be hazardous to children.

Please keep children away during assembly. Please dispose of all packaging materials responsibly.

RECOMMENDED AGE: 3-5 YEARS

LOAD CAPACITY: 50 KGS

NOTICE:

Front Panel or wheel cover may vary from image shown.

The owner's manual contains important safety information as well as assembly, use and maintenance instructions

This kart must be assembled by an adult who has read and understood the instructions in this manual.


Keep the package away from children and dispose of properly before use.

NAME OF GO KART PARTS

PRODUCT MAY VARY FROM IMAGE SHOWN BELOW.



CHECK THE PART LIST BELOW BEFORE ASSEMBLY

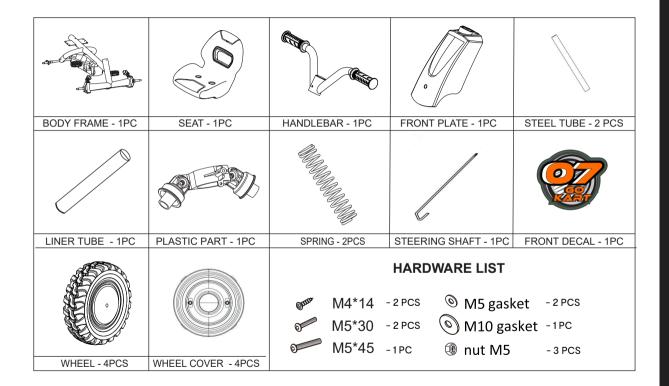

ASSEMBLY INSTRUCTIONS

1. Put the plastic part on the frame.




2. First, place the iron parts into the proper position on the frame. Then, slide the spring tubes over the iron part, as shown in the figure below.




3. First, secure the iron parts to the plastic part, then press down on the plastic part to align its mounting holes with those on the frame, then fix it with screw M4*14.



4. Fix the wheel and hub at the top of the shaft, as shown in the figure below.

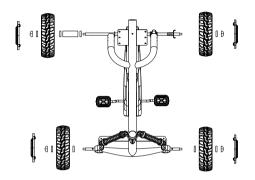

5. Put the washer (gasket M10) on the steering shaft, then insert the steering shaft and slot the loop into connecting part as shown in the figure below.

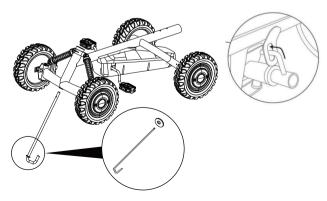

6. Put the liner tube cover the steering shaft




7. Put the panel on the liner tube.




8. Fix handlebar on the steering shaft then fix it with screw M5*45 and nut M5.



9. Fix the front panel to the liner tube.then fix it with screw M4*14. Cover the screw hole with head sticker.

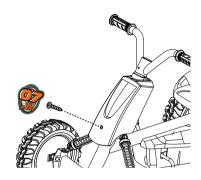

10. Fix the seat with 2x M5*30 screws, 2x gasket M5 and 2x nut M5.

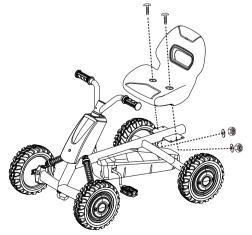

NOTICE ON MAINTENANCE

- It is the responsibility of the adult / parent to check the main parts of the go kart before use.
- Regularly examine for potential hazard such as loosen screws and parts.
- If the go kart is damaged, it must not be used until it is repaired.
- Ensure that the plastic parts of the go kart are not damaged or broken.
- Occasionally, use a light weight oil to lubricate moving parts such as the wheels.
- Park the go kart indoors or cover it with a tarp to protect it from the weather.
- Keep the go kart away from heat sources, such as stoves and heaters. Plastic parts may melt.
- Clean the go kart with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish.
- Do not use car wax. Do not use abrasive cleaners,
- · Do not drive the go kart in loose dirt, sand or fine gravel that could damage moving parts.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kenda Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us