

 
80mm

60mm


anko

Inkless A4 Printer Instruction Manual K: 43-618-996 | T: 71-642-758 Model No. ZB2025041106

Accessories:
› 1 x Thermal printer
› 1 x Charge & data cable
› 1 x A4 Thermal paper
› 1 x Instruction manual



Key Description

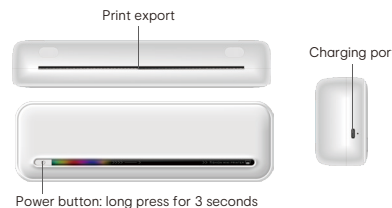 

Meaning of indicator lights

	Coloured lights: Power on
	Green light flashes: BT is not connected
	Coloured lights continue to flash: Device is successfully connected
	Red light: Paper is out, device temperature is overheated lid is not closed
	Red light flashes: low battery

Guidelines for use



1 Please charge before use, then press and hold the power key for 3 seconds to turn on.

2 Search and download "Tiny Print" in App Store or Google.



3 After turning on the Bluetooth of your mobile phone, open the app, click the device list in the upper right corner, and select "MV-B530".



4 1. Enter <http://print.frogtosea.com> in your browser to download and install the printer driver on your computer.
*Please refer to the operating system instructions on the download page and download the corresponding client accordingly.
Currently supported systems include: Windows 11, Windows 10, Windows 8, macOS with Intel chips, and macOS with ARM chips.*
2. Connect the printer to the computer using a USB Type-C cable.
3. Select "BYP800" to start printing.

 
Paper replacement course



1 Press the OPEN button in the direction indicated by the arrow to open/close the paper bin (note the direction of the machine).


Open: Press the OPEN button and press down on the paper bin cover to pop open (do not press the paper bin when opening, otherwise it will not pop open).

Close: Put both hands on both ends of the paper bin and press down to close the paper bin.



2 Take out the old paper roll and put the new paper roll in the direction shown. The paper should be put straight and not crooked.

 Note: The new thermo sensitive paper needs to be exposed to 2 cm of paper bin length so that the machine can absorb the paper automatically when the paper bin is shaped.



3 Cover the paper bin, the machine can automatically absorb paper after normal use.



4 After the above steps are correct, the machine can print normally.

Maintenance and Care

- DO NOT PLACE THIS PRODUCT IN A HUMID ENVIRONMENT FOR A LONG TIME;
- IF THERE ARE STAINS ON THE SURFACE, PLEASE WIPE IT WITH A DRY CLOTH;
- TO REDUCE BATTERY AGING AND EXPANSION, REGULARLY CHECK THE WIRES, PLUG SHELLS AND OTHER PARTS FOR DAMAGE. IF DAMAGED, STOP USING IT IMMEDIATELY UNTIL IT IS REPAIRED;
- IF NOT USED FOR A LONG TIME, CHARGE IT EVERY THREE MONTHS OR SO.

BATTERY WARNING!

- REPLACEMENT OF A BATTERY WITH AN INCORRECT TYPE THAT CAN DEFEAT A SAFEGUARD.
- DISPOSAL OF A BATTERY INTO FIRE OR A HOT OVEN, OR MECHANICALLY CRUSHING OR CUTTING OF A BATTERY, THAT CAN RESULT IN AN EXPLOSION.
- LEAVING A BATTERY IN AN EXTREMELY HIGH TEMPERATURE SURROUNDING ENVIRONMENT THAT CAN RESULT IN AN EXPLOSION OR THE LEAKAGE OF FLAMMABLE LIQUID OR GAS.
- A BATTERY SUBJECTED TO EXTREMELY LOW AIR PRESSURE THAT MAY RESULT IN AN EXPLOSION OR THE LEAKAGE OF FLAMMABLE LIQUID OR GAS.

WARNING!

IMPORTANT INFORMATION: PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE USE AS IT CONTAINS IMPORTANT INFORMATION.

- THIS PRODUCT IS NOT A TOY.
- DO NOT CONNECT TO POWER EXCEEDING THE RECOMMENDED VALUE (5V 1A).
- THIS PRINTER CONTAINS BATTERIES THAT ARE NON-REPLACEABLE.
- THIS PRODUCT IS NOT WATERPROOF. KEEP IT AWAY FROM WATER AND MOISTURE.
- THE PRINTER SHOULD BE REGULARLY EXAMINED FOR DAMAGE TO THE SUPPLY CORD, ENCLOSURE, OR OTHER PARTS. IN THE EVENT OF DAMAGE, IT SHALL NOT BE USED UNTIL THE DAMAGE HAS BEEN REPAIRED. (PLEASE CONTACT THE SERVICE PROVIDER FOR REPLACEMENT; DO NOT REPLACE IT BY YOURSELF.)
- THIS PRINTER CANNOT BE OPERATED DURING CHARGING BATTERY. ADULT SUPERVISION REQUIRED AT ALL TIMES.
- DO NOT PLACE THE DEVICE NEAR STRONG MAGNETIC OBJECTS SUCH AS MAGNETS AND MOTORS.
- PLEASE AVOID GETTING CLOSE TO ANY OBJECT THAT EMITS STRONG RADIO WAVES, AS HIGH MAGNETIC FIELDS MAY CAUSE DEVICE MALFUNCTION OR DAMAGE TO IMAGES AND SOUNDS.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product.

Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567