
INSTRUCTION MANUAL PINK SWAG

(**Keycode:** 43619511)


Read all instructions prior to use.

- -Before setting your swag:
- >select a level site free from rocks, branches, sharp objects and not in low lying areas that could be subject to flooding.

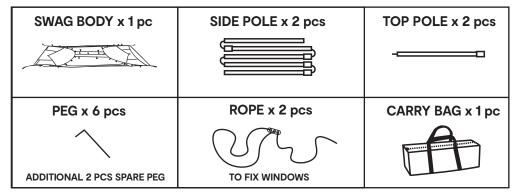

STEP 1

INSERT THE PEG INTO THE WEBBING AT EACH OF THE FOUR CORNERS

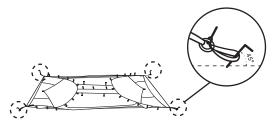


STEP 3

SECURE POLE AT THE CORNERS BY




STEP 2

 ASSEMBLE TWO SIDE POLES.




STEP 4

SECURE THE POLE TO THE SWAG USING INSERTING THE PIN INTO THE POLE END. THE PLASTIC CLIPS AT INTERVALS TO

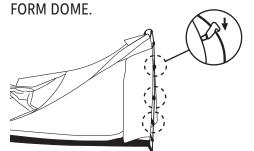


STEP 5


ASSEMBLE TOP POLES, INSERT END OF ADJUSTABLE TOP POLE INTO HOLE AT THE TOP END OF SWAG. SLIDE TOP POLE UTIL BRINGING IT TAUTAGAINST BOTH ENDS OF SWAG, THEN LOCK TOP

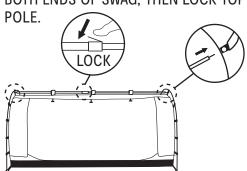

STEP 6

ATTACH ROPE TO WINDOWS, ATTACH ROPE TO PEGS, AND INSERT PEGS TO FLOOR.

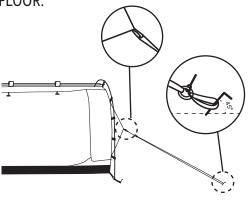

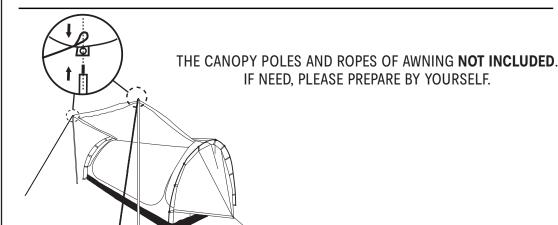

WARNING:
ADULT ASSEMBLY REQUIRED. KEEP CHILDREN AWAY DURING SETUP TO AVOID INJURY. ALWAYS SECÜRE THE SWAG WITH ALL NECESSARY PEGS, GUY ROPES AND POLES TO PREVENT COLLAPSE OR WIND-RELATED DAMAGE. DO NOT USE NEAR OPEN FLAMES, STOVES, OR HEATERS INSIDE OR NEAR THE SWAG - RISK OF FIRE AND SUFFOCATION. KEEP ALL FLAMES AND HEAT SOURCES AWAY FROM THE SWAG FABRIC. DO NOT PITCH THE SWAG UNDER TREES WITH LOOSE BRANCHES OR IN FLOOD-PRONE AREAS. IN CASE OF EXTREME WEATHER (VILLAVY WIND. DAIM. SNOW OR LIGHTNING) EVACULATE THE SWAG AND SFEK (HEAVY WIND, RAIN, SNOW, OR LIGHTNING), EVACUATE THE SWAG AND SEEK PROPER SHELTER.

FIRE PRECAUTIONS:DO NOT USE CANDLES, MATCHES, OR ANY OPEN FLAME IN OR NEAR THE SWAG. DO NOT COOK INSIDE OF SWAG.

DO NOT USE OPEN FLAMES, STOVES, OR HEATERS INSIDE OR NEAR THE SWAG -

DO NOT STORE FLAMMABLE LIQUID INSIDE THE SWAG. EXTINGUISH OR TURN OFF ALL LANTERNS BEFORE GOING TO SLEEP.

CARE INSTRUCTION:
WIPE CLEAN WITH A DAMP CLOTH. DO
NOT USE ABRASIVE MATERIALS OR
SOLVENTS, ENSURE SWAG TENT IS
CLEAN AND 100% DRY BEFORE STORING.
STORE IN A DRY PLACE. LONG EXPOSURE TO THE SUN MAY RESULT IN SOME LOSS OF COLOUR.

MADE IN CHINA **CUSTOMER SERVICE: KMART AU:** 1800 124 125

KMART NZ: 0800 945 995 **TARGET AU: 1300 753 567**