

80 mm


115 mm

anko

Dual Mode Wireless Vertical Mouse

Instruction Manual

K: 43620517 | T: 71662497 Model: JLR-81056



Please read this manual carefully before using the product and retain it for future reference.

Package contents:

1x Wireless Mouse
1x USB Receiver
1x Manual

Product Specifications:

Adjustable Resolution: 800/1600/2400/3200/4000 DPI
Power supply: 1 x 1.5V AA battery (not included)
Wireless range: up to 10m (in unobstructed environments)

Supports:

Compatible Systems: Windows®, macOS® 10.8 or later, and Android.


Safety Instructions:

- Use this device solely for its intended purpose.
- Only use this appliance indoors. Keep the appliance away from all hot surfaces and naked flames.
- Always put the appliance on a level, stable, clean, dry surface. Protect the appliance from extreme heat and cold, dust, direct sunlight, humidity and drops or jets of water.
- Do not immerse the appliance in water or in other liquids.
- If the product malfunction due to electrostatic discharge or a brief power surge, turn off or disconnect power then turn on or reconnect it.

Battery warning:

- Batteries are to be inserted with correct polarity.
- Do not mix different types of batteries or new and used batteries.
- Non-rechargeable batteries are not to be recharged.
- Remove batteries from the product when not in use for extended time or when batteries become exhausted.

Product Diagram

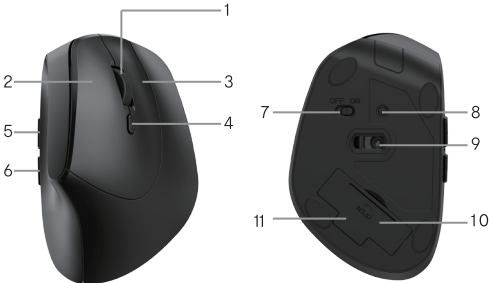

1. Scroll button
2. Left button
3. Right button
4. DPI button
5. Forward button
6. Backward button

7. Power on/off button
8. Mode Switch button
9. Sensor
10. Battery compartment
11. USB receiver position

Operation Instructions

Installing the Battery

1. Open the battery compartment cover.

2. Insert 1 x AA battery into the mouse, ensuring the polarity (+/-) is correct. (Batteries not included)

3. Close the battery compartment cover securely.

Connection Ways

This device can be connected with two different modes 2.4GHz (default) and Bluetooth, please switch the modes by pressing mode switch button.

2.4GHz Connection

1. Slide the power switch to **ON**.
2. Remove the USB Receiver from the battery compartment.
3. Insert the USB receiver into an available USB port on your computer. The driver will install automatically within a few seconds, then the mouse is now ready to use in **2.4GHz mode**.

Bluetooth Connection

1. Slide the power switch to **ON**
2. Press and hold the mode switch button for about 3 seconds. The LED indicator will change from red to flashing blue, indicating pairing mode.
3. On your computer, enable Bluetooth and select "Add a device" (Windows) or open Bluetooth settings (macOS).
4. Select "anko43620517" from the list of available devices.
5. Click to pair. Once connected, the mouse is ready to use in Bluetooth mode.

Note:

- Short press the mode switch button to switch between **2.4GHz** and **Bluetooth** modes.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by KMART AUSTRALIA is under licence.

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753