



## Instruction manual

K: 43620524 | T: 71662503

Model: JLR-79820

### Wireless Keyboard & Mouse Combo



Please read this manual carefully before using the product and retain it for future reference.

#### Package contents:

1x Mouse  
1x Keyboard  
1x User Manual  
1x USB Wireless Receiver

#### Product Specifications:

- 2.4GHz wireless technology
- Resolution: 1200 Dpi
- Working distance up to 10m, 360° degree (without any obstructions)

#### Supports:

Compatible Systems: Windows®, macOS®, and Android.

#### Safety Instructions:

- Use this device solely for its intended purpose.
- Only use this appliance indoors. Keep the appliance away from all hot surfaces and naked flames.

- Always put the appliance on a level, stable, clean, dry surface. Protect the appliance from extreme heat and cold, dust, direct sunlight, humidity and drops or jets of water.
- Do not immerse the appliance in water or in other liquids.
- If the product malfunction due to electrostatic discharge or a brief power surge, turn off or disconnect power then turn on or reconnect it.

#### Battery warning:

- Batteries are to be inserted with correct polarity.
- Do not mix different types of batteries or new and used batteries.
- Non-rechargeable batteries are not to be recharged.
- Remove batteries from the product when not in use for extended time or when batteries become exhausted.
- Do not allow children or pets to swallow the battery to avoid injury or explosion of the battery.
- Dispose of batteries responsibly.
- Do not dispose of in fire.

#### Product Overview



ON/OFF switch is at side of keyboard.

Remove the battery compartment cover to find the USB wireless receiver.

#### Before first use

- Carefully unpack the device and check whether all parts are included and undamaged.  
If any parts are missing or damaged, please return the product to the place of purchase for replacement.
- Warning – Risk of suffocation: Keep all packaging materials out of reach of children.
- Dispose of all packaging materials responsibly. Please contact your local waste management authority for information regarding recycling or waste separation.
- Remove all protective films and packaging materials before using the product.

#### Installing the Batteries

- Open the battery compartment covers on both the mouse and the keyboard.
- Insert 1 x AA battery into the mouse and 2 x AAA batteries into the keyboard.  
(Batteries not included.)
- Replace the battery compartment covers and ensure they are securely closed.

#### Connecting the USB Wireless Receiver

- Remove the USB wireless receiver from its storage compartment inside the keyboard.
- Plug the USB wireless receiver into an available USB port on your computer.  
The mouse and keyboard will automatically connect. No driver installation is required.

#### Auto Sleep and Wake Function

To conserve battery power, the mouse and keyboard automatically enter sleep mode after periods of inactivity:

- Shallow Sleep Mode:**  
After 2 minutes of inactivity, the device enters shallow sleep mode. It can be instantly reactivated by pressing any key or moving the mouse.
- Deep Sleep Mode:**  
After 10 minutes of inactivity, the device will switch to deep sleep mode. Press any key to wake the device from deep sleep.

#### 12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567