

## Technical specifications

**Bluetooth® version:** 5.4

**Driver size:** 8mm

**Impedance:**  $32\Omega \pm 15\%$

**Sensitivity:**  $82\text{dB} \pm 3\text{dB}$  at 1kHz

**Working distance:** 10m

**Charging voltage:** DC 5.0V/1A

**Earbuds battery capacity:** 30mAh

**Charging case battery capacity:**  
180mAh

**Earbuds charging time:** 1 hour

**Charging case charging time:**  
1.5 hours

**Charging by USB-C cable**  
(cable included)

## 12 Month Warranty

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations for instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the

 
defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Services Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Note: Please charge the earbuds and case before use.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by K MART AUSTRALIA is under licence.



**WARNING!**  
Not suitable for children under 3 years.  
Contains small parts.



**MADE IN CHINA**

**CUSTOMER SERVICE:**

**KMART AU:** 1800 124 125

**KMART NZ:** 0800 945 995

**TARGET AU:** 1300 753 567

v1

**anko**

**True Wireless  
Kids Earbuds**  
Operating instructions



**Includes:**  
› charging case  
› earbuds  
› USB-C charging cable  
› middle size earbuds x 2

**K:4360692 | T:71669403**


Model: CR-TW26

Bluetooth name: anko43620692  
ADULT SUPERVISION REQUIRED

## CAUTION

- › The batteries in this product are not replaceable.
- › During use, storage or transportation of the battery, it should not be subjected to extremely low temperatures or low pressure at high altitude.
- › If the battery is exposed to extremely high temperatures, it could result in an explosion or the leaking of flammable liquid or gas.
- › Please take care when disposing of the unit; disposal in fire, oven, mechanically crushing or cutting can cause explosion.
- › A battery subjected to extremely low air pressure at high altitude may result in an explosion or the leakage of flammable liquid or gas.

## Function overview

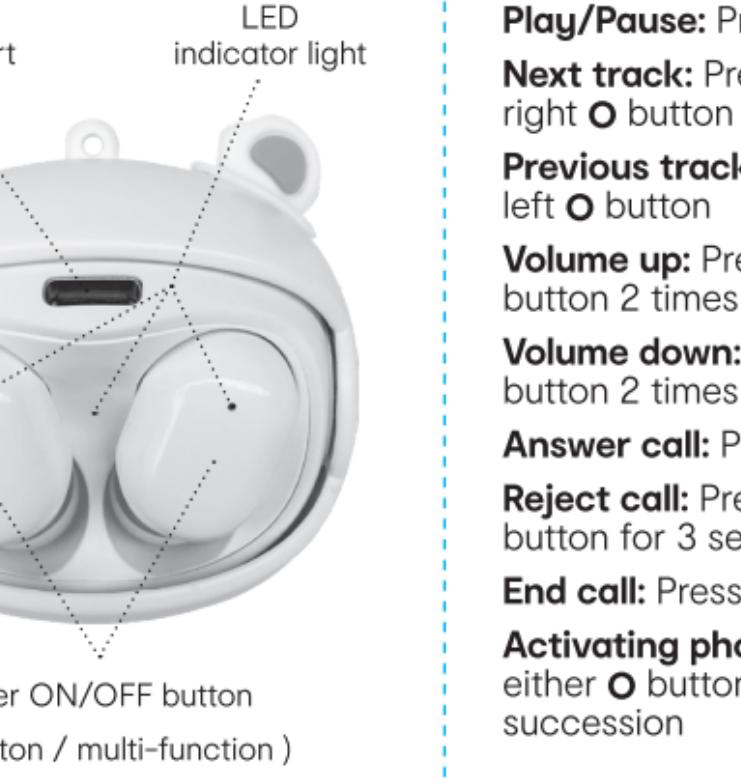

## How to use this product

### Function operation

**Play/Pause:** Press either **O** button

**Next track:** Press and hold the right **O** button

**Previous track:** Press and hold the left **O** button

**Volume up:** Press the right **O** button 2 times in quick succession

**Volume down:** Press the left **O** button 2 times in quick succession

**Answer call:** Press either **O** button

**Reject call:** Press and hold either **O** button for 3 seconds

**End call:** Press either **O** button

**Activating phone assistant:** Press either **O** button 3 times in quick succession

## Power ON/OFF

› Take both earbuds out from their charging case to turn them ON.

› Once the earbuds are powered ON, they will automatically sync and enter into pairing mode, with the LED indicator light flashing.

› Activate the Bluetooth® function on your phone within range and select "**anko43620692**" from the list shown.

› The LED indicator light will stop flashing, indicating the headphones have been successfully paired with your device.

› Put both earbuds into their charging case to turn them OFF.

› Manually power the earbuds ON/OFF without the charging case by pressing either **O** button on the earbuds for 3-7 seconds.

## Charging the case

› Connect the USB-C charging cable into the USB-C port on the charging case.

› Ensure you connect the USB-A end into a standard USB 5V max. 3A output to avoid any damage.

› The LED indicator light will flash red while the case is charging and stay solid red when fully charged.

### Charging the earbuds

› Place both earbuds into the charging case, ensuring they are fully connected with the charging pins.

› When the earphones are being charged, LED indicator on the case stay solid blue. Earphones red LED light will turn off when they are fully charged.

## Safety instructions

› We recommend you fully charge the earbuds before first use.

› To ensure longevity of the battery, the earbuds and charging case should be charged once a month.

› If the earbuds fail to connect via Bluetooth®, put the earbuds into the charging case to turn them off. Make sure both earbuds are fully connected with the charging pins. Turn Bluetooth® off on your device to turn the earbuds on and repeat the pairing process.

› The earbuds can only be used with the provided charging case.