

## 12 Month Warranty

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations for instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Services Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

## MADE IN CHINA

### CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567


anko

# Wired Kids Patch Headphones

## Operating instructions

Includes:

- › headphones
- › instruction manual

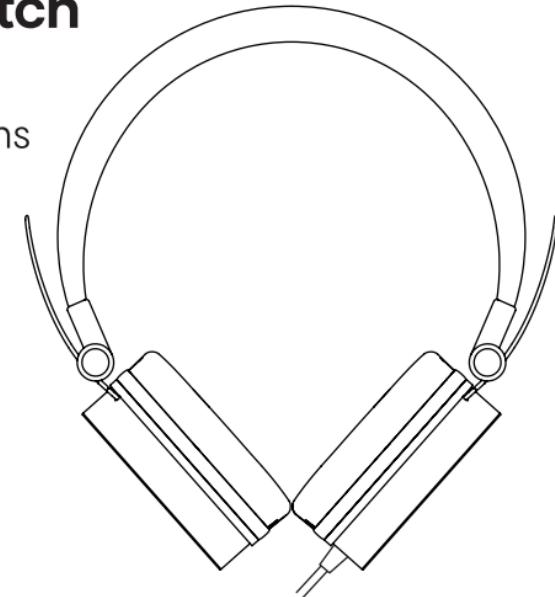

**WARNING:** HIGH VOLUME CAN CAUSE HEARING LOSS. YOUR EARS ARE IMPORTANT. LISTENING AT HIGH VOLUME FOR A PROLONGED PERIOD MAY DAMAGE YOUR HEARING. DO NOT LISTEN TO HEADPHONES AT HIGH VOLUME.

ADULT SUPERVISION REQUIRED

K: 43-620-777 | T: 71-669-700

K: 43-620-784 | T: 71-669-717


Model: CR-HP29

Thank you for choosing our Anko headphones.

Please read these instructions before using and retain for future use.

## Overview

1. Microphone
2. Call answer/music control button

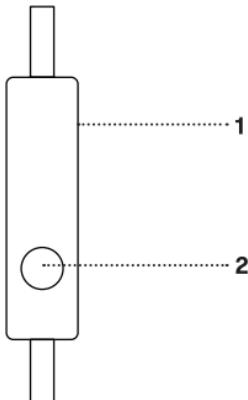

## How to use the in-line control functions

Answer call or music control while the headphones are connected to your device via the 3.5mm headphone jack.

### A. Call Answer

#### Answer Call

Press the call answer/music control button to answer calls on your device.

#### Hang Up/End Call

Hang up during the call, press the call answer/music control button to mute/unmute the microphone, press and hold the button for approx. one second to end the phone call.

#### Reject Call

To decline an incoming call, press and hold call answer/music control button for about two seconds.

### B. Music Control

#### Pause Music

Press the call answer/music control button once to pause/resume music.

#### Next Song

Press the call answer/music control button twice in quick succession to skip to next song.

#### Previous Song

Press the call answer/music control button three times in quick succession to skip to previous song.

### C. Voice Assistant

#### Device's Voice Assistant (Where applicable)

Press and hold the call answer/music control button for two seconds to activate the device's voice assistant (where applicable).