

## 12 Month Warranty

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations for instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Services Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.

**WARNING** Do not dispose of unit into fire or hot oven, or mechanically crushing or cutting of a battery, that may result in an explosion. • Never attempt to disassemble and reassemble. • Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. • Check with your local authority for recycle advice. • Keep your device and all accessories out of the reach of children and animals. • Small parts may cause choking or serious injury if swallowed. • Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). • Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. • Do not allow your device to get wet -liquids can cause serious damage. • A battery subjected to extremely low air pressure at high altitude may result in an explosion or the leakage of flammable liquid or gas. • Do not handle your device with wet hands.

## MADE IN CHINA

### CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567



anko

# Iridescent Wireless Headphones

## Operating instructions

Includes:


- › wireless headphones
- › USB-C charging cable
- › AUX cable



K: 43-620-814 | T: 71-669-960  
K: 43-620-821 | T: 71-669-984  
Model no.: CR-HP27

**WARNING:** HIGH VOLUME CAN CAUSE HEARING LOSS. YOUR EARS ARE IMPORTANT. LISTENING AT HIGH VOLUME FOR A PROLONGED PERIOD MAY DAMAGE YOUR HEARING. DO NOT LISTEN TO HEADPHONES AT HIGH VOLUME.

## Function overview

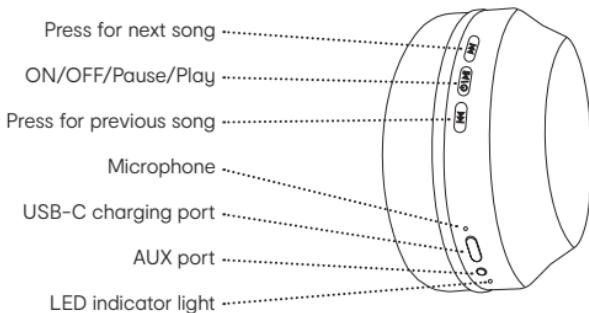

## Function operation

**Power ON/OFF:** Press and hold  button

**Play/Pause:** Press  button

**Next track:** Press and hold  button

**Previous track:** Press and hold  button

**Volume up:** Press  button

**Volume down:** Press  button

**Answer/end call:** Press  button

**Reject call:** Press and hold  button

**Redial call:** Press  button 2 times in quick succession

**Voice Assistant:** Press and hold  button for about 3 seconds

**AUX function:** When using the AUX cable to listen to music, the wireless functions will not be accessible

## How to use this product

**Please read these instructions before using and retain for future use.**

### Getting started

Before using this device, ensure that it is fully charged. Do not wear the headphones while setting up as the voice prompt is loud. Press and hold the Power button until the LED indicator light flashes alternating red and blue.

### Pairing

Go to Bluetooth® settings on your electronic device within range and select **"anko43620814"** or **"anko43620821"** from the list shown. When the red indicator light stops flashing, it indicates the headphones have been successfully paired with your device and are ready to use. Once the headphones are paired, they will recognise your device and automatically pair on the next use.

### Charging

Connect the USB-C end of the charging cable into the charging port on the bottom of the right earcup. Plug the USB-A end into a standard USB 5V DC power source. When the red LED indicator light turns off, it indicates that the headphones are fully charged and ready to use. Please only use the supplied charging cable to recharge your headphones. If not, it may result in damage or even explosion.

**Non-play automatic power saving mode:** If Bluetooth is disconnected for 5 minutes, the headphones will enter power saving mode and turn off automatically.

### Technical specifications

**Bluetooth® version:** 5.4

**Impedance:**  $32\Omega \pm 15\%$

**Play time:** 8 hours

**Charge time:** Approx. 2.5 hours

**Frequency:** 20Hz - 20kHz

**Working distance:** 10m

**Battery:** 200mAh

**Input rating:** DC5V/1A