 


Assembly Instructions for Hello Kitty Kitchen & Fridge Set

Keycode no.: 43621484

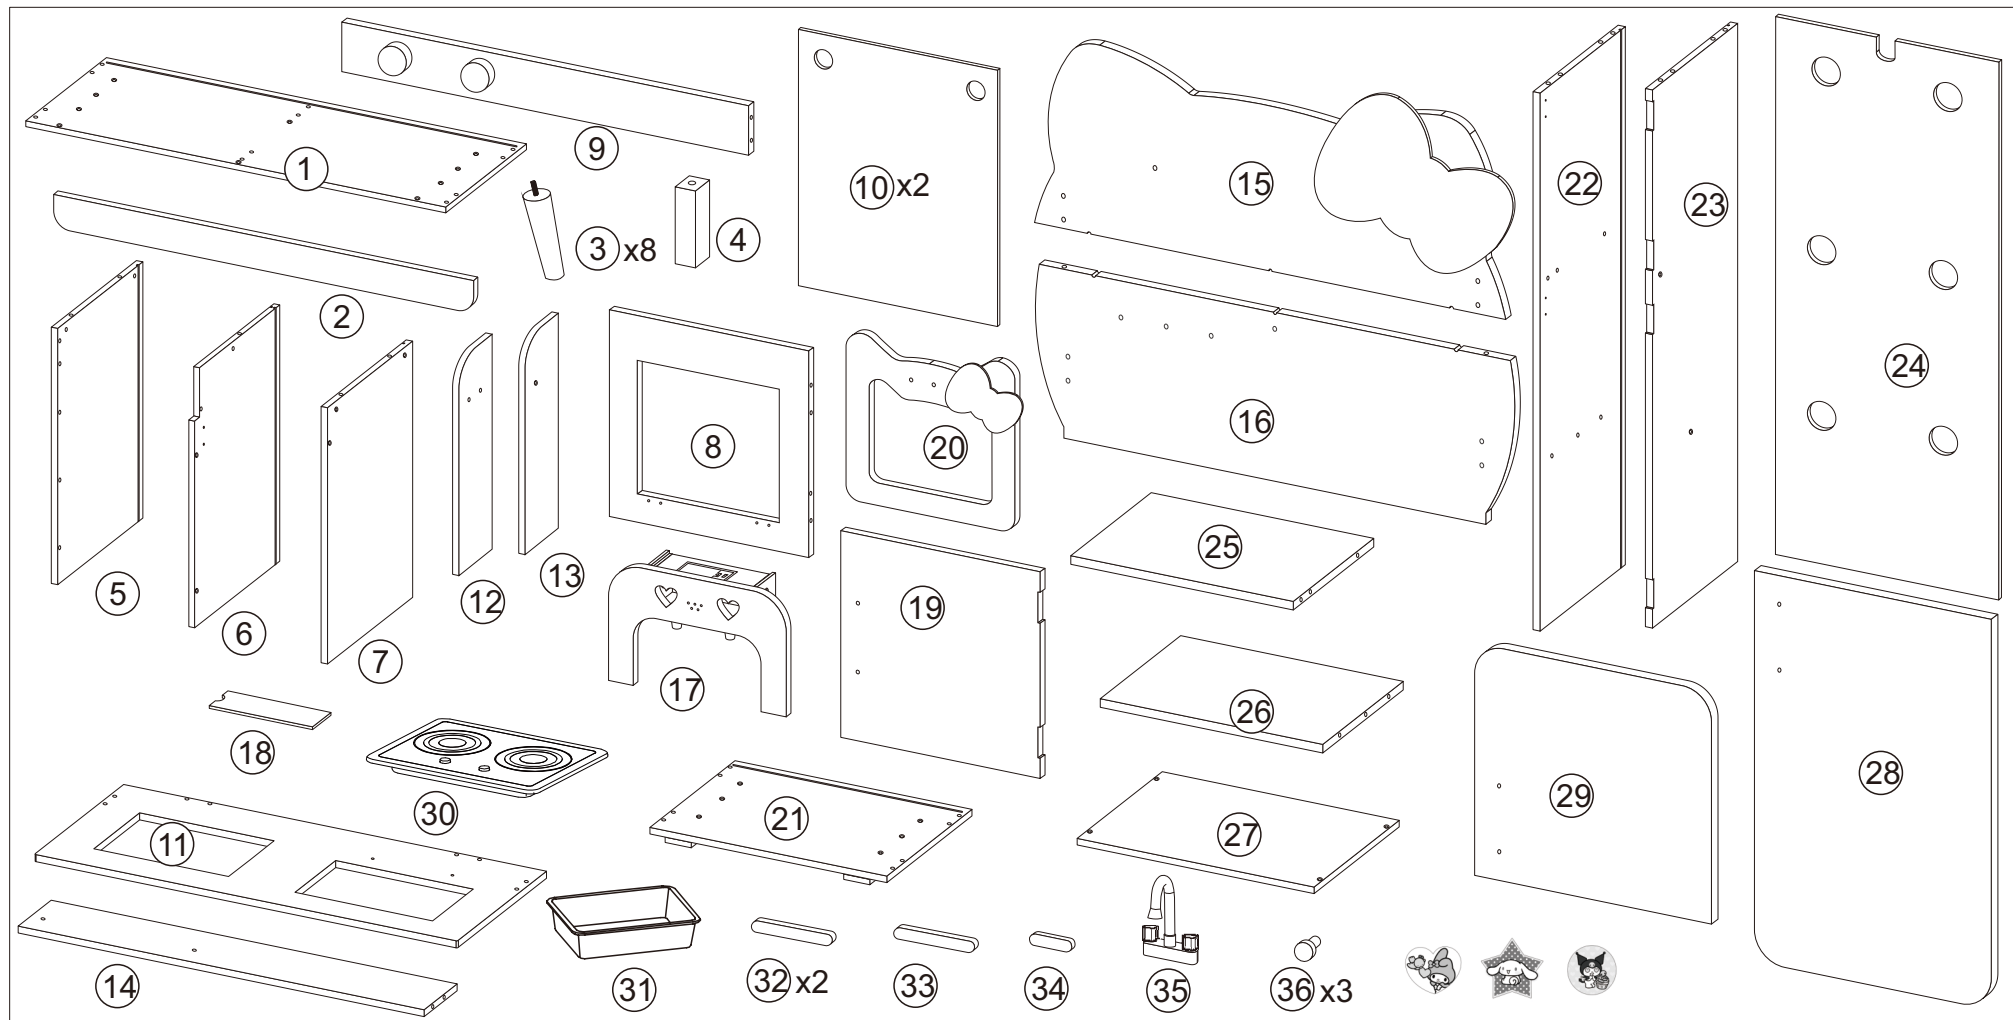

CAUTION:

ADULT ASSEMBLY IS REQUIRED. HARDWARE CONTAINS SCREWS WITH FUNCTIONAL SHARP POINTS. KEEP UNASSEMBLED PARTS OUT OF REACH OF SMALL CHILDREN.

WARNING: THE INSTRUCTION MANUAL HAS TO BE KEPT SINCE IT CONTAINS IMPORTANT INFORMATION.

CAUTION: PLEASE CHECK CONDITION OF PRODUCT REGULARLY, AS SCREWS MAY LOOSEN WITH USE OVER TIME. TIGHTEN SCREW FITTINGS IF NECESSARY. DISCONTINUE USE OF THE ITEM IF EXCESSIVE WEAR AND TEAR IS FOUND.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ and -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

 
 
 
 
 
 
 
WARNING



CHOKING HAZARD-SMALL PARTS.
NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.

THIS IS A TOY, INTENDED
FOR ROLE PLAY ONLY.


WARNING: PLEASE SECURE THIS PRODUCT WITH THE SUPPLIED WALL FIXING. IT IS STRONGLY RECOMMENDED THAT THIS PRODUCT IS PERMANENTLY FIXED TO THE WALL. PLEASE SEEK PROFESSIONAL ADVICE IF YOU ARE IN DOUBT OF WHAT FIXING DEVICE TO USE. REGULARLY CHECK THE ANCHOR IS SECURELY FASTENED.

CAUTION: FOR YOUR SAFETY WHEN ATTACHING THE ANCHOR FIXINGS, PLEASE CHECK ANY ELECTRICAL WIRES OR PLUMBING INSIDE THE WALL BEFORE DRILLING ANY HOLES. IF UNSURE, CONSULT AN EXPERT.

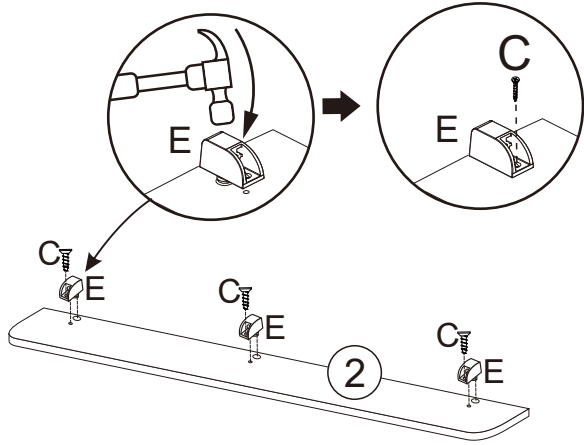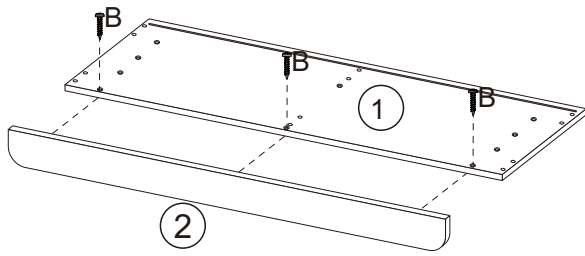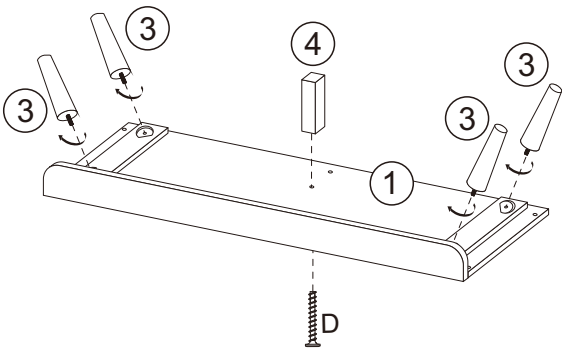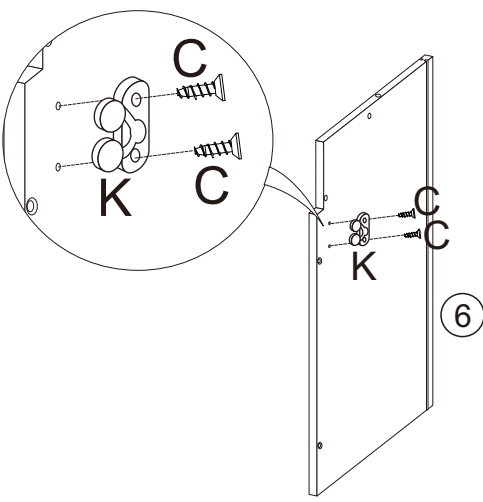
A x43 	M x1 	1 Hammer not included. 	2 
B x17 	N x1 		
C x57 	O x2 		
D x1 	P x1 		
E x9 	Q x1 		
F x45 			
G x4 		3 	4 
H x2 			
I x6 			
J x4 			
K x4 			
L x2 			

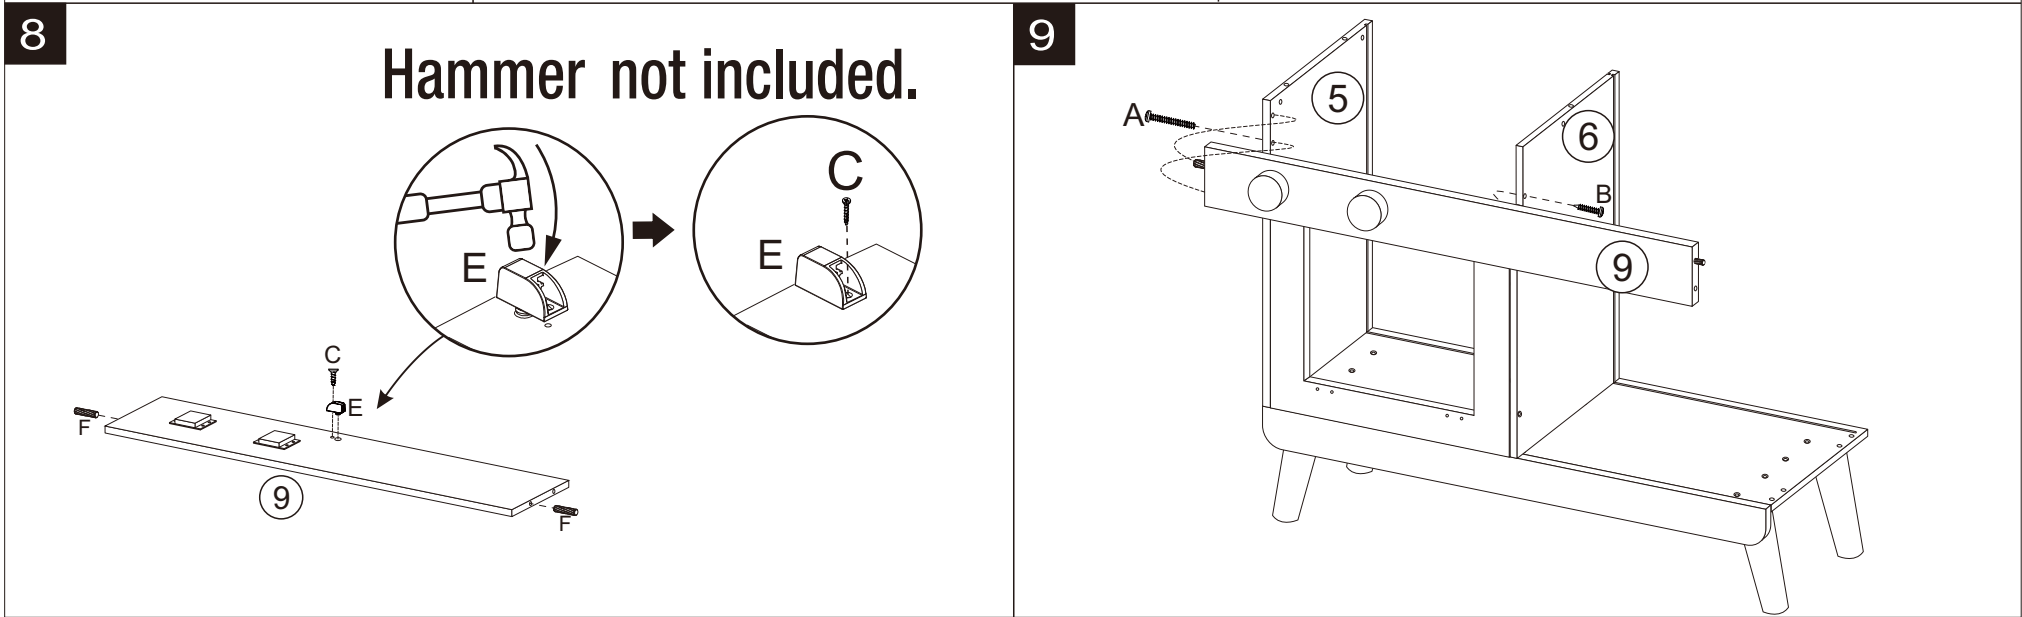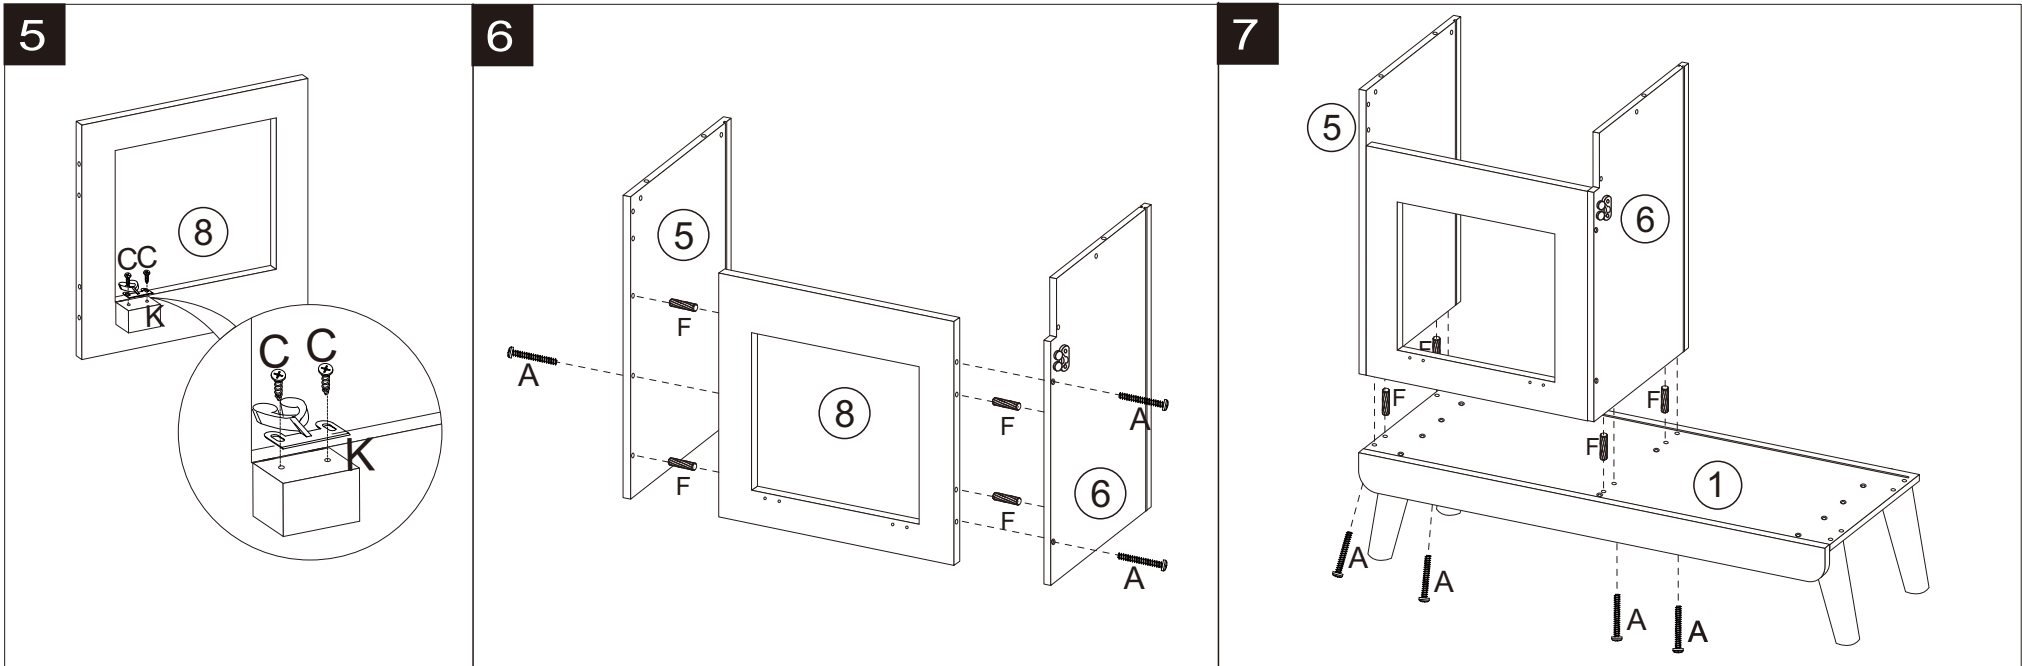  


10

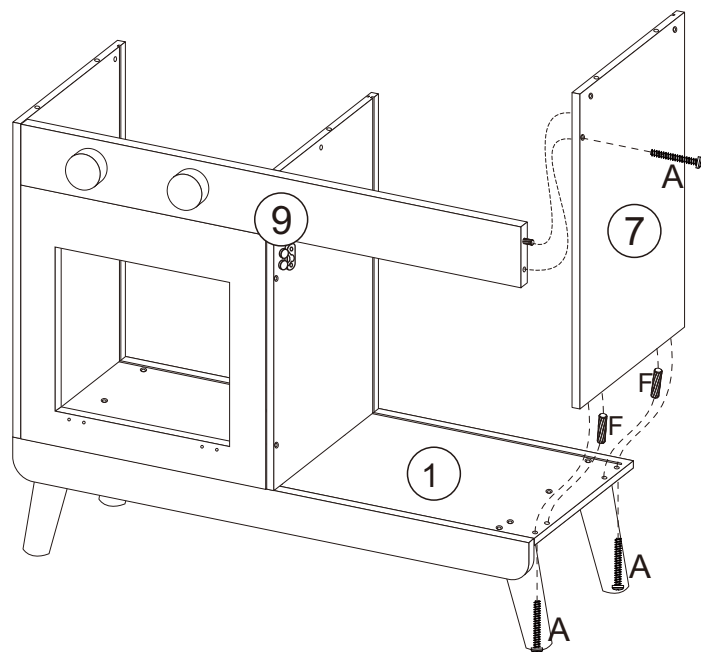 


11

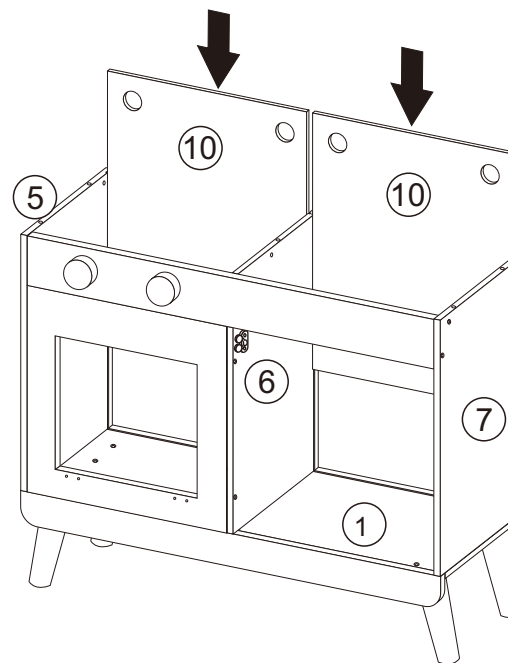 


12

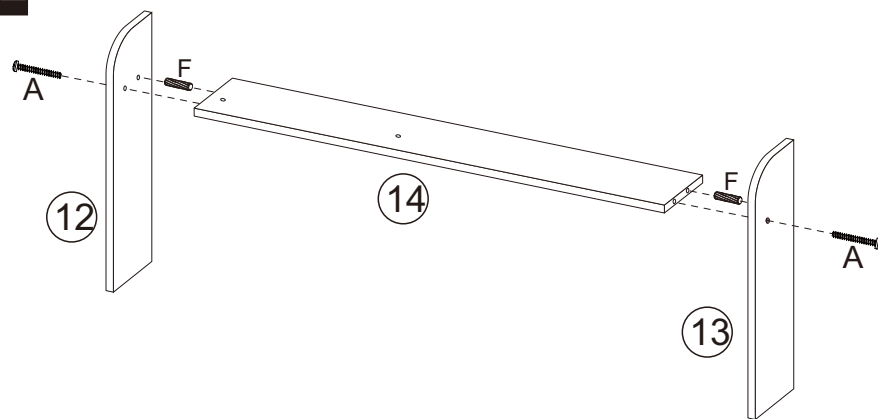 


13

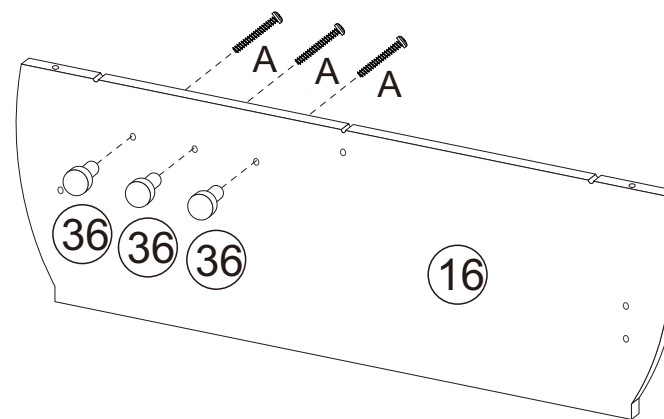 




14

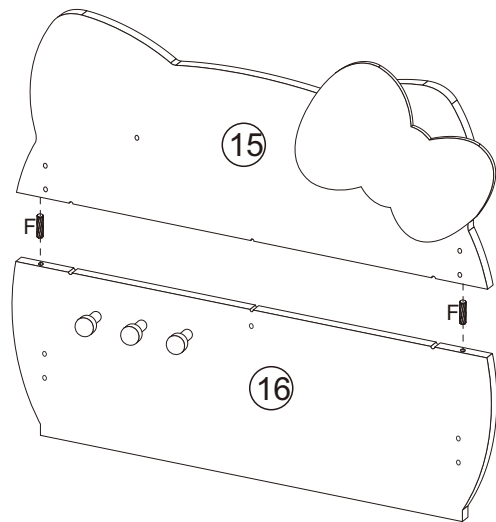 

15

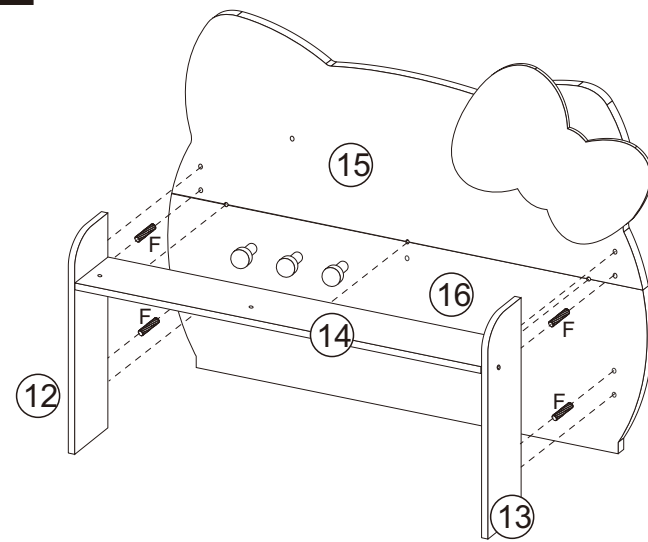 


16

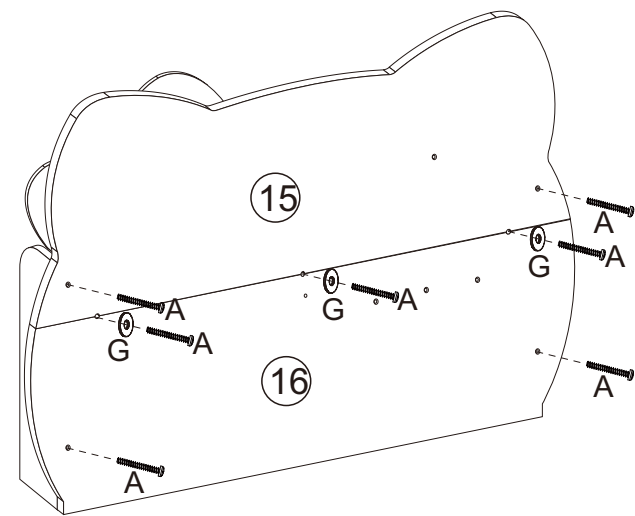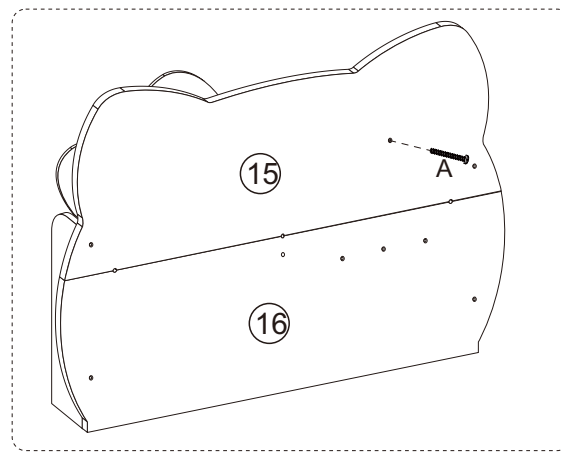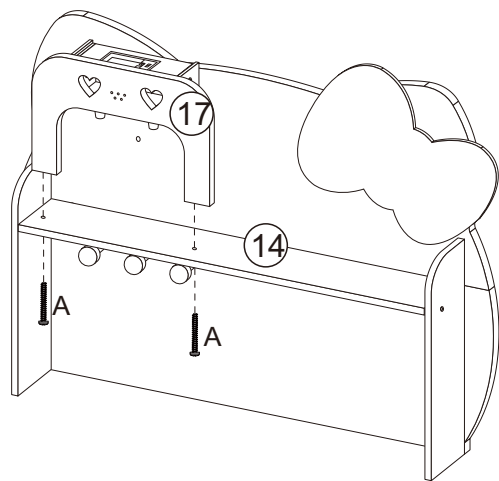   


17

 
Hammer
not included.

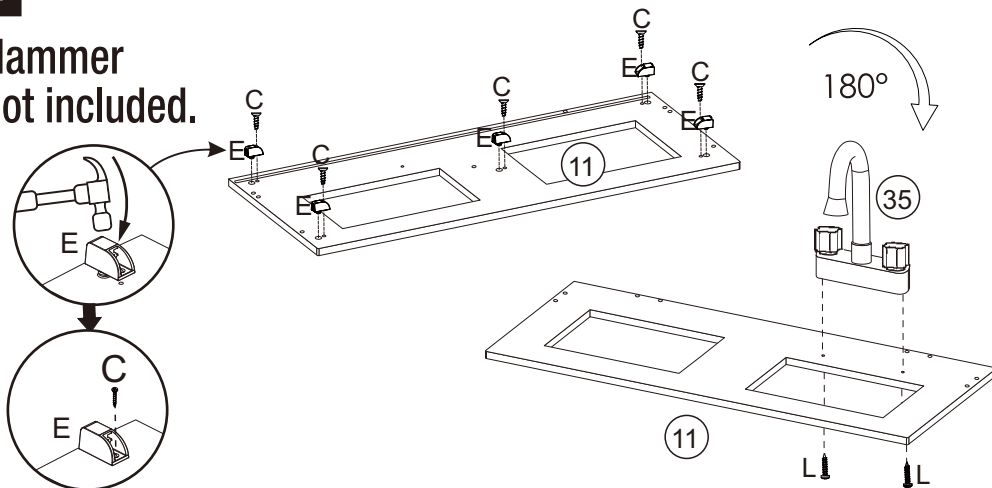


19

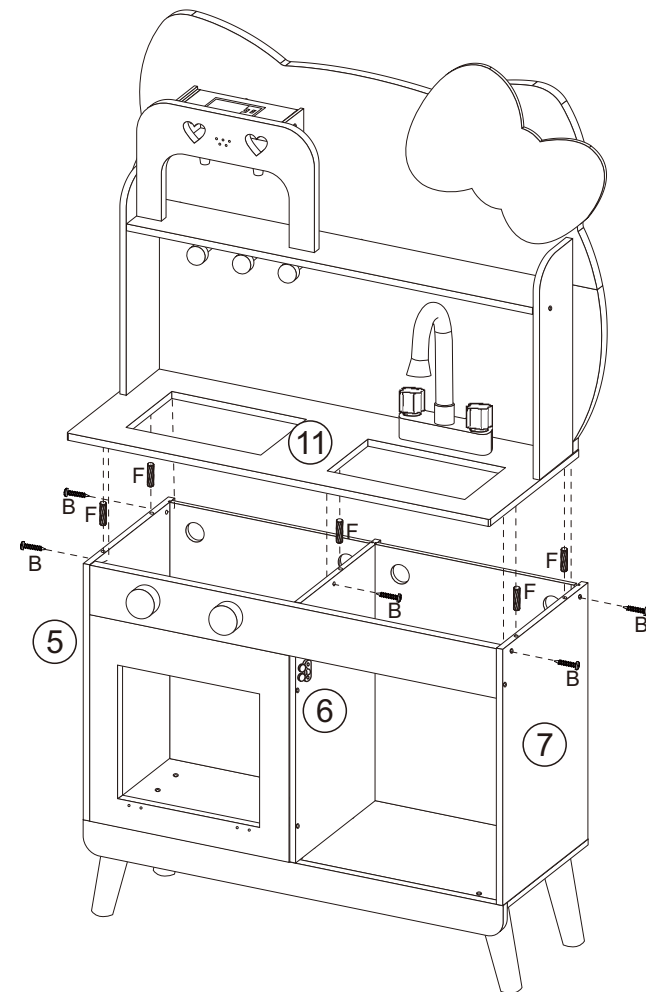 


18




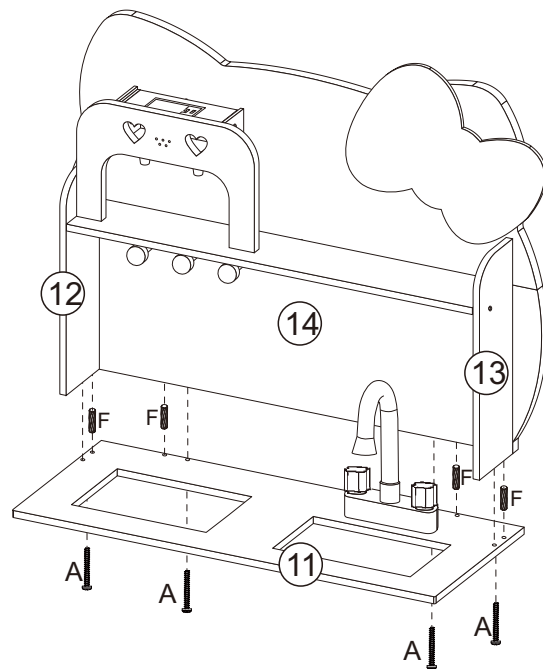 


20


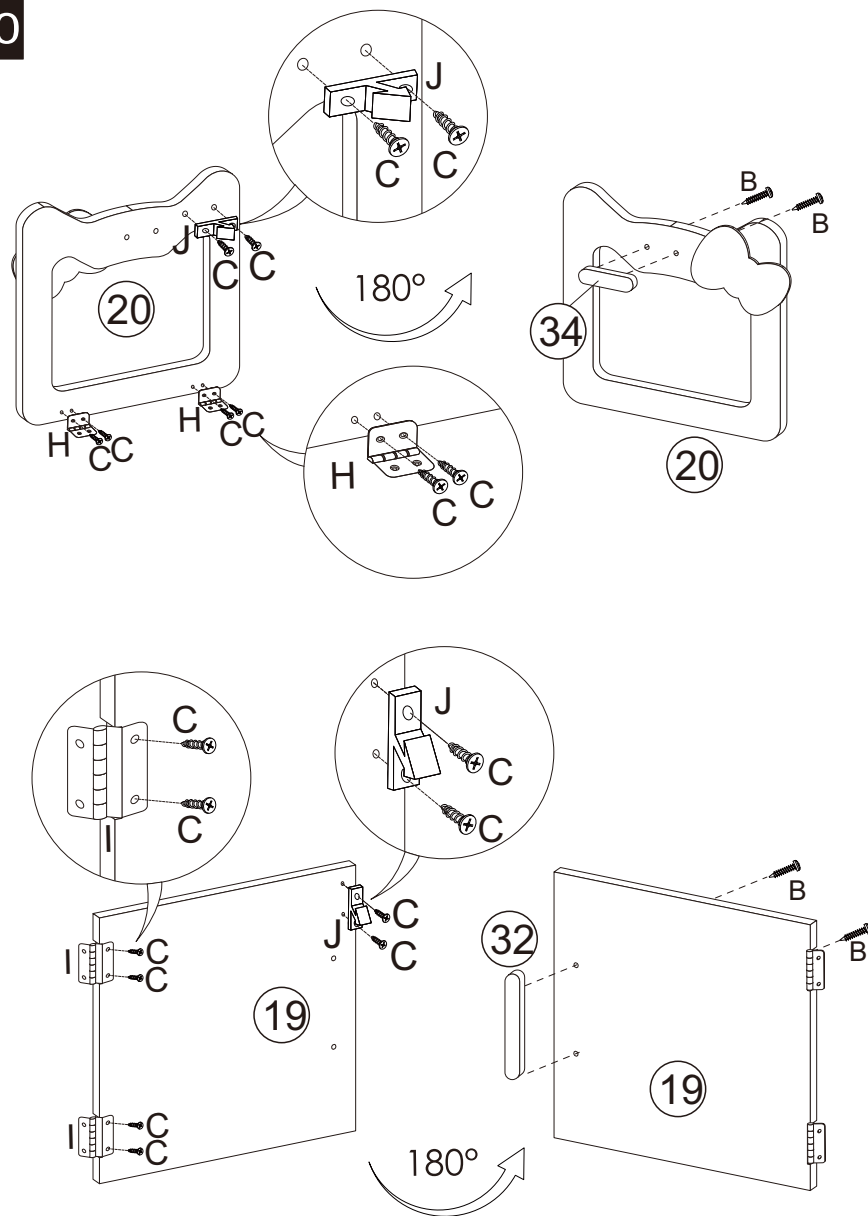 


21

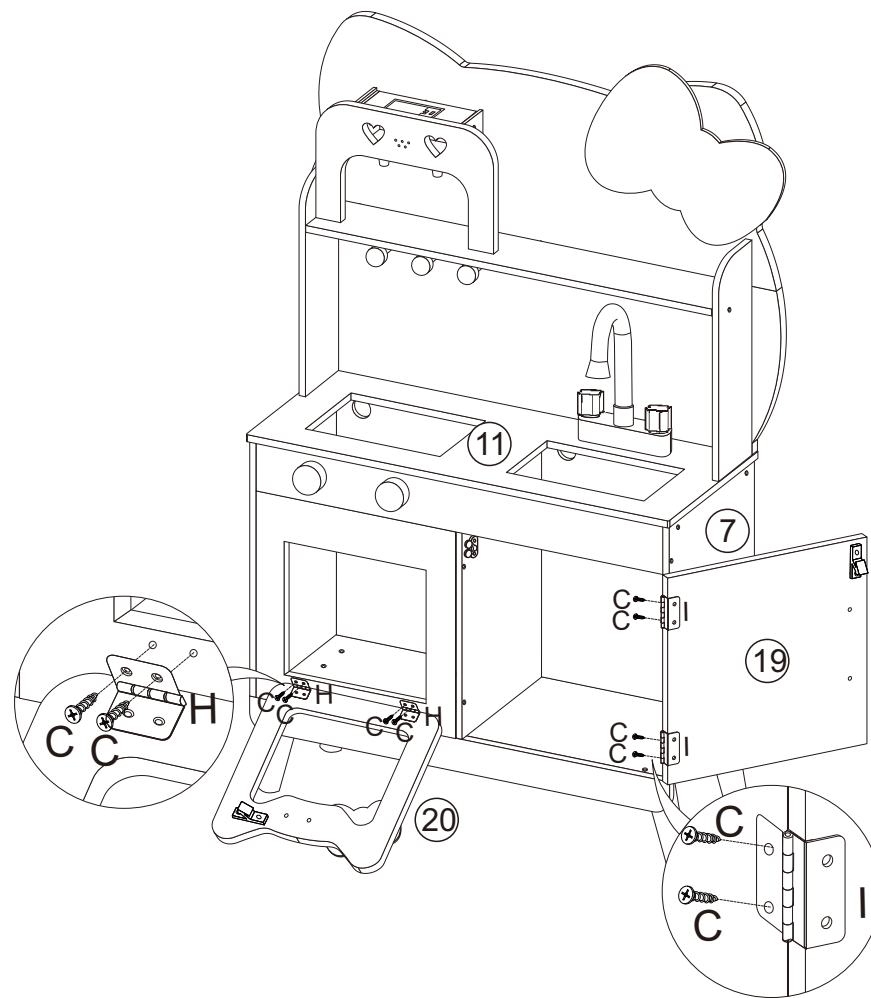 


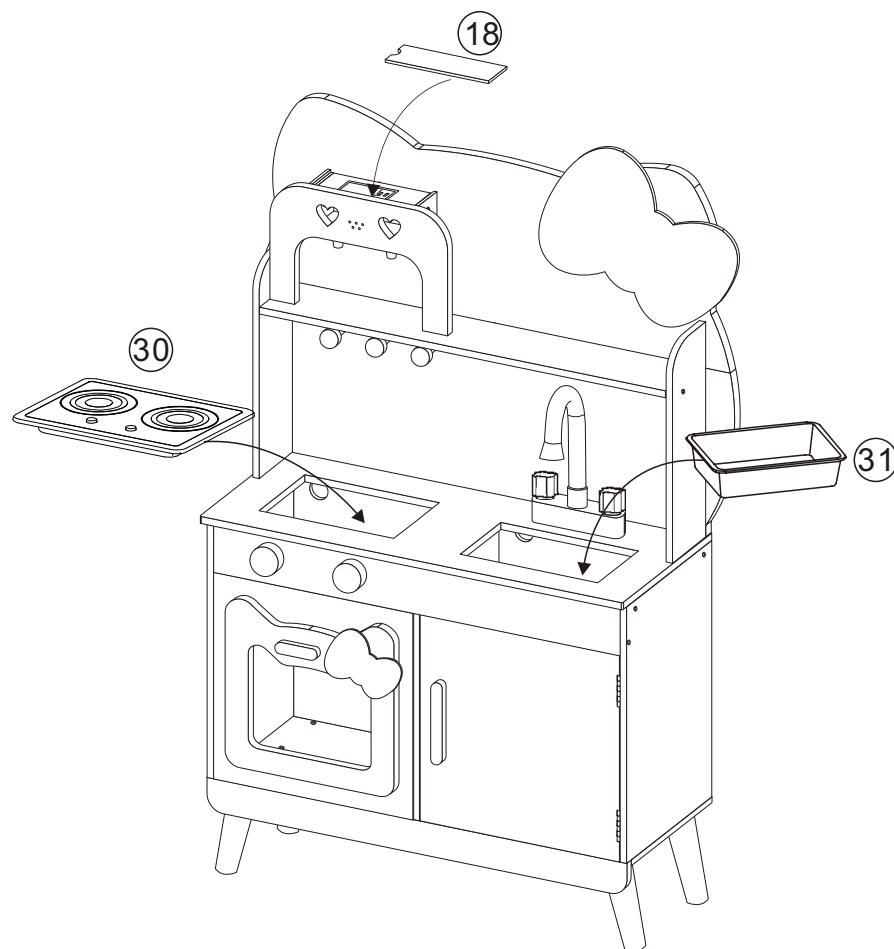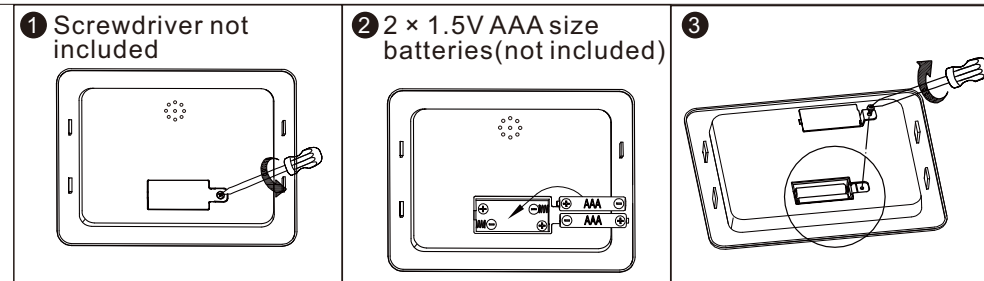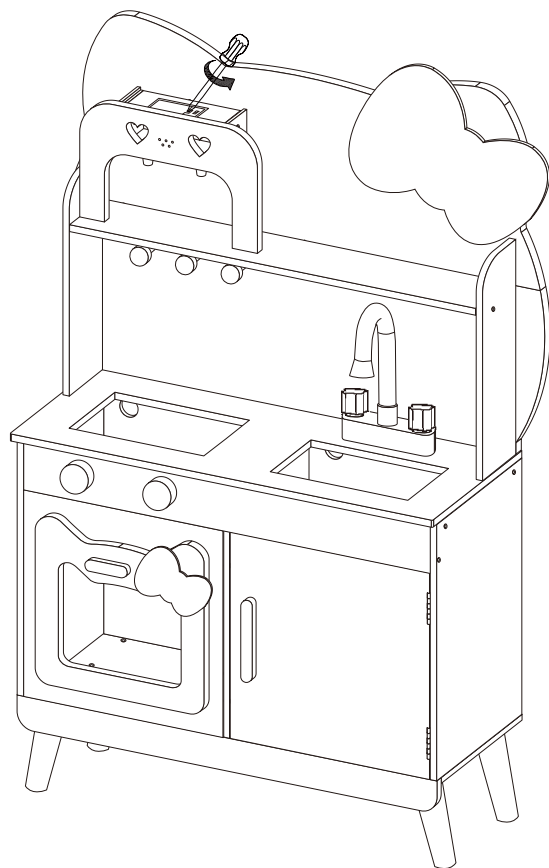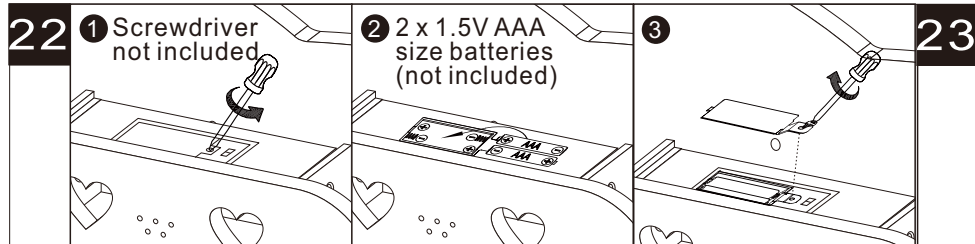    


24

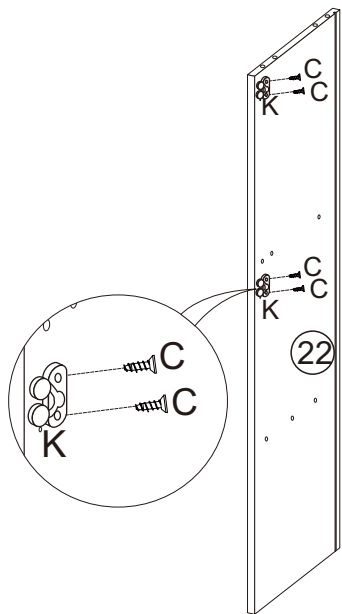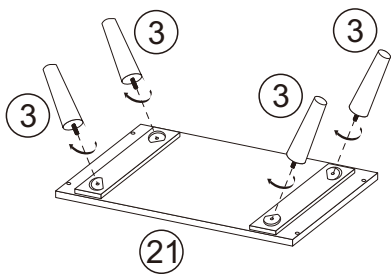  


25

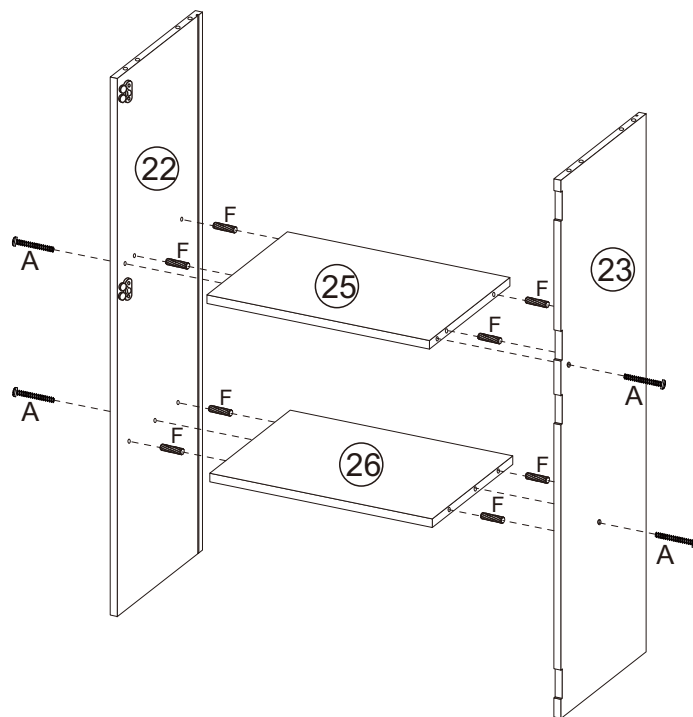 


26

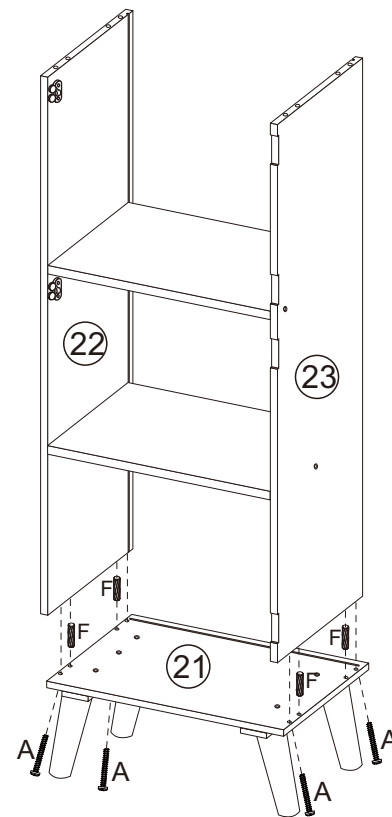 


27

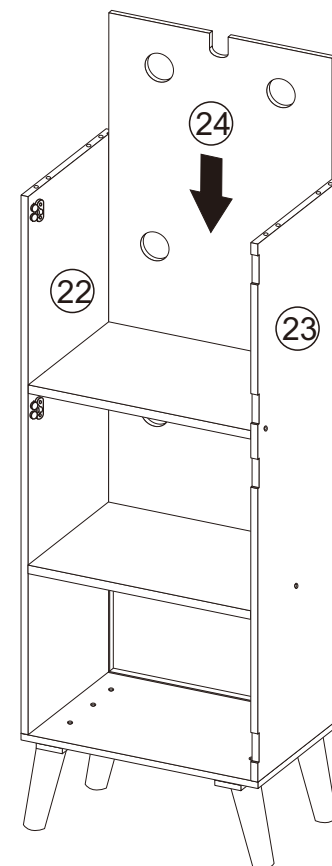 


28

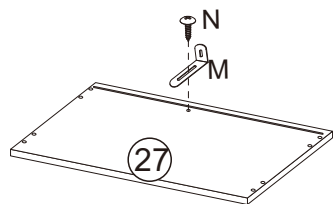 


29

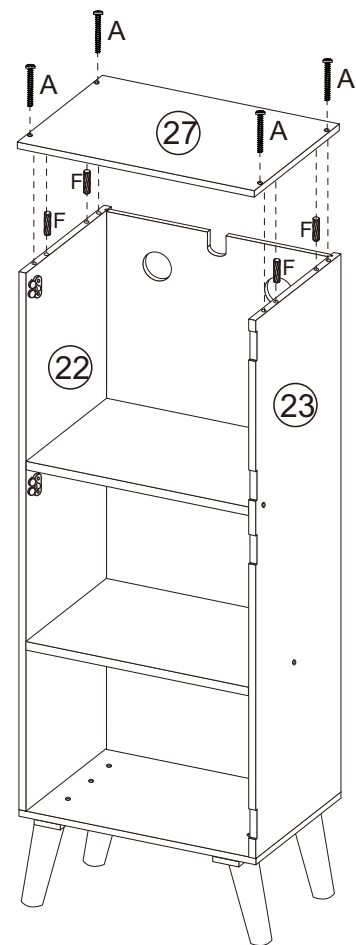 


30

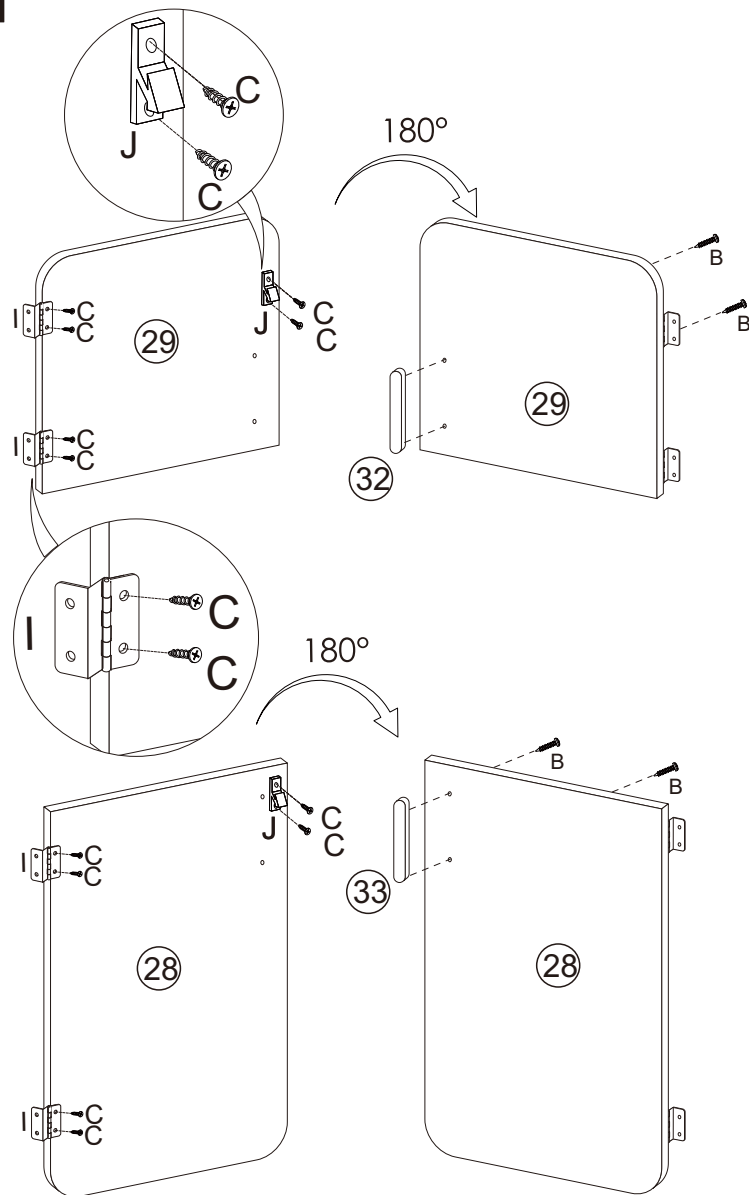 

31

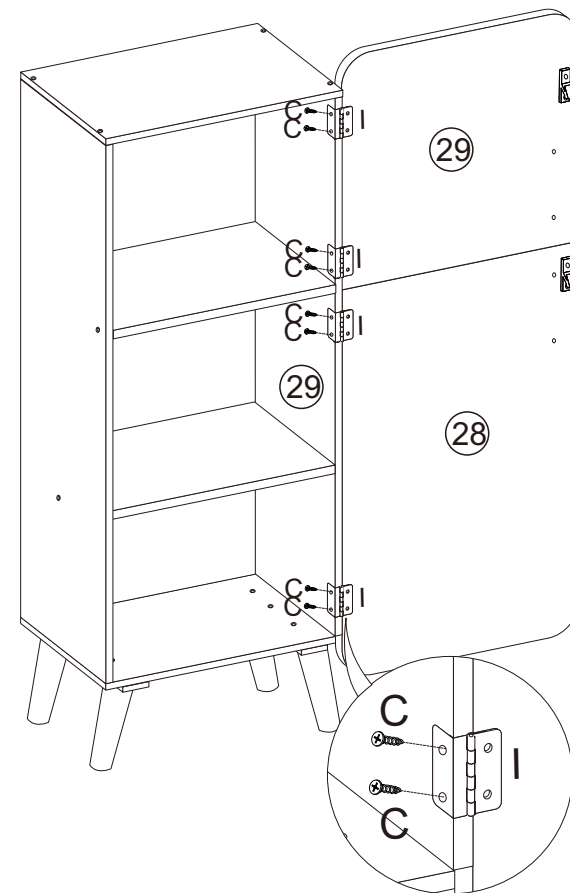 

32

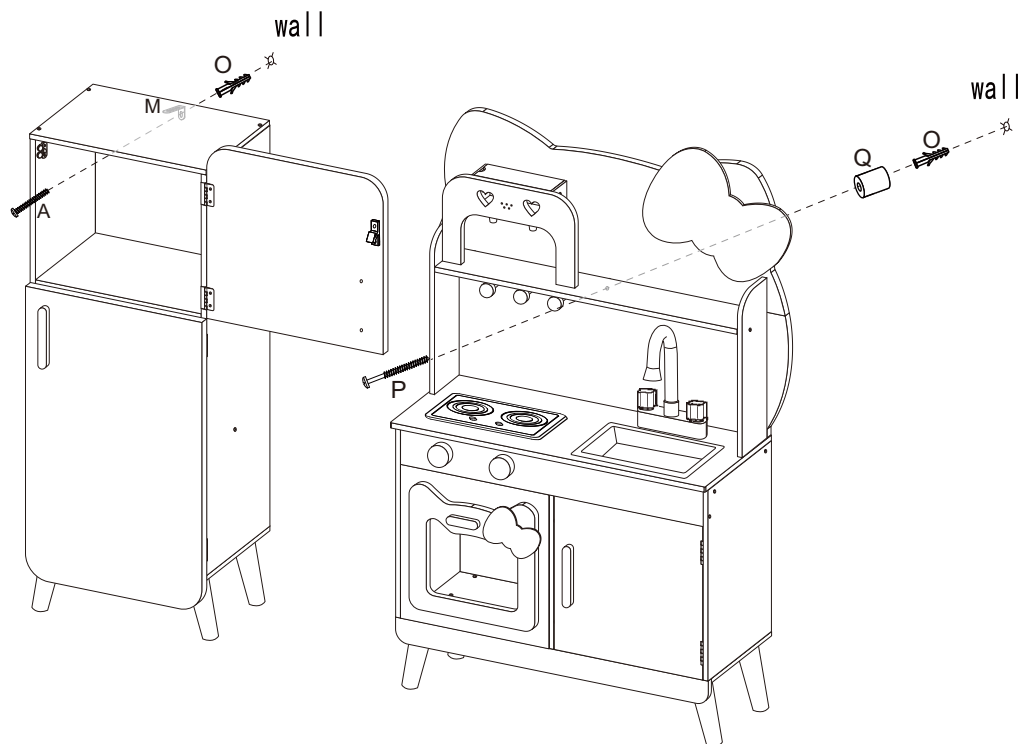 

WARNING: PLEASE SECURE THIS PRODUCT WITH THE SUPPLIED WALL FIXING.
IT IS STRONGLY RECOMMENDED THAT THIS PRODUCT IS PERMANENTLY FIXED TO THE WALL.
REGULARLY CHECK THE ANCHOR IS SECURELY FASTENED.



TOPPLING HAZARD

WARNING: PLEASE SECURE
YOUR PRODUCT WITH
THE SUPPLIED WALL FIXING.
SCAN THE CODE FOR
MORE INFORMATION.



33

