

anko

Portable USB Vacuum Storage Canister
In102-950ml-m
User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.

1. Read all instructions before using this appliance.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they do not play with the appliance.
4. The product is fragile and must be kept properly, please keep the product out of reach of children.
5. Do not store liquid in the canister and never place the vacuum storage canister upside down when there is powder inside.
6. All parts of the appliance are not allowed to be heated.
7. Always turn the appliance OFF and disconnect with the USB cable when not in use, before cleaning or storing.
8. Never use the appliance if the cable, main unit or any part are damaged.
9. Do not store this appliance outdoors. Do not charge the battery outdoors.
10. Use of accessories not supplied with the product may cause fire, electric shock or personal injury.
11. Do not touch the power plug or the product with wet hands.
12. Never immerse the lid in water or other liquids.
13. For electrical safety, any repairs to the product should be carried out by a qualified electrical person only or the product must be disposed of.
14. This appliance must be always used in accordance with the user instructions supplied with the product and must not be used for other purposes.
15. Misuse may cause serious injury.
16. Ensure that the charging cable is not stretched tightly or kinked.
17. The appliance may heat up while it is charging. Place the appliance in a well-ventilated location during the charging process and do not cover it.
18. Do not use solvents, abrasive or aggressive cleaning agents to clean the appliance.
19. The product is equipped with a non-replaceable lithium-ion battery. Do not throw the rechargeable battery into fire and do not subject it to high temperatures. There is a risk of an explosion and or fire!
20. This appliance must only be supplied by AS/NZS 61558.1 & AS/NZS 61558.2.16 certified power supply unit with SELV output voltage corresponding to the marking on the appliance.
21. For information on charging, please refer to “Charge the battery” subsection under BEFORE FIRST USE section.

22. For cleaning, please refer to CLEANING AND STORAGE section.

CAUTION!

23. The product has built-in lithium-ion batteries. Pay attention to the following:

a) Only use and store the product in an environment where the temperature is between -5°C and $+35^{\circ}\text{C}$.

b) If not used for a long time, re-charge every three months to prevent battery damage.

c) Charging time may be longer when the room temperature is below 10°C .


d) Charge the battery when the battery power goes low, avoid allowing the battery to go completely flat.

24. DO NOT squeeze, puncture, or short circuit the product or put it into water, fire or use in an environment where the temperature is higher than 60°C .

25. Do not expose the product to high temperatures (above $+35^{\circ}\text{C}$), strong magnetic fields, near flammable and explosive gases (such as natural gas, methane, etc.) to avoid accidents such as abnormal operation or fire.

**SAVE THESE INSTRUCTIONS
FOR FUTURE REFERENCE**

KNOW YOUR PORTABLE USB VACUUM STORAGE CANISTER

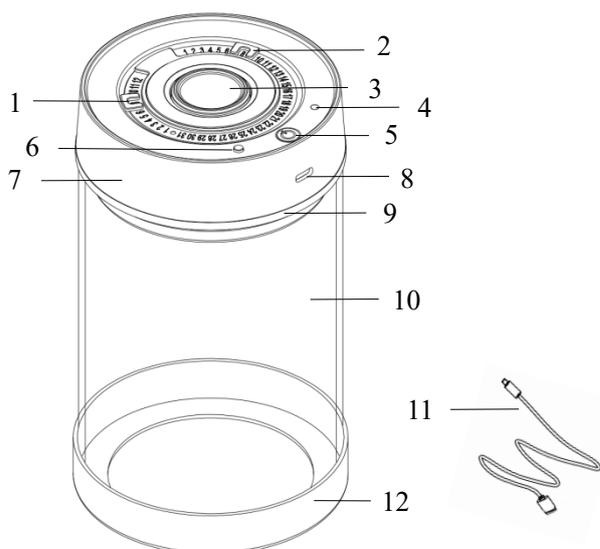

1. Month record mark
2. Date record mark
3. Pressure relief button
4. Indicator light
5. ON/OFF button
6. Red pressure float
7. Lid
8. Charging port
9. Sealing ring
10. Glass canister
11. USB cable
12. Rubber seat

IMPORTANT!

Please make sure that your appliance is received with the right components shown above. Check everything carefully before use. If any parts are missing or damaged, return the product to the place of purchase for replacement.

When using the appliance for the first time, carefully remove all internal and external packaging and dispose them responsibly.

BEFORE FIRST USE

Charge the battery

- Fully charge the appliance before using it for the first time.
- Insert the supplied USB charging cable into a standard USB power source rated at **5V DC, 2A**.

WARNING: Use only the supplied USB charging cable to charge the appliance.

- The indicator light will turn **blue** while charging and will turn **off** once fully charged.
- Charging time is approximately **4 hours**.
- When fully charged, the appliance can vacuum seal up to **700 times**.

Clean the product

- Wipe the lid with a lightly damp cloth, then dry with a soft, dry cloth.

WARNING! Do not immerse the lid in water or any other liquid to clean. Do not put the vacuum storage canister in a dishwasher.

- Dry all components thoroughly before reassembling or using.

USE YOUR PORTABLE USB VACUUM STORAGE CANISTER

This appliance is ideal for storing coffee beans, coffee powder, cookies, tea, spices, nuts, sugar, and any other items you want to keep fresh and preserve flavor.

Important: When storing powder or items with small crumbs, do **not** fill above the **MAX powder line**.

1. Place the item you want to store into the glass canister.
- Place the lid on the canister and press the **ON/OFF** button. The appliance will start vacuum sealing, and the red pressure float will begin to sink.
 - Notes:

Indicator	Indicating
Green (solid)	Appliance is vacuum sealing
Green (flash then off)	The appliance is turned off
Yellow (solid)	Battery low
Red (solid)	The appliance needs to be charged
Red (flashing)	Vacuum sealing failed
Blue (solid)	Appliance is charging

- If vacuum sealing fails, press the **ON/OFF** button to stop the appliance, then try again. Gently press on the lid to ensure the canister is properly sealed while vacuumizing.
- The appliance can be used while charging.

WARNING!

- **Do not store liquid in the canister.**
 - **Never place the canister upside down when there is powder inside.**
2. The appliance will automatically stop vacuumizing when the vacuum pressure is achieved. The appliance will automatically vacuumizing when the container loses vacuum unless you press the ON/OFF button to turn it off.
 3. Mark the storage date on the lid.
 4. To take off the lid, press the ON/OFF button to turn off the appliance. Press and hold the pressure relief button until the red pressure float up.
If the appliance is not turned OFF, it will automatically start working after 20 seconds if the lid is not in a vacuum environment.

CLEANING AND STORAGE

Clean the appliance when refilling. Clean the lid from time to time. Keep the appliance, especially the lid, tidy for better performance and longer life.

- Turn off the appliance before cleaning.
- Clean the lid with a dry moist cloth, wipe dry with a soft dry cloth.

WARNING! Do not immerse the lid in water or any other liquid to clean. Do not put the vacuum storage canister in a dishwasher. Do not use abrasive material to clean the appliance.

- Wash the glass canister and rubber seat with soapy water. Dry all components thoroughly before storage.
- Ensure the product is clean and dry before storage.
- This product contains a Li-ion battery. It should be stored in a clean, dry, ventilated room with an ambient temperature range of -5°C to $+35^{\circ}\text{C}$ and a relative humidity of 25% to 75%.

TECHNICAL SPECIFICATION

Input: 5Vd.c. 2A 10W

Battery: Li-ion 3.7V 2000mAh

MAX storage capacity: coffee beans 950mL, powder 580mL

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product.

Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us