


anko

Foldable USB Handheld Vacuum Cleaner

B-865

User Manual

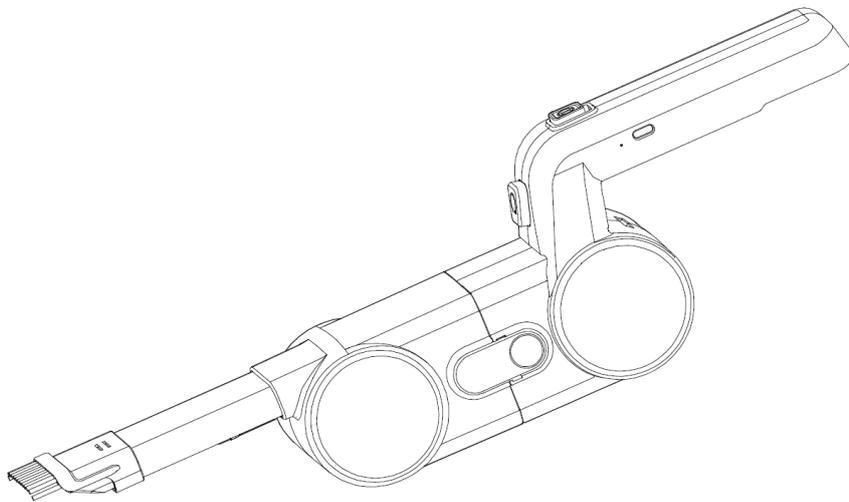

**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.

1. Read all instructions before using this appliance.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they do not play with the appliance.
4. The appliance must only be supplied at standard USB power source rated at 5Vd.c. 2A specification.
5. Always turn the appliance OFF and disconnect with the USB cable when not in use, before cleaning or storing.
6. Never use the appliance if the cable, main unit or any part are damaged.
7. Do not store this appliance outdoors. Do not charge the battery outdoors.
8. Use of accessories not recommended or supplied with the product may cause fire, electric shock or personal injury.
9. Do not allow children to operate or play with the appliance.
10. Do not touch the cable or product with wet hands.
11. Never immerse the appliance in water or other liquids.
12. For electrical safety, any repairs to the product should be carried out by a qualified electrical person only or the product must be disposed of.
13. This appliance must be always used in accordance with the user instructions supplied with the product and must not be used for other purposes. Misuse may cause serious injury.
14. Use the vacuum cleaner only on dry surfaces and avoid using it on wet/moist surfaces.
15. **Remove any obstructions if the brush is blocked.** Ensure to turn the appliance OFF before removing the obstruction.
16. Keep the brush free of fibers, hairs, and other objects that could impede proper functioning.
17. Ensure that the charging cable is not stretched tightly or kinked.
18. The appliance may heat up while it is charging. Place the appliance in a well-ventilated location during the charging process and do not cover it.
19. Switch the appliance off immediately and disconnect any connected cables from the appliance if you hear any abnormal noises, smell fumes or notice any smoke. Have the appliance checked by a qualified electrical person before using it again.
20. Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
21. Do not use without filter in place.
22. Do not vacuum any burning, smoking or flammable objects.
23. Do not vacuum hard or sharp objects to avoid injury when cleaning the dust cup.
24. Do not pick up toxic material (i.e., chlorine bleach, ammonia, drain cleaner, etc.)


25. Do not vacuum Toner (for laser printer, copy machines etc.) as there is a risk of fire and explosion.
26. Do not vacuum plaster dust, cement dust etc. as the filter will block very quick.
27. Do not use it in heated or moist places such as heating room and bathroom.
28. Do not put any object into openings. Do not use with any opening blocked.
29. This product is for household use only and not designed for commercial use.
30. Do not use solvents, abrasive or aggressive cleaning agents to clean the appliance.
31. The product is equipped with a lithium-ion battery. Do not throw the rechargeable battery into fire and do not subject it to high temperatures. There is a risk of an explosion and/or fire!
32. This appliance contains batteries that are non-replaceable.
33. This appliance must only be supplied by certified power supply unit with SELV output voltage corresponding to the marking on the appliance.
34. For cleaning, please refer to CLEANING AND STORAGE section.

CAUTION!

35. The product has built-in lithium-ion batteries. Pay attention to the following:
 - a) Only use and store the product in an environment where the temperature is between -5°C and $+35^{\circ}\text{C}$.
 - b) If not used for a long time, re-charge every three months to prevent battery damage.
 - c) Charging time may be longer when the room temperature is below 10°C .
 - d) Charge the battery when the battery power goes low, avoid allowing the battery to go flat.
36. DO NOT squeeze, puncture, or short circuit the product or put it into water, fire or use in an environment where the temperature is higher than 60°C .
37. Do not expose the product to high temperatures (above $+35^{\circ}\text{C}$), strong magnetic fields, near flammable and explosive gases (such as natural gas, methane, etc.) to avoid accidents such as abnormal operation or fire.

**SAVE THESE INSTRUCTIONS
FOR FUTURE REFERENCE**

KNOW YOUR FOLDABLE USB HANDHELD VACUUM CLEANER

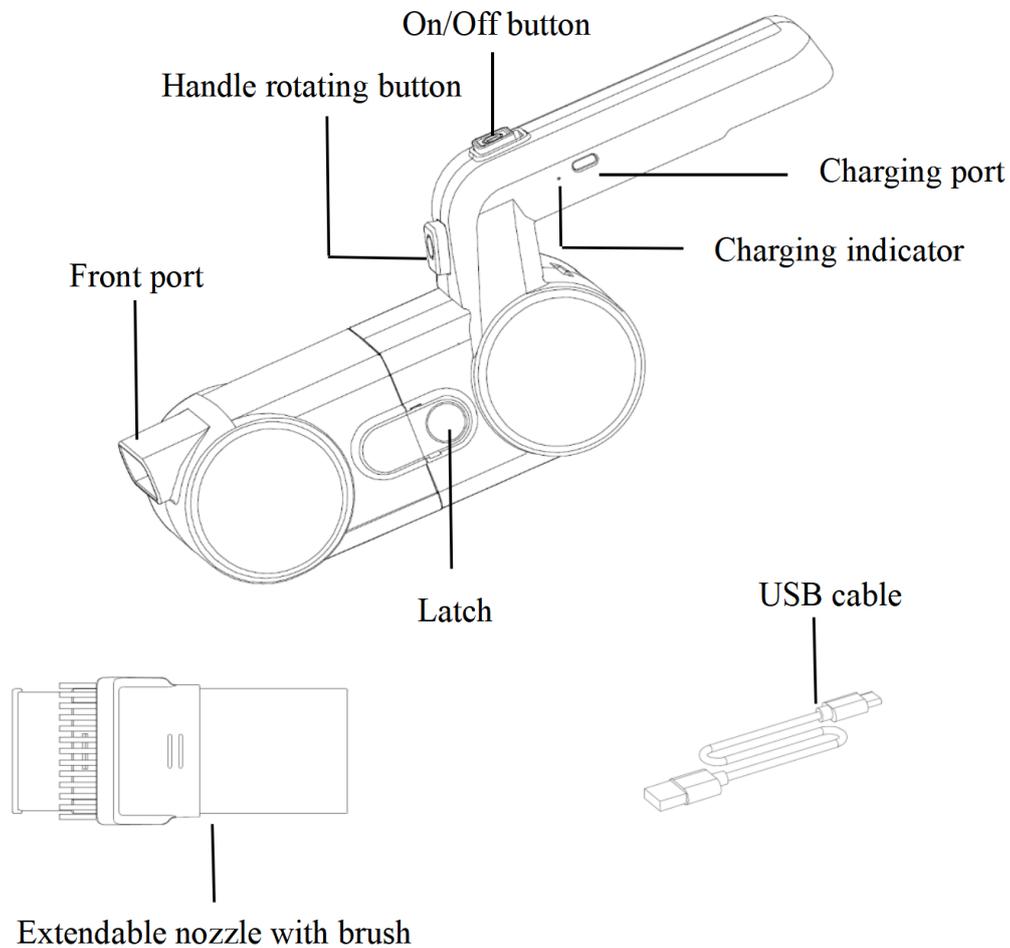

Charge the appliance


- Fully charge the appliance before first use.
- Always power off the appliance before charging.
- **The supplied USB cable should be inserted into the standard USB power source rated at 5Vd.c. 2A specification.**

WARNING: Use only the supplied USB charging cable to charge the appliance.

- Red indicator lights up when charging, and the light gets green when fully charged.
- The charging time is around 3.0 hours.
- Allow the appliance to rest for 20 minutes after 5 minutes use.

How to assemble


1. Slide out the nozzle with brush from the main unit.

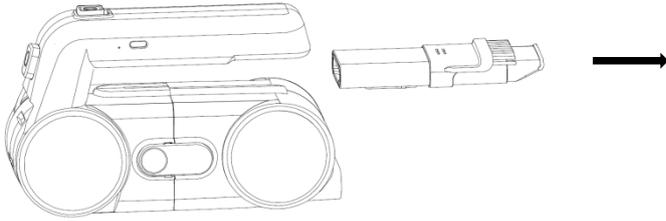


2. Press the handle rotating button to adjust the handle to your desired angle.

3. Adjust the nozzle with brush:


Use as crevice nozzle

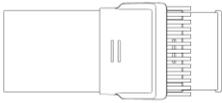


To use the brush, slide out the brush until it been locked.

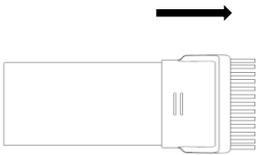

Press and hold the button to extend the crevice nozzle.

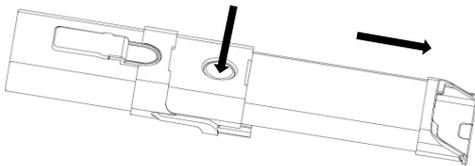

4. Install the nozzle with brush on the front port.

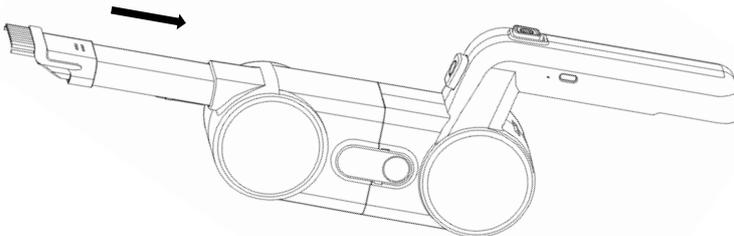

USE YOUR FOLDABLE USB HANDHELD VACUUM CLEANER

Vacuum cleaning


- Push forward/backward the on/off button to start/stop vacuum cleaning.

Warning! Do not use the vacuum cleaner without the HEPA filter and dust container in position.

Empty the dust

To maintain optimum performance, the dust container must be emptied regularly. Empty the dust container if there is a reduction in suction power.

- Push the latch and take out the dust cup.
- Pull out the filter assembly and empty the dust cup.
- Clean the individual parts with a soft, damp cloth, dry thoroughly.

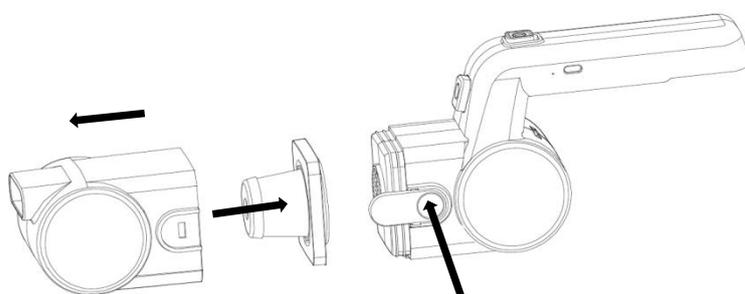

IMPORTANT! Ensure that the filter assembly is installed in the dust cup before attaching the dust cup to the main unit after emptying the dust.

CLEANING AND STORAGE

- Remove hair and fibers from the brush.
- Pat off the dust in the paper filter.
- Use a dry cloth to clean the product including all the parts.

Do not use abrasive material to clean the appliance.

Do not immerse the appliance in water or any other liquid.

- Ensure the product is clean before storage.
- Store the product indoors.
- This product contains a Li-ion battery. It should be stored in a clean, dry, ventilated room with an ambient temperature range of -5°C to $+35^{\circ}\text{C}$ and a relative humidity of 25% to 75%.

TECHNICAL SPECIFICATION

Input: 5Vd.c. 2A

Battery: Li-ion 7.4V 1800mAh

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us