

anko

Cordless Turbo Handheld Vac User Manual



Model No.: EV-H080-S111

Rev 1

The specifications and/or components of this product are subject to change without prior notice.

If any accessories should fail during use, please call 1300 105 888 (Australia) or 09 8870 447 (New Zealand) for an immediate replacement. This will save you from returning the product to the store.

If we can assist you in any other way, please feel free to contact us.

**PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE APPLIANCE AND
SAVE IT FOR FUTURE REF**

1	Warnings	4
2	Important Safety Information	4
3	Components	7
4	Charging	8
5	Operation	9
	Vacuum Mode	9
	Blower Mode	11
6	Care & Maintenance	12
7	Troubleshooting	13
8	Replacement Filters	14
9	Specifications	14
10	Warranty Information	15

1 Warnings



Read all instructions thoroughly before use, even if you are familiar with this type of product.



This product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the product or the USB cable.

Ensure children and babies do not play with plastic bags or packaging materials. Dispose of plastic bags or packaging materials safely.

No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling of the product or USB cable.

The Appliance must only be supplied at Safety Extra Low Voltage “SELV”.

Consumers are cautioned against trying to replace the battery. Using and/or purchasing counterfeit and/or inferior quality batteries have the potential to cause fire, personal injury, and/or damage to property. These batteries are typically found on online-auction websites or from other retailers and are known to pose a potential safety risk.

- Batteries may explode if disposed of in fire.
- The battery is not replaceable. Do not open the Appliance.

2 Important Safety Information

General use

- For indoor household use only.
- Use only the accessories and attachments intended for this product.
- Do not immerse the product in water or any other liquid.
- Do not use the product if it has been dropped into water or is damaged.
- Stop using the product immediately if it emits smoke or has a burning smell.
- Use in temperatures from 0°C to 40°C.
- Use on dry surfaces only. Do not pick up water or other liquids.
- Make sure the air inlet is never blocked.
- Use the product only with the dust bin and filter fitted.
- Clean and dry parts completely before refitting (see **Care & Maintenance**).

Do not pick up:

- Anything burning or smoking (for example: cigarettes, matches, hot ashes).
- Flammable or combustible liquids (for example: petrol/solvents), or use in areas where their vapours may be present.
- Sharp or hard objects (for example: glass, pins, nails).
- Fine construction dust or debris (for example: cement, plaster/drywall dust), which can block the filter and affect performance.

Handling and storage

- Keep away from heat sources. Do not leave in direct sunlight.
- The product may not stand upright on its own. When pausing or storing, lay it flat on a stable surface.
- Store in a cool, dry place.

Charging Safety

- Charge using the supplied USB cable only.
- Use a standard 5V 2A USB power adapter to charge the product.
- Check the USB charging cable and connector regularly. Do not use them if they are damaged.
- Do not touch the plug, connector, or power adapter with wet hands.
- Keep the charging cable and USB power source away from water.
- Power off the product before charging.
- Do not use the product while it is charging.
- Disconnect the product from the USB power source when fully charged and when not in use.
- Unplug by holding the connector. Do not pull the cable.
- Do not leave the product charging unattended.



At the end of the appliance's life, it must be disposed of correctly.

This appliance contains a battery that is non-replaceable, and as the battery is non-replaceable, the entire appliance must be recycled.

Contact your local waste management authority for more information on battery recycling and disposal regulations in your area.



This symbol on the product or its packaging indicates:

Do not dispose of electrical appliances or batteries as unsorted municipal waste, use separate collection facilities. Contact your local council for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. Please contact your local council or regional authority for more information on collection, reuse, and recycling programmes.

3 Components



No.	Part
1	Main Unit with Trigger
2	Wide-Mouth Nozzle/ Extension Tube
3	Crevice Nozzle
4	Brush Nozzle
5	Dust Canister with Filter
6	Nozzle Holder
7	USB Charging Cable

Notes

- The nozzle holder can be fitted to the front (suction inlet) or rear (air outlet) of the main unit. When fitted to the rear, it acts as a blower connector.
- USB power adapter is not supplied.

4 Charging

Note: Fully charge the unit before first use.

- The USB-C charging port is located on the base of the handle.
- Recharge when suction becomes noticeably weaker.
- To charge, connect the supplied USB cable to the charging port and a 5V 2A USB power adapter with a USB-A port (not supplied).
- A full charge may take up to 3 hours using a 5V 2A USB power adapter.



- **Charging Status:**

Charging	Indicator blinks red.
Fully charged	Indicator glows green, then turns off after 30 minutes.

IMPORTANT:

- The unit cannot be used while it is charging.
- It may become warm during charging; this is normal.
- Disconnect the USB charging cable once charging is complete.
- For optimal charging speed, ensure your USB power adapter is rated for 5V 2A. Lower-rated USB chargers (like laptop ports) may result in slower charging.

5 Operation

Vacuum Mode


- **Assemble Dust Canister:** Align the dust canister (with the filter fitted) with the front of the main unit and twist it clockwise until it locks into place.



- **Insert Nozzle Holder:** Line up the ▼ symbol on the nozzle holder with the unlock “🔓” symbol on the dust canister, then twist clockwise to the lock “🔒” symbol until it locks into place.



- **Attach a nozzle:** Select the desired nozzle, then align the notch on the nozzle with the nozzle holder and slide it in until secure.

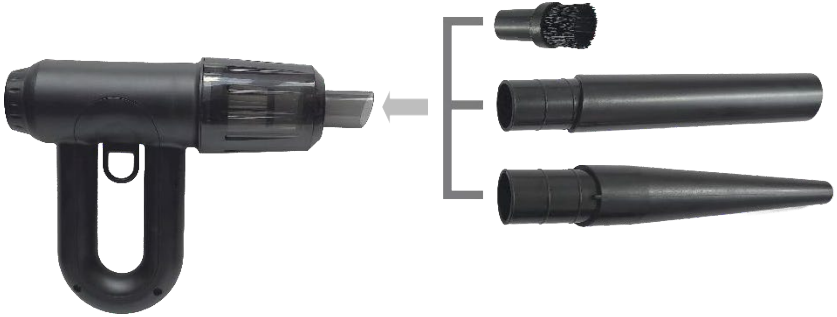

- **Powering On and Off:**

- Pull the trigger briefly to turn the unit on. The indicator light turns green while the unit is running.
- Pull the trigger briefly a second time to enter Turbo (maximum power) mode. Please note that Turbo mode reduces battery run time.
- Pull the trigger briefly a third time to turn the unit off.



Blower Mode


- **Reconfigure the unit:** Remove the nozzle holder from the front (dust canister) by twisting it to the unlock “🔒” symbol. Insert it into the rear (air outlet) of the main unit and twist it clockwise until it locks into place.

Note: Leave the dust canister fitted.

IMPORTANT: Do not point toward eyes or face. Avoid blowing dust toward people or pets.



- **Attach a nozzle:** Select the desired nozzle, then align the notch on the nozzle with the nozzle holder and slide it in until secure.

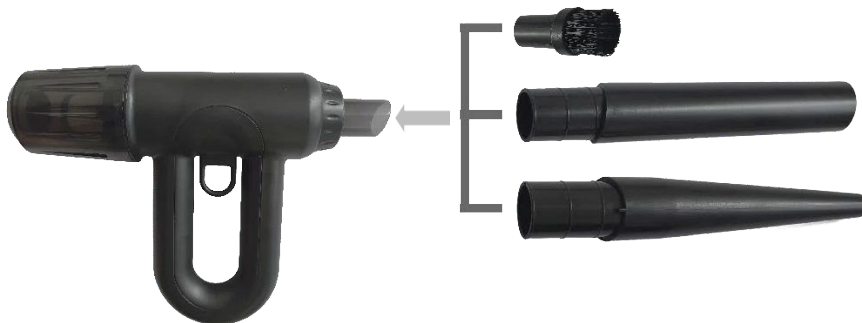

- **Powering On and Off:**

- Pull the trigger briefly to turn the unit on. The indicator light turns green while the unit is running.
- Pull the trigger briefly a second time to enter Turbo (maximum power) mode. Please note that Turbo mode reduces battery run time.
- Pull the trigger briefly a third time to turn the unit off.

6 Care & Maintenance

Keep your vacuum performing at its best with regular maintenance.

Body and attachment care

Wipe the exterior with a soft, dry cloth. Remove any hair or debris from openings. Do not allow water to enter the charging port.

Cleaning the dust canister and filter

Empty the dust canister regularly, and clean the filter whenever you notice a drop in suction.

- a. Twist the dust canister counterclockwise to remove it from the main unit.
- b. Pull the filter straight out of the dust canister using the filter handle.



- c. Empty the dust canister into a bin.
- d. Remove loose dust from the filter by tapping it gently over a bin.
- e. Wash the filter with clean water, then rinse.
- f. Wipe the dust canister with a soft, slightly damp cloth. Do not scrub or place it in a dishwasher. Do not use detergents or abrasive cleaners.
- g. Dry the filter and dust canister completely before reinstalling.

IMPORTANT:

- Do not use the vacuum without the dust canister and filter fitted.
- Refit parts only when completely dry.
- Keep moisture away from the charging port.
- Never submerge the main unit.

7 Troubleshooting

Problem	Possible Cause	Solution
Unit will not power on	Unit is charging	When the unit is fully charged, unplug the USB charging cable
	Battery protection mode activated. Indicator light blinks red 3 times	Allow the unit to cool down. This may take up to 30 minutes
Indicator does not blink red while charging	USB charging cable is not securely plugged in	Make sure the USB charging cable is not loose
	Faulty or incompatible charger	Try a different USB power adapter
Noisy operation	Dust canister is full or the filter is blocked	Empty the dust canister and clean the filter
	Air passage is blocked	Check the nozzle for blockage
Suction is not strong	Dust canister is full / Filter is blocked	Empty the dust canister and clean the filter
	Battery is running low	Fully charge the battery
	Air passage is blocked	Check nozzle for blockages.
	Vacuum speed is in standard mode	Use "Turbo" mode for maximum suction power
Unit stops during use	Battery is flat	Fully charge the battery
	Battery protection mode activated. Indicator light blinks green 5 times	Allow the unit to cool down. This may take up to 30 minutes

8 Replacement Filters

If the filter is broken or worn, replace it before continuing to use the vacuum.

To purchase replacement filters, contact Customer Service:

Australia: 1300 105 888

New Zealand: 09 8870 447

Email: info@hegroup.com.au

9 Specifications

Model	EV-H080-S111
Battery Type	11.1Vd.c. 2200mAh Li-ion
Rated Voltage	11.1V
Rated Input	5 V=2 A
Charging Time	Up to 3 hours
Operating Temperature	0° – 40°C
Waterproof Level	IPX0

10 Warranty Information

12-month warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148 AUSTRALIA Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd. C/- Customer Service Centre L2/ 1 MIDDLE ROAD, CHADSTONE VIC 3148 AUSTRALIA Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

IMPORTANT! For all technical queries or difficulties in operating the product and for spare parts, contact H.E. Group customer service 1300 105 888 (Australia) and 09 8870 447 (New Zealand).