



Electric Frypan

HP2501

User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.

1. Switch off and unplug the appliance from the mains power outlet when not in use, before attaching or detaching parts and before cleaning. Remove by grasping the plug, do not pull on the cord.
2. Never immerse the main unit and temperature controller with power plug and cord in water or any other liquid.
3. Never reach for an appliance that has fallen into water. Switch off the circuit breaker of your house immediately and unplug the appliance.
4. Do not cover the appliance whilst in operation. Do not use the appliance in enclosed spaces without proper ventilation.
5. When removing the lid during cooking, open the lid away and angle away from your body.
6. If the appliance or power plug and cord is damaged, it must be replaced by a qualified electrician, or the product must be disposed of.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
8. Children should be supervised to ensure that they do not play with the appliance.
9. Close supervision is necessary when the appliance is used by or near children or infirm persons.
10. **WARNING: Keep the appliance out of reach from young children, particularly during use and when cooling down after use.**
11. Do not leave the appliance unattended when in use or when connected to mains power.
12. Do not let the cord touch hot surfaces, become knotted or hang from the edge of bench tops.
13. Do not place this appliance on or near a hot gas or electric burner, or where it could touch a heated oven.
14. Keep the unit clear of walls, curtains, and other heat sensitive materials (leave a minimum clearance of 20cm from the sides and back of the appliance).
15. Do not use the appliance for any other purpose than described in this manual.
16. Before connecting the appliance to the power supply, check that the voltage indicated on the appliance corresponds with the voltage in your home. If this is not the case, DO NOT use the appliance.
17. This appliance is not intended to be operated by means of an external timer or a separate

remote-control system.

18. The use of accessories not recommended by the appliance manufacturer may cause serious injury and/or damage to the appliance.
19. Only the appropriate temperature control probe CTW300B supplied with the appliance should be used for safety.
20. This appliance is for household use only, not for commercial use. Do not use in moving vehicles or boats. Do not use outdoors.
21. This appliance is intended to be used indoors in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments,
 - farmhouses,
 - by clients in hotels, motels and other residential type environments,
 - bed and breakfast type environments.
22. Hot steam is released through the steam outlet during operation. To avoid scalding, keep a safe distance from the steam outlet.



CAUTION! Hot surfaces. Do not touch the appliance during use or immediately after use, the appliance gets very hot. Always use the handles. Do not attempt to move the appliance during use or with hot food inside.

23. For cleaning, please refer to CLEANING AND STORAGE section.


IMPORTANT!

24. Use the appliance only on a dry, level, stable, and heat-resistant surface only, away from any edges.
25. Do not use the appliance under overhead cabinets or presses. The hot steam may cause damage to glass splashbacks, cabinets or presses.
26. This appliance must be connected to a three-point power outlet socket connected to Earth. If unsure, check with an electrician.
27. Always unplug the power cord from the mains power outlet socket when the appliance is not in use.
28. Always allow the appliance to cool down completely before cleaning.

WARNING! To prevent risk of severe personal injury and/or property damage, use extreme caution when cooking.
--

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

KNOW YOUR ELECTRIC FRYPAN

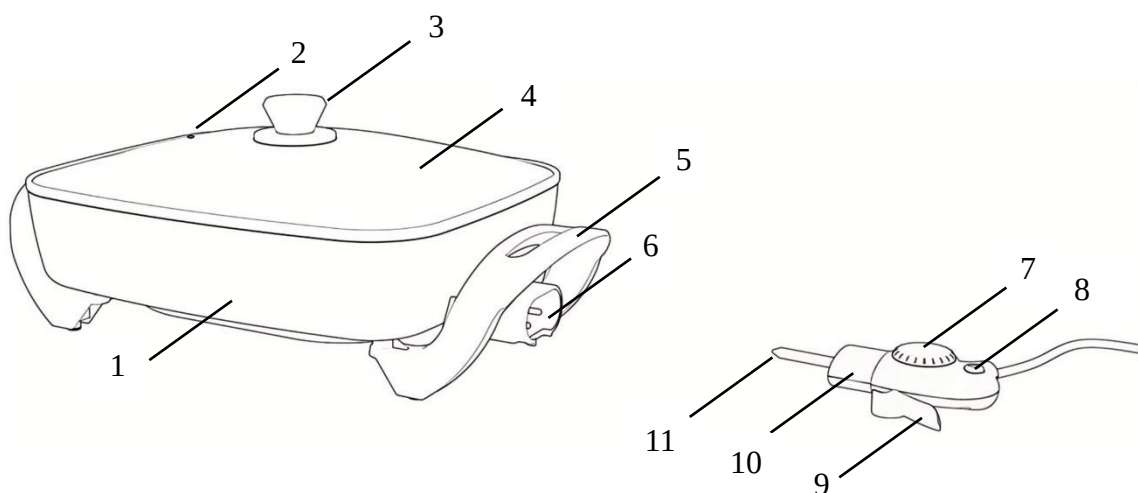

1. Main unit
2. Steam outlet
3. Lid handle
4. Toughened glass lid
5. Pan handle
6. Connector socket

7. Temperature control knob
8. Red working indicator
9. Release lever
10. Temperature control with power plug & cord
11. Temperature probe

IMPORTANT!

- Please make sure that your appliance is received with the right components shown above. Check everything carefully before use. If any parts are missing or damaged, return the product to place of purchase for replacement.
- When using the appliance for the first time, carefully remove all internal and external packaging and dispose of them responsibly.

BEFORE FIRST USE


1. Make sure the temperature control with power plug & cord is **disconnected** from the mains power outlet.
2. Make sure the temperature control with power plug & cord is **detached** from the main unit.
3. Wash the non-stick cooking surface and glass lid with clean warm water and mild

detergent. Dry thoroughly.

WARNING! Do not use harsh abrasives, sharp objects, caustic cleaners or oven cleaners when cleaning this appliance. Do not submerge the product in water or allow any water into the electrical connector on the product.

4. Clean the outside of the main unit and the temperature control with power plug & cord with a moist cloth and polish it with a soft dry cloth. Dry thoroughly.
5. Place main unit on a flat, solid, clean, dry and heat-resistant surface.
6. Insert and push the temperature probe into the connector socket until the temperature control fits perfectly into the main unit.
7. Condition the cooking surface

- Applying a thin coat of oil to the cooking surface and gently rub it in with a paper towel.

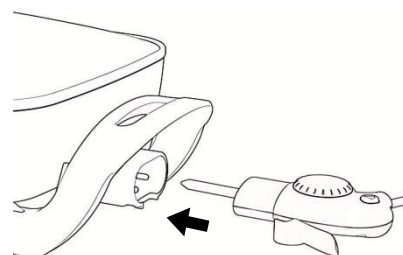

- Connect the plug into a mains power supply and rotate the temperature control knob to "5". Allow the appliance to run for 5 minutes. Turn off the control and unplug the unit.
- Wipe off excessive oil. The frypan is now ready for use.

Notice: On first use there may be a small amount of haze and an odour emitted from the appliance. This is perfectly normal and will subside after a few minutes of use.

HOW TO USE YOUR ELECTRIC FRYPAN

1. Place appliance on a flat, solid, clean, dry and heat-resistant surface.
2. Make sure the temperature control knob is in the "OFF" position. Connect the temperature controller to the main unit and the mains power supply.
3. Rotate the temperature control knob to set your desired temperature, the red working indicator lights up and the appliance starts to preheat. When the preset temperature is achieved, the red indicator goes off.

4. I		Temperature setting	Approx. Temperature of the cooking surface	d fillings
		1	140°C	
		2	160°C	
		3	180°C	
		4	200°C	
		5	220°C	

CAUTION!

- Do not touch the appliance during use or immediately after use, the frypan gets very hot. Use the handles.
- Beware of escaping steam from the appliance. Danger of scalding!

WARNING! Do not use metal utensils, sharp objects or cut food on the cooking surface, these could do damage to the non-stick coating. Silicon utensils or plastic/wooden spatula are recommended.

IMPORTANT! Never leave the appliance unattended when in use.


5. Once the cooking process is finished, turn the temperature control knob to "OFF". Remove the plug from the mains power outlet socket. Serve the food.

CLEANING AND STORAGE

Clean the appliance after each use. Failure to clean the appliance in a timely manner may result in a build-up of food residue, making it difficult to clean later. The build-up may also cause damage to the non-stick surface.

WARNING! Do not immerse the main unit and the temperature control with power plug & cord in water or other liquid to clean. Do not put any part of the appliance in a dishwasher.

1. Rotate the temperature control knob to "OFF" and disconnect the temperature control with power plug & cord from the mains power outlet.
2. Allow your appliance to cool down completely.
3. Push the release lever and pull to detach the temperature control with power plug & cord from the main unit.
4. Wash the non-stick cooking surface and glass lid with clean warm water and mild detergent. Dry thoroughly.

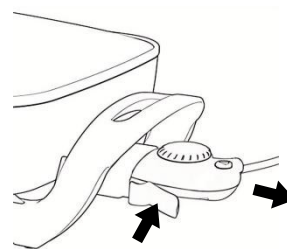

WARNING! Do not use harsh abrasives, sharp objects, caustic cleaners or oven cleaners when cleaning this appliance. Do not submerge the product in water or allow any water into the electrical connector on the product.

5. Clean the outside of the main unit and the temperature control with power plug & cord with a moist cloth and polish it with a soft dry cloth. Dry thoroughly.
6. Make sure all parts are clean and dry before storing or using it again.
7. Store the appliance in a safe, cool, dry place.

TECHNICAL SPECIFICATION

Voltage: 220-240V~ 50-60Hz

Power: 1600-1800W

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre L2/ 1 Middle Road, Chadstone Vic 3148 Australia Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

