

anko

Scandi Microwave Oven P70T20EL-CF User Manual



PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE

CONTENT

CONTENT	1
PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY	2
IMPORTANT SAFETY INSTRUCTIONS	2
INSTALLATION GUIDE	4
GROUNDING INSTRUCTIONS	5
RADIO INTERFERENCE	6
BEFORE CALLING FOR SERVICE	6
COOKING TECHNIQUES	6
COOKING UTENSILS GUIDE	7
SPECIFICATIONS	8
PRODUCT DIAGRAM	8
CONTROL PANEL	9
OPERATION INSTRUCTIONS	10
SETTING THE CLOCK	10
EXPRESS COOKING	10
MICROWAVE COOKING	11
SPEED DEFROST	11
AUTO DEFROST	11
MULTISTAGE COOKING	12
AUTO COOK	12
PRESET	13
CHILD LOCK	13
CLEANING AND CARE	14
<u>12 MONTH WARRANTY</u>	<u>15</u>

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

1. Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
2. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
3. Do not operate the oven if it is damaged. It is very important that the oven door close properly and that there is no damage to the
 - a)Door (including any bent),
 - b)Hinges and latches (broken or loosened),
 - c)Door seals and sealing surfaces.
4. The oven should not be adjusted or repaired by anyone except qualified service personnel.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliance basic safety precautions should be followed, including the following:

WARNING! --To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapours in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
2. Do not operate the oven when empty.
3. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person to avoid a hazard.
4. **WARNING!** --Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
5. To reduce the risk of fire in the oven cavity:

- When heating food in plastic or paper container, keep an eye on the oven due to the possibility of ignition.
- Remove wire twist-ties from paper or plastic bags before placing bag in oven.
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
- The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

6. **WARNING!** --Liquid or other food must not be heated in sealed containers since they are liable to explode.
7. Microwave heating of beverages can result in delayed eruptive boiling; therefore care has to be taken when handling the container.
8. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.
9. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
10. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
11. The contents of feeding bottles and baby food jars should be stirred or shaken, and the temperature should be checked before serving in order to avoid burns.
12. Cooking utensils may become hot because of heat transferred from the heated food. Potholders may be needed to handle the utensil.
13. Utensils should be checked to ensure that they are suitable for use in microwave oven.
14. **WARNING!** --It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
15. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
16. Children should be supervised to ensure that they do not play with the appliance.
17. The microwave oven is only used in freestanding.
18. **WARNING!** --Do not install oven over a range cook top or other heat-producing appliance. if installed could be damaged and the warranty would be avoid.
19. The microwave oven must not be placed in the cabinet.

20. **WARNING!** --The appliance and its accessible parts become hot during use.
21. **WARNING!** --Accessible parts may become hot during use. Young children should be kept away.
22. During use the appliances become hot. Care should be taken to avoid touching heated areas on the oven.
23. The temperature of accessible surfaces may be high when the appliance is operating.
24. The appliance shall be placed against a wall.
25. Appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
26. **WARNING!** --If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
27. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
28. The microwave oven is for household use only and not for commercial use.
29. Never remove the distance holder in the back or on the sides, as it ensures a minimum distance from the wall for air circulation.
30. Please secure the turntable before you move the appliance to avoid damage.
31. **CAUTION!** --It is dangerous to repair or maintain the appliance by no other than a qualified electrical technician.
32. The microwave oven is intended for defrosting, cooking and steaming food only.
33. Use oven gloves when removing any heated food.
34. **CAUTION!** Steam will escape when opening lids or wrapping foil.
35. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
36. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

INSTALLATION GUIDE

1. Make sure that all the packing materials are removed from the inside of the door.
2. **WARNING!** --Check the oven for any damage, such as misaligned or bent door,

damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.

3. The microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
4. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
5. For correct operation, the oven must have sufficient airflow. Allow minimum 20cm of free space necessary above the top surface of the oven and 5cm at both sides. The microwave oven rear plate must be placed close to the wall. Do not cover or block any openings on the appliance. Do not remove feet.
6. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
7. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
8. The socket must be readily accessible so that it can be easily unplugged in an emergency.
9. Do not use the oven outdoors.

GROUNDING INSTRUCTIONS

This appliance must be grounded. This oven is equipped with a cord having a grounding wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. It is recommended that a separate circuit serving only the oven be provided. Using a high voltage is dangerous and may result in a fire or other accident-causing oven damage.

WARNING! --Improper use of the grounding plug can result in a risk of electric shock.

Note:

1. If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person.
2. Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the electrical connection procedures.

The internal wires in the power cable are coloured in accordance with the following code:

Green and Yellow = EARTH

Blue = NEUTRAL

Brown = LIVE

RADIO INTERFERENCE

Operation of the microwave oven can cause interference to your radio, TV, or similar equipment. When there is interference, it may be reduced or eliminated by taking the following measures:

1. Clean door and sealing surface of the oven.
2. Reorient the receiving antenna of radio or television.
3. Relocate the microwave oven with respect to the receiver.
4. Move the microwave oven away from the receiver.
5. Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

BEFORE CALLING FOR SERVICE

Before asking for service, please check each item below:

- Check to ensure the oven is plugged in securely. If not, remove the plug from the outlet, wait 10 seconds, and plug it in again securely.
- Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
- Check to ensure the control panel is programmed correctly and the timer is set.
- Check to ensure the door is securely closed, engaging the door lock system. If the door is not properly closed, the microwave energy will not flow inside.

IF NONE OF THE ABOVE RECTIFIES THE SITUATION, THEN CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.

COOKING TECHNIQUES

1. Arrange food carefully. Place thickest areas towards outside of dish.
2. Watch cooking time. Cook for the shortest amount of time indicated and add

more as needed. Food severely overcooked can smoke or ignite.

- Cover foods while cooking. Covers prevent spattering and help foods to cook evenly.
- Turn foods over once during microwave cooking to speed cooking of such foods as chicken and hamburgers. Large items like roasts must be turned over at least once.
- Rearrange foods such as meatballs halfway through cooking both from top to bottom and from the center of the dish to the outside.

COOKING UTENSILS GUIDE

- Microwave cannot penetrate metal. Only use utensils that are suitable for use in microwave ovens. Metallic containers for food and beverages should not be used during microwave cooking. This requirement is not applicable if the manufacturer of the utensil specifically specifies size and shape of metallic containers suitable for microwave cooking.
- Microwaves cannot penetrate metal, so metal utensils or dishes with metallic trim should not be used.
- Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
- Round /oval dishes rather than square/oblong ones are recommended, as food in corners tends to overcook.
- Narrow strips of aluminium foil may be used to prevent overcooking of exposed areas. But be careful don't use too much and keep a distance of 1 inch (2.54cm) between foil and cavity inside the oven.

The list below is a general guide to help you select the correct utensils.

Cookware	Microwave Cooking
Heat-Resistant Glass	Yes
Non Heat-Resistant Glass	No
Heat-Resistant Ceramics	Yes
Microwave-Safe Plastic Dish	Yes
Kitchen Paper	Yes
Metal Tray	No
Metal Rack	No
Aluminum Foil & Foil Containers	No

IMPORTANT: To avoid damage, never place frozen food directly on the glass plate. Always use microwave-safe cookware when defrosting or cooking. Placing frozen items directly on the glass plate may cause it to crack or shatter.


SPECIFICATIONS

Power Consumption	220-240V~ 50Hz, 1100W(microwave)
Output	700W
Operation Frequency	2450MHz
Outside Dimensions	243mm(H)×446mm(W)×360mm(D)
Oven Cavity Dimensions	200mm(H)×301mm(W)×293mm(D)
Oven Capacity	Compact 18Litres
Net Weight	Approx.9.4kg
Standby mode	<0.8W


NOTE: The max period after which the equipment reaches automatically standby mode is 20 minutes.

PRODUCT DIAGRAM

1. Door Safety Lock System
2. Oven Window
3. Roller Ring
4. Shaft
5. Control Panel
6. Wave Guide
(Please do not remove the mica plate covering the wave guide)
7. Glass Tray

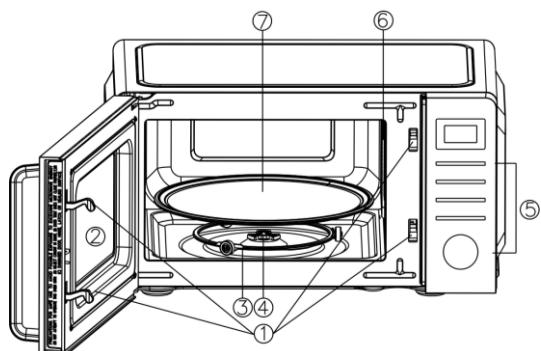

CONTROL PANEL

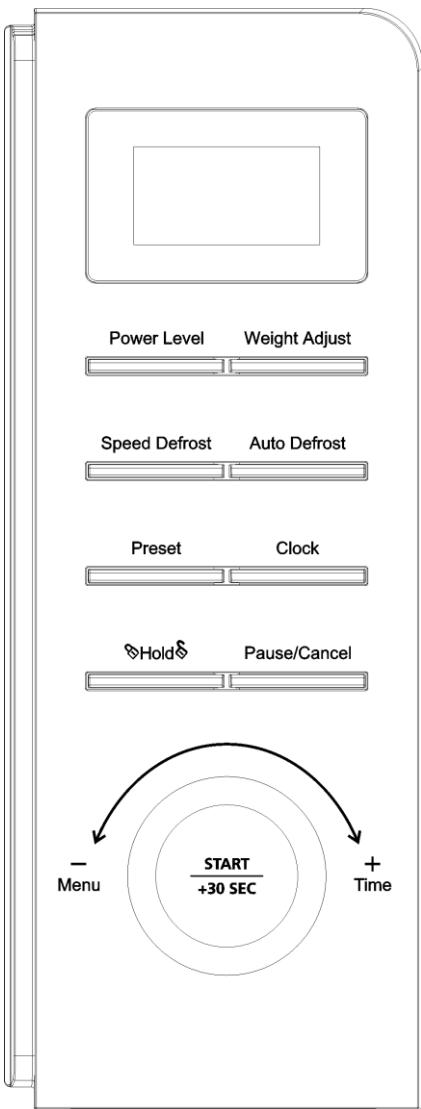

● DISPLAY SCREEN

Time, power and indicators are displayed.

● POWER LEVEL

Press to select microwave power level.

● WEIGHT ADJUST

Press to set food weight or servings.

● SPEED DEFROST

Press to defrost food based on time.

● AUTO DEFROST

Press to defrost food based on weight.

● PRESET

Use to set the oven to start-up at a later time.

● CLOCK

Press to set clock time.

● HOLD

Use to set child lock.

● PAUSE/CANCEL

Press once to temporarily stop cooking, or twice to cancel cooking altogether.

● MENU/TIME (dial)

Turn the dial to select auto cooking menus.

Turn the dial to set time.

● START/+30 SEC

Press to start cooking programs.

Simply press it repeatedly to set cooking time and cook immediately at full power level.

OPERATION INSTRUCTIONS

- When the oven is first plugged in, a "BEEP" will sound and the display screen will show "C" and "1:01" (":" flashing).
- During setting, the system will return to standby mode if there is not any operation within 30 seconds.
- During cooking, if PAUSE/CANCEL button is pressed once, the program will be paused. Press START/+30 SEC button to resume. But if PAUSE/CANCEL button is pressed twice, the program will be cancelled.
- After cooking ends, the display screen will show End and beep will sound every two minutes until user press any button or open the door.
- In the process of operation, if a valid button is pressed, the buzzer will ring once. But if an invalid button is pressed, the buzzer will ring twice.

Setting the clock

This is a 12- or 24- hour clock. You can choose to set the clock time in 12- or 24- hour cycle by pressing CLOCK button in standby mode.

1. In standby mode, press CLOCK once or twice to select 12- or 24- hour clock.
2. Turn MENU/TIME dial to set hour digit.
3. Press CLOCK button.
4. Turn MENU/TIME dial to set minute digit.
5. Press CLOCK to confirm the setting.

NOTE: During cooking, you can check the clock time by pressing CLOCK button.

Express cooking

Use this feature to program the oven to microwave food at 100% power conveniently. In standby mode, just press START/+30 SEC button repeatedly to set cooking time (each press to increase 30 seconds, and up to 10 minutes), and the oven starts working automatically at full power.

Microwave cooking

1. Press POWER LEVEL button repeatedly to select power level.
2. Turn MENU/TIME dial to set cooking time. The time ranges from 10 seconds to 95 minutes.
3. Press START/+30 SEC button to confirm.

Press POWER LEVEL button to select power level:

Press POWER LEVEL	Power (Display)	Press POWER LEVEL	Power (Display)
Once	100% (100)	7 times	40% (40)
Twice	90% (90)	8 times	30% (30)
3 times	80% (80)	9 times	20% (20)
4 times	70% (70)	10 times	10% (10)
5 times	60% (60)	11 times	0% (00)
6 times	50% (50)		

NOTE: During cooking, you can check the power level by pressing POWER LEVEL button.

Speed defrost

1. In standby mode, press SPEED DEFROST button once.
2. Turn MENU/TIME dial to set defrosting time. The time ranges from 10 seconds to 95 minutes.
3. Press START/+30 SEC button to confirm.

NOTE: During defrosting, the system will pause and sound beeps to remind user to turn food over, and then press START/+30 SEC button to resume.

Auto defrost

The defrosting time and power level are automatically set once the food weight is programmed. The frozen food weight ranges from 100 g to 1800 g.

1. Press AUTO DEFROST button once.
2. Press WEIGHT ADJUST button repeatedly to select food weight.
3. Press START/+30 SEC button to confirm.

NOTE: During defrosting, the system will pause and sound beeps to remind user to turn food over, and then press START/+30 SEC button to resume.

Multistage cooking

Your oven can be programmed for up to 2 automatic cooking sequences.

Suppose you want to set the following cooking program.

Microwave cooking



Microwave cooking (with lower power level)

1. Input the first microwave cooking program. Do not press START/+30 SEC button.
2. Input the second microwave cooking program.
3. Press START/+30 SEC button to start.

NOTE: Express cooking, auto defrost, speed defrost and auto cook menus cannot be set in multi-stage cooking programs.

Auto cook

For the following food or cooking mode, it is not necessary to program the cooking time and power. It is sufficient to indicate the type of food that you want to cook as well as the weight or servings of this food.

1. In standby mode, turn MENU/TIME dial anticlockwise once, the display screen will show the code "A-01", then turn MENU/TIME dial clockwise to select another food code.
2. Press WEIGHT ADJUST button repeatedly to select food weight or servings.
3. Press START/+30 SEC button to confirm.

Code	Food	Note
A-01	Milk/Coffee (200 ml/cup, 1-3 cups)	<ul style="list-style-type: none">• For Milk/Coffee and Potato, the display screen will not show the icon "g".
A-02	Rice (150-600 g)	
A-03	Spaghetti (100 g, 200 g, 300 g)	
A-04	Potato (230 g/serving, 1-2 servings)	<ul style="list-style-type: none">• The result of auto cooking depends on factors such as the shape and size of food, your personal preference as to the doneness of certain foods and even how well you happen to place food in the oven. If you find the result at any rate not quite satisfactory, please adjust the cooking time a little bit accordingly.
A-05	Popcorn (100 g)	
A-06	Auto Reheat (200-800 g)	
A-07	Fish (200-600 g)	
A-08	Pizza (150 g, 300 g, 450 g)	

Preset

This function allows the oven to start in a later time.

1. In standby mode, input a cooking program (except express cooking, auto defrost and speed defrost).
2. Press PRESET button once.
3. Turn MENU/TIME dial to set hour digit.
4. Press PRESET button once.
5. Turn MENU/TIME dial to set minute digit.
6. Press START/+30 SEC button to confirm.

NOTE: When the oven stays in preset state, you can check the preset time by pressing PRESET button once, you can cancel the preset program by pressing PAUSE/CANCEL button when the preset time is showing.

Child lock

The lock prevents unsupervised operation by children.

To set: In standby mode, press and hold HOLD button for more than 3 seconds, a "BEEP" will sound, and the lock indicator light will turn ON, the oven will auto enter child lock mode. In the lock state, all buttons are disabled.

To cancel: Press and hold HOLD button for more than 3 seconds, a "BEEP" will sound and the indicator light will disappear.

CLEANING AND CARE

1. Turn off the oven and unplug the power cord from the wall when cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergents may be used if the oven gets very dirty. Avoid using spray or other harsh cleaners. They may stain, streak or dull the door surface.
3. The outside of the oven should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or spatters. Do not use abrasive cleaner.
5. A steam cleaner is not to be used.
6. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
7. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
8. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
9. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild, soapy water or in a dishwasher. When removing the roller ring, be sure to replace it in the proper position.
10. Remove odours from your oven by combining a cup of water with the juice and skin of one lemon in a microwaveable bowl. Microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
11. If the light bulb burns out, please contact customer service to have it replaced.
12. **The oven should be cleaned regularly, and any food deposits should be removed. Failure to maintain the oven in a clean condition could lead to deterioration of surface that could adversely affect the life of the unit and could possibly result in a hazardous situation.**
13. Please do not dispose of the appliance with general waste; it should be disposed responsibly following local council waste management requirements when disposing electrical appliances.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us