

anko

**Blender
YB-009D
User Manual**



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE

WARNING!

1. To protect against risk of electric shock do not put the appliance base, power cord or plug in water or other liquid. Ensure that appliance do not get wet (water splashes etc.) and do not use it with wet hands.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
3. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
5. Do not use the appliance after it has fallen into or becomes immersed in water.
6. Do not use the appliance if the jug is cracked or chipped.
7. Never let the appliance operate unattended.
8. To reduce the risk of injury, never place blade assembly on the motor base without jug properly attached. Always operate blender with cover and lid properly placed on the jug.
9. NEVER operate the appliance without the blade assembly in place.
- 10. Do not blend any hot liquid more than 60°C.**
11. Be careful if hot liquid is poured into the blender as it can be ejected out of the appliance due to a sudden steaming.
- 12. IMPORTANT! Do not overfill. Never fill ingredients beyond the highest mark 1400mL.**
- 13. To prevent damage and overheating DO NOT operate the appliance empty.**
- 14. WARNING! Failure to add enough liquid before processing may cause the jug to break or chip.**
- 15. DO NOT operate the appliance with a damaged cord or plug, or after the appliance malfunctions, have been dropped or damaged in any manner.**
- 16. If the power cord is damaged, it must be replaced by a qualified electrical person to avoid a hazard, or the appliance must be disposed.**
- 17. DO NOT let the power cord hang over the edge of table or counter or touch hot surfaces such as the stove.**
- 18. DO NOT operate this appliance on or near any hot surface (such as gas or electric burner or in a heated oven).**
19. Always use the appliance on a dry, level surface. Sink, drain boards or uneven surfaces must be avoided.
20. Keep hands, hair, clothing, as well as utensils out of jug while processing to reduce the risk of severe injury to persons or damage to the appliance. A scraper may be used but only when the

appliance is not running.

21. **CAUTION! Blade assembly is sharp, handle with care. When handling the blade assembly, always hold by the base of the blade assembly.**
22. Be careful when handling the sharp blades, emptying the jug and during cleaning.
23. DO NOT use the appliance if blade assembly is bent or damaged.
24. The use of attachments or accessories not supplied with the product may cause fire, electric shock or personal injury.
25. DO NOT remove the jug from the motor base while the appliance is running.
26. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
27. This product is intended for household use only. Do not use outdoors. Do not use this appliance for anything other than its intended use.
28. Appliance accessories are not intended to be used in the microwave. Do not place the jug or the lid in the microwave as it may result in damage to accessories.
29. Check the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
30. Unplug the appliance immediately after use.
31. Do not attempt to repair or disassemble the appliance. There are no user-serviceable parts inside the appliance.
32. For cleaning, please refer to CLEANING AND STORAGE section.
33. The appliance is intended to be used in households and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments,
 - farmhouses,
 - by clients in hotels, motels and other residential type environments,
 - bed and breakfast type environments.
34. **WARNING!** Misuse of the appliance may cause injury!
35. **CAUTION!** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched ON and OFF by the utility.

IMPORTANT!

To prevent damage to the electric motor, the maximum operating time is 90 seconds. Allow it to rest for at least 3 minutes before using it again. After 5 cycles of operation, allow the blender (electric motor) to cool down to room temperature, allow it to cool down for approx. 30 minutes before using it again.


NOTICE!

The appliance is incorporated with a non-self-resetting thermal motor protection circuit to protect the motor from overheating. If the motor shuts OFF while in use, unplug the unit from main power outlet. Remove the blending jug from motor unit and free the blade of any obstructions. Allow the unit to cool down for 10 minutes. After then, plug the unit back into mains power for normal operation.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

KNOW YOUR BLENDER

1. Cover lid/Measuring cup (30/60mL)
2. Cover
3. Sealing ring
4. Jug (1400mL)
5. Gasket
6. Blade
7. Blade collar
8. Motor base
9. Control panel
10. Cord storage (inside of the bottom)

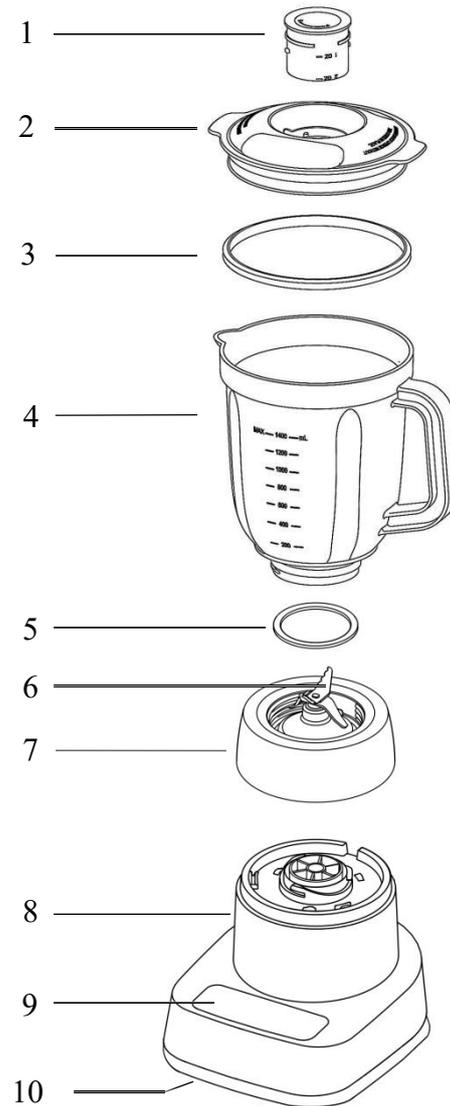

IMPORTANT!

Please make sure that your appliance is received with all the components shown above. Check everything carefully before using it. If any part is missing or damaged, do not use it. Return the product to place of purchase for replacement.

BEFORE FIRST USE

When using the appliance for the first time, carefully remove all packaging.

1. Wash all the parts except the motor base in warm, soapy water, and then rinse and dry thoroughly.
2. Clean the motor base with a damp cloth. Wipe dry with a soft dry cloth.

CAUTION! Never immerse the motor base in water or other liquids. Never use abrasive cleaners on any part of the product. Do not place any parts into a dishwasher or extremely hot water.

IMPORTANT! On the blade base collar, there is a silicone gasket that creates an airtight fit with the jug to prevent liquid from leaking. After washing and before each use, always check to make sure the gasket is properly assembled in place.

3. Place the motor base on a flat, stable, clean and dry surface, the appliance is now ready for use.

USE YOUR BLENDER

1. Ensure the product is unplugged from the electrical outlet.
2. Twist the blade assembly clockwise to attach it tightly to the bottom of the jug.


WARNING!

- Make sure to place the gasket on the inner edge of the blade collar.
 - Make sure that your blade assembly is properly assembled to the jug. Leaking may occur if it is misaligned when twisted onto the jug.
3. Put the jug assembly on the motor base and rotate counter-clockwise until you hear a 'click'.
 4. Pour liquid ingredients into the jug, wash all solid ingredients and cut them into small pieces, and put into the jug. Put on and lock the cover and lid.

WARNING!

- DO NOT fill the jug above the 1400mL level as indicated on the jug. Some mixtures increase in volume during blending.
 - DO NOT operate the appliance with an empty jug. This can damage the blender.
 - **DO NOT process boiling liquids or hot ingredients. Allow hot ingredients to cool down before placing them in the jug.**
5. Plug the appliance into a standard 220-240V~ electrical outlet.
 6. Press the On/Off button to turn on the appliance and enter standby mode. Press the On/Off button another time in standby mode to turn OFF the appliance.
 7. Press to select pulse function or press to high/low to select the motor speed. Then press and select the functions above the line in the circle (milkshake, icy drink, smoothie, ice crush, blend) with high speed setting and functions under the line in the circle (puree, sauce, grind, whisk, stir) with low speed setting. Press the On/Off button to stop the corresponding speed or function setting.

Notes: The corresponding indicator will light up when selected.

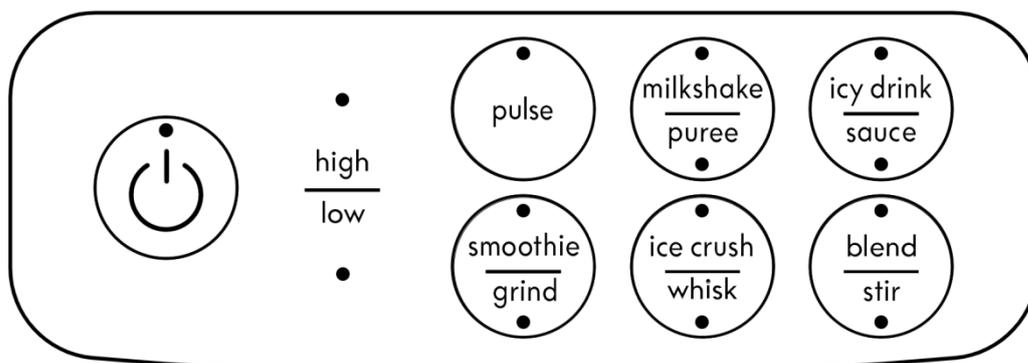

Operation chart:

Select speed	Select function	Designed for	Operation time (sec.)	Suggested recipe
/	pulse	Blend ingredients by controlled bursts of power.	/	Baked peanut 90g
high	Milk shake	Blend fresh fruits or syrups with your milk of choice into the perfect milkshake.	57	Banana 200g 2cm ice cube 20pcs OREO biscuits 4pcs Cream 480mL Milk 240mL Sugar 40g
	Icy drink	Perfect for preparing frozen margaritas, daiquiris, and other summer drinks.	75	Pulque 180mL Orange-flavored liqueur 100mL Lemon juice 5mL Syrup 300mL 2cm ice cube 20pcs
	smoothie	Blend fresh or frozen fruits and vegetables into the perfect smoothie.	85	Pineapple 2.5cm iced cubes 180g Mango 2.5cm iced cubes 180g Pawpaw 2.5cm iced cubes 180g Banana 2.5cm iced slices 150g Orange juice 360mL
	Ice crush	Quickly crush up to 6 ice cubes and perfect for preparing frozen desserts or drinks.	54	2cm ice cubes 6pcs
	blend	Blend soft vegetables or fruits with liquid of your choice.	60	Carrot 560g Water 840mL
low	puree	Blends cooked vegetables with water and or milk or cream to make the perfect puree.	54	Cooked broccoli, sliced, 200g Milk 400mL Butter 10g
	sauce	Blend cooked vegetables with condiments to make tomato sauce, black pepper sauce etc.	80	Cooked tomato 200g Onion 50g Olive oil 1 tablespoon Black pepper a little Salt a little
	grind	Grinds coffee and spices.	60	Coffee bean 50g

	whisk	Whisks sauces like mayonnaise, eggs for omelets.	60	Yolk 2pcs Vegetable oil 100mL Lemon juice 5mL Salt a little
	stir	Stir ingredients until they are combined.	50	Oatmeal 30g Yogurt 150mL Diced fruit 50g

WARNING!

Do not operate the motor continuously for more than 90 seconds at a time. Allow the motor to rest for 3 minutes before continuing.

If the appliance stop working during use, unplug the appliance and let it cool down for 10 minutes, then the appliance is ready again for use.

Notice:

- If the blades are not operating smoothly, stop the product and add some liquid, or reduce the ingredients in the jug.
 - Add maximum 6 pieces of ice cubes at a time. Remove ice cubes from freezer for 5 minutes before using.
8. Press the On/Off button to turn off the appliance.
 9. Unplug the appliance after use.

Notice: The blender has a built-in safety lock feature; this ensures that you can only switch ON the appliance while the jug with the blade assembly is assembled on the motor base securely.


CLEANING AND STORAGE

CAUTION! Never immerse the motor base in water or other liquids. Never use abrasive cleaners on any part of the product. Do not place any parts into a dishwasher or extremely hot water.

1. Clean the blender after each use.
2. Remove the power cord from the power outlet socket and ensure the appliance is thoroughly cooled before cleaning.
3. Clean the motor base with a damp cloth. Wipe dry with a soft dry cloth.
4. Wash all the other parts except the motor base in warm, soapy water, and then rinse and dry thoroughly. Use caution when handling the blade assembly as the blades are very sharp.

To disassemble the blade assembly


- Hold the blade assembly upside down and push the center part with blades out.

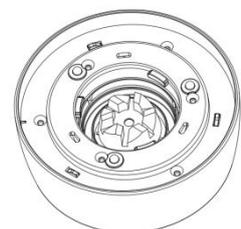

To assemble the blade assembly


- Make sure the gasket is in place before assemble.
- Place the center part with blades into the blade base and push down firmly.

CAUTION! Do not try to disassemble the center part with blades.

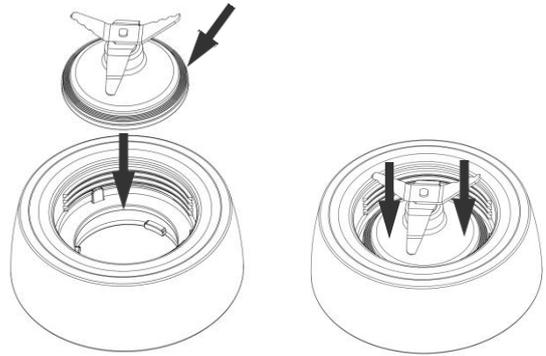

Tips:

- Use a small brush (not included) to remove particles of food lodged underneath the blades.
 - If some leftover particles dry onto the inside of the jug, attach the blade assembly and fill the jug about 2/3 full capacity with warm water. Place the jug and blade assembly onto the motor base and operate the appliance for about 20-30 seconds to help loosen the stuck ingredients. Repeat the above step but use clean tap water. Empty the blender, clean manually and dry thoroughly.
5. Make sure all components are clean and dry before storing.
 6. Store the appliance upright in a clean and dry location. Do not place anything on top.
 7. To save space, roll up the cord in the storage cord storage inside the bottom of the appliance. Store the jug upside down cover on the blade assembly. Put on the cover with lid as shown on the image.

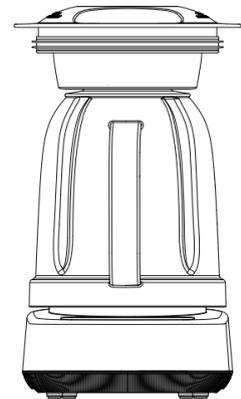

TECHNICAL SPECIFICATION

Voltage: 220-240V~ 50-60Hz

Power: 450W

Max Capacity: 1400mL

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us