


anko

TOASTER

ST-218

User Manual

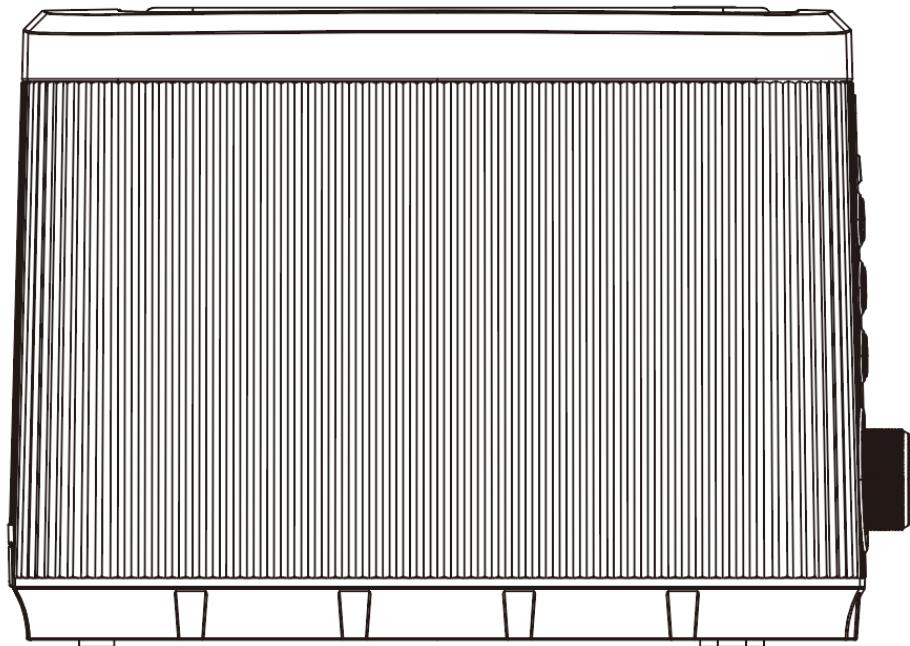

**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS

1. Please read these instructions before operating and retain for future reference.
2. To protect against electrical hazards do not immerse any part of the appliance or cord in water or any other liquid.
3. Close supervision is necessary when the appliance is used near children.
4. Always use the appliance on a dry, level surface.
5. Do not use this appliance outdoors.
6. Always unplug from the plug socket when not in use and before cleaning.
7. Do not operate the appliance if damaged, after an appliance malfunctions or it has been damaged in any manner.
8. To ensure safe operation, conduct regular and thorough inspections of the supply cord to confirm it is free from any signs of damage. If any damage is detected, regardless of severity, the equipment must not be used.
9. Do not let the cord hang over the edge of a table or counter or touch hot surfaces. Allow the kettle to cool before wrapping cord around base for storage.
10. Care must be taken not to touch any hot surfaces, do not store or cover the appliance until it has fully cooled down.
11. Do not place this appliance on or near a hot gas or electric burner, in or where it could touch a heated oven, or a microwave oven.
12. Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this appliance.
13. **CAUTION:** Bread may burn. When using this appliance, allow adequate air space above and on all sides for air circulation. Do not allow this appliance to touch curtains, wall coverings, clothing, dishtowels or other flammable materials during use.
14. **CAUTION:** Some bench top surfaces may get damaged when exposed to heat. The use of an insulated heat pad is strongly recommended to prevent potential damage to bench top surface.
15. This appliance is intended to be used in households and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments.
 - farm houses.
 - by clients in hotels, motels and other residential type environments.
 - bed and breakfast type environments
16. Do not use the toaster without the slide out crumb tray in place. The crumb tray should be cleaned regularly. Do not allow crumbs to build up in the tray.
17. Do not use this appliance with any foodstuff product containing sugar content or with products containing jam or preserves.
18. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
19. The temperature of accessible surfaces may be high when the appliance is

operating.

- 20. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- 21. Children should be supervised to ensure that they do not play with the appliance.
- 22. Bread may burn; therefore, toasters must not be used near or below curtains and other combustible materials. They must be watched.
- 23. Never use the device unsupervised! Switch off the device from mains power whenever you are not using it, even if this only for a moment.
- 24. The appliances are not intended to be operated by means of an external timer or separate remote-control system.

25. For cleaning, please refer section "HOW TO CLEAN THE TOASTER" below.

26.



CAUTION: Hot Surface.

Care must be taken during operation, as surfaces may become hot. Avoid direct contact.

WARNING!


Never attempt to extract Jammed toast, muffins or any other item with a knife or any other object, as contact with live electrical parts may cause electrocution. Allow the appliance to cool down, unplug and carefully remove the bread.

CAUTION: The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains. The toaster should be attended when in use.

SAVE THESE INSTRUCTIONS

FEATURES

1. Crumb tray
2. CANCEL Button with indicator light
3. REHEAT button with indicator light
4. DEFROST button with indicator light
5. Variable browning control
6. Lever with High Lift function

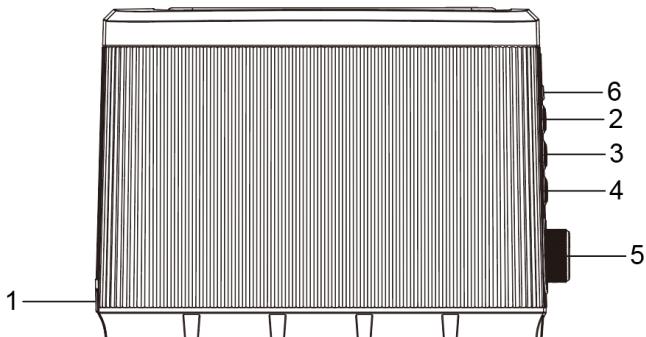

OPERATION

NOTE: When using the toaster for the first time, a slight odour may occur. This is completely harmless and will dissipate shortly. Ensure adequate ventilation during operation.

1. Plug the power cord into a suitable mains supply socket and turn the power on.
2. Insert slices of bread into the bread slots.
3. Adjust the toasting settings to your preferred setting (1: Light / 4: Medium / 7: Dark) and press down the lever to start. To re-adjust the settings during toasting, press the CANCEL button.
4. After completion of each toasting cycle, the bread will pop up automatically and the toaster will switch itself off.
5. Carefully remove the bread from the toaster.

BEWARE OF HOT SURFACES WHEN REMOVING BREAD!

6. Allow the toaster to cool down between each use.

WARNING!

Never operate the toaster on its side.

To prevent damage to the toaster, DO NOT toast with extremely runny ingredients such as butter, jam and other sugary ingredients.

Adding any food substances to bread, muffins or crumpets can cause an electric shock and /or fire. This toaster is for toasting bread, crumpets and muffins only.

TOASTING FROZEN BREAD: To toast frozen bread, place the bread into the bread slots and select the desired Browning Setting. Press the carriage control lever down until it clicks into place then press the DEFROST Button.

REHEATING TOAST: The toaster allows you to reheat toast without additional toasting. To reheat, place toast into bread slots, lower the carriage control lever until it clicks into place and press the reheat button.

In the unlikely event that the bread or crumpet becomes jammed, switch the toaster off at the power outlet, remove the plug from the supply socket and carefully ease the bread out of the toaster, ensuring that you do not damage the element.

NOTE: The toaster is equipped with a high lift function – if you can't reach your toast from the toaster, lift the lever upwards the top of the toaster.

NOTE: Do NOT insert anything into the toaster to help lift the bread out.

NOTE: Never use the toaster without the crumb tray in position.

HOW TO CLEAN THE TOASTER

Always turn the power off, remove the plug and allow the toaster to cool before cleaning.

1. Pull out the crumb tray at the bottom of the toaster and empty it. If the toaster is used frequently, accumulated breadcrumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
2. Wipe the outside of the toaster with a slightly dampened cloth and polish with a soft dry cloth.
3. Do not immerse the toaster in water or other liquid.
4. When not in use or during storage, the power cord may be wound under the bottom of toaster.

WARNING! Fire Hazard. The crumb tray should be cleaned regularly.

Do not allow breadcrumbs to accumulate at the bottom of the toaster.

Technical details

Model No.: ST-218

Mains Voltage: 220-240V ~ 50-60Hz

Power consumption: 780-930W

12 MONTH WARRANTY

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

The warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed with the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/-Customer Service Centre 690 Springvale Road, Mulgrave VIC 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, VIC, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us