

# anko

**Toaster  
TAE1003-SA  
User Manual**



**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE**

## **IMPORTANT SAFEGUARD**

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch hot surface. Use handles or knobs only.
4. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
5. Close supervision is necessary when it is used by or near children.
6. Unplug unit from outlet when not in use and before cleaning.
7. Do not operate any appliance with a damaged cord or plug, or in abnormal state. If its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a similarly qualified person to avoid a hazard.
8. Do not let the cord hang over edge of table or counter or touch hot surface.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Do not use the appliance for other than its intended use.
11. Oversize food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
12. Bread may burn; therefore toasters must not be used near or below curtains and other combustible materials, they must be watched.
13. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
14. Don't attempt to dislodge food when toaster is in operation.
15. Be sure to take the bread out carefully after toasting so as to avoid injuries.
16. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
17. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play

with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.

19. Keep the appliance and its cord out of reach of children less than 8 years.

**20. Warning: if toast of small bread slices less than 85mm length, you must pay attention to the potential risk of burning when taking out the slices.**

21. Don't use the appliance outdoors.

22. This appliance is intended to be used in households and similar applications such as:

– staff kitchen areas in shops, offices and other working environments;

– farmhouses;

– by clients in hotels, motels and other residential type environments;

– bed and breakfast type environments.


23.  **Caution, hot surface. Care must be taken.**

24. Save these instructions.

## **WARNING!**

**Never operate the toaster on its side. To prevent damage to the toaster, DO NOT toast with extremely runny ingredients such as butter, jam and other sugary ingredients. Adding any food substances to bread, muffins or crumpets can cause an electric shock and / or fire. This toaster is for toasting bread, crumpets, waffles and muffins only.**

# PRODUCT INTRODUCTION

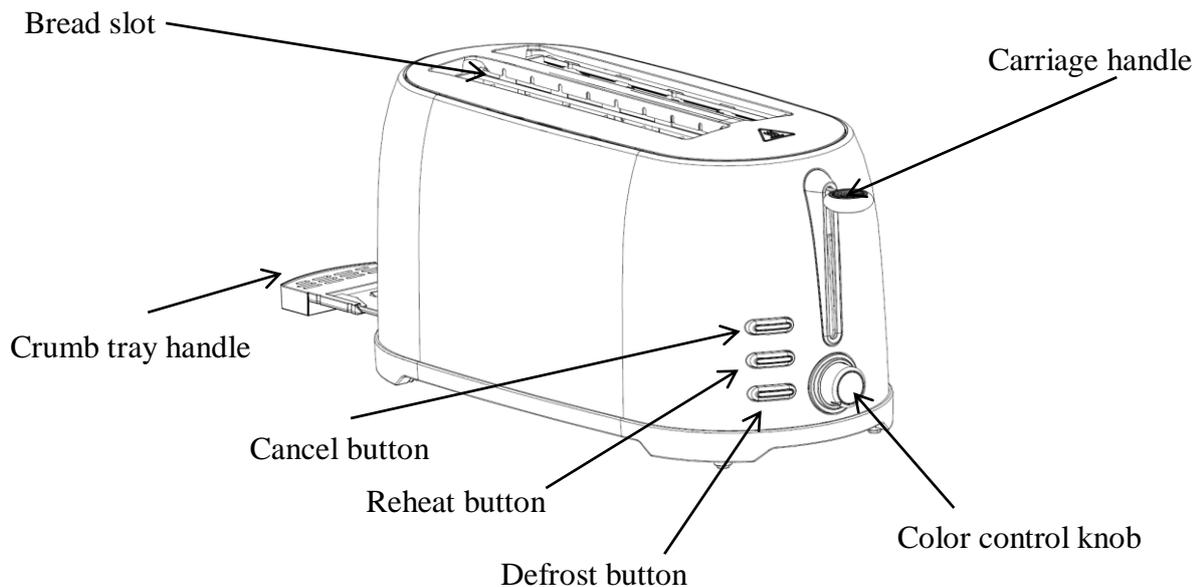

## FOR THE FIRST USE

As there is manufacturing residue or oil remained in the toaster or heat element, it usually emits the odor for the first use. It is normal and will not occur after several times use. Before toasting the first slice of bread it is strongly suggested to operate the appliance following below instructions, except without bread.

## OPERATION:

1. Put bread slice into the bread slot, each slot can be inserted two slices at most every time. Only the regular slice can be placed into the bread slot.

**Note: Make sure the crumb tray is completely positioned in place before using.**

2. Plug the power cord into the outlet.

3. Set color control knob to your desired toast color. There are 7 numbered levels, the lowest is 1 for lightest and the highest is 7 for darkest. The bread slice can be toasted to golden color at the position of “4”.

**Note: 1) Toasting color for one side is darker than that for double bread at the same level.**

**2) If toasted continuously, toasting color for the latter bread will be darker than the color of previous cycle at the same level.**

4. Press carriage handle down vertically until it is positioned in place, the indicator of **Cancel** will be illuminated, and toasting begins. Once the bread has been toasted to the preset color, the carriage handle will be automatically sprung up, and you can remove the bread readily.

**Note: The carriage handle can only be latched when the appliance connects to the power supply.**

5. During the toasting process, you may observe the toasting color. If it is satisfactory, you may interrupt the toasting process by pressing the **Cancel** button at any time.

**NOTE: During toasting, you may also observe the toasting color. If it is satisfactory, you can press the Cancel button to cancel the operation at any time. Never lift carriage handle to cancel toasting.**

6. If the bread has been taken out from refrigerator, first place the bread into the Bread slots, then set color control knob to your desired color. Press carriage handle down vertically until it is positioned in place, then press **DEFROST** button and the indicator of **DEFROST** will be illuminated. In this mode it will be toasted to your desired color.

7. If you want to **REHEAT** the cold toasted bread, first place the bread into the Bread slots, then press carriage handle down vertically until it is positioned in place, then press **REHEAT** button and the indicator of **REHEAT** will be illuminated. In this mode toasting time is fixed, so long as time is running over, the carriage handle will automatically spring up and end up the reheating process.

## **CAUTION:**

1. Remove all protective wrappings prior to toasting.
2. If toaster starts to smoke, press **Cancel** to stop toasting immediately.
3. Avoid toasting the food with extremely runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only applicable for toasting regular bread slices.
6. In order to achieve uniform color we recommend that you should wait minimum 30s between each toasting so that color control can reset automatically.

## **CLEANING AND MAINTENANCE:**

1. Disconnect the power supply and allow toaster to cool down before cleaning.
2. Wipe the outside with soft dry cloth only, never use metal polish.
3. Pull out the crumb tray on the bottom of toaster by crumb tray handle and empty it. If

toaster is used frequently, accumulated breadcrumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.

4. When not use or storage, the power cord may be wound under the bottom of toaster.

## **TECHNICAL SPECIFICATION**

Voltage: 220-240V~ 50-60Hz

Power: 1400W

# 12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

<b>Contact for Kmart purchases</b>	<b>Contact for Target purchases</b>
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>

