

# anko

## Multi Snack Maker

### FS-8037

### User Manual



PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE

## IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



### READ ALL INSTRUCTIONS BEFORE USE.


Read and understand all instructions before using this product and follow all warnings and cautions in the manual.

- To protect against risk of electrical hazards, do not immerse the appliance, power cord or plug in water or any other liquid.
- For electrical safety, if the supply cord is damaged, it must be replaced by a qualified electrician only or the product must be disposed of.
- Place the cord in such a way that pulling or tripping over it is not possible.
- Always place and operate the appliance on a flat, solid, clean, dry and heat-resistant surface.
- The power socket must be readily accessible so that the appliance can be unplugged in an emergency.
- This appliance is intended to be used indoors in household and similar applications such as: staff kitchen areas in shops, offices and other working environments, farmhouses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.
- The appliance is intended for household use only. Do not use outdoors or for commercial purpose. Any other use will void the warranty.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always unplug from the mains supply when not in use and allow the appliance to cool down before cleaning.
- Do not operate the appliance if damaged or malfunctions.
- Do not touch hot surfaces. Only use the handle.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use an extension cord with this appliance.
- Do not dismantle and repair the appliance by yourself. DANGER OF AN ELECTRIC SHOCK AND/OR FIRE!
- Do not allow this appliance to touch curtains, wall coverings, clothing, dish towels or other flammable materials during use.
- **IMPORTANT! Do not leave the appliance unattended when in use or when connected to mains power.**
- Do not operate your appliance inside cabinet or under a wall cabinet. When storing in a cabinet, always unplug the unit from mains power.
- The temperature of accessible surfaces may be high when the appliance is operating.

- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Use only heat-proof synthetic or wooden utensils when making waffles, this is to prevent damage to the non-stick coating on the heating plates. Make sure that the utensils are not pointed or have sharp edges.
-  **Caution, hot surface. Care must be taken. The surfaces will get hot during and immediately after use.**
- For cleaning cooking surface, please refer to section “CLEANING AND MAINTENANCE”.

**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

## KNOW YOUR MULTI SNACK MAKER

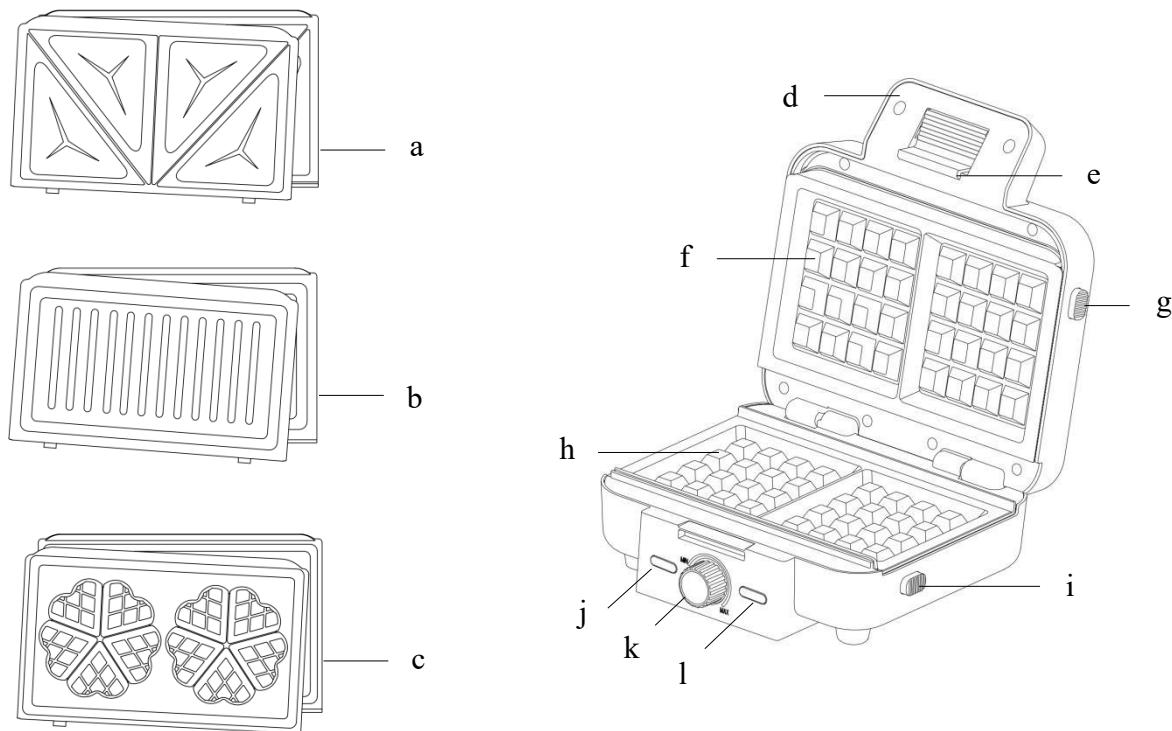

a. Sandwich plates

b. Grill plates

c. Heart-shaped waffle plates

d. Handle

e. Locking clip

f. Upper waffle plate

g. Upper plate release button

h. Lower waffle plate

i. Lower plate release button

j. Red power indicator

k. Temperature control knob

l. Green heating indicator

## BEFORE FIRST USE

**IMPORTANT!** Always place and operate the appliance on a flat, stable, clean, dry, and heat-resistant surface.

**IMPORTANT!** Use a heat-resistant mat under the snack maker to prevent heat damage to your benchtop.

- Unpack the appliance and check that all parts are present and undamaged. If any parts are missing or damaged during transport, return the product to your local customer service centre.
- Wipe the inside and outside of the appliance with a damp cloth or sponge, then dry with a soft, dry cloth.

**⚠ WARNING:** Do not immerse the appliance in water or any other liquid.

- Wash any accessories in warm, soapy water, then dry all components thoroughly before use.
- Place the appliance on a flat, stable, heat-resistant surface, allowing at least 10 cm of free space around it. Do not operate the appliance inside a cabinet or underneath overhead cupboards.

- Press the plate release button to remove the baking plates. Choose the correct pair of baking plates and install them into the snack maker.
- Plug the appliance into a power outlet.

Note: Make sure the voltage shown on the appliance matches your local mains power before plugging it in.

Rated voltage: 220–240V~ 50–60Hz

- Allow the appliance to heat for about 5 minutes. Apply a light coating of cooking oil to the baking plates and carefully wipe it in with a paper towel.

You only need to condition the plates before first use.

 CAUTION: The baking plates will become very hot during use.

**IMPORTANT:** On first use, you may notice a slight haze or odour coming from the appliance. This is normal and will disappear after a few minutes of operation.

- Unplug the appliance once this process is complete. Your snack maker is now ready to use.

## HOW TO USE YOUR MULTI SNAKE MAKER

1. Before first use, wipe the baking plates with a damp cloth, then dry with paper towel.
2. Close the appliance and plug it into a power outlet. The red power light will turn on to show the snack maker is connected to power. It will stay on until you unplug the appliance.
3. Set the temperature by turning the temperature control knob. The green heating light will turn on while the snack maker is heating up.

Approx. temperature:

	Temperature setting	Heating plate temperature without food (Approx. °C)
MIN	50°C	
MED	110°C	
MAX	200°C	

4. The snack maker will take around **4 minutes** to reach the recommended cooking temperature. The **green light will turn off** when the unit is ready to use.
5. **Open the appliance** and lightly brush the baking plates with a small amount of vegetable oil.
6. **Add your ingredients**, then gently close the lid and secure the **locking clip** until it clicks into place.

**NOTE:** Do not slam the lid shut, as this can cause the mixture to spill out.

7. The **green light** will come back on when another heating cycle starts. Cooking time will vary depending on your ingredients, but as a guide, allow **about 5–8 minutes**.
8. If you prefer a darker or crisper result, close the lid again and cook for a little longer until you reach your desired colour.

**IMPORTANT:** Do not open the lid during the first 2 minutes of cooking. This can cause the snacks to split and make them difficult to remove.

- When removing your snacks, **use a plastic or wooden spatula** only. Never use sharp or metal utensils, as they can damage the non-stick coating. Use **oven mitts** when handling hot food or parts of the appliance.
- After use, **unplug the appliance** from the power outlet and allow it to cool down before cleaning or storing.

---

#### NOTES

- Before using the appliance for the first time, heat it **without any food** for about 5 minutes. You may notice a small amount of smoke or odour during this process — this is normal and will disappear after a few uses.
- The **red power light** stays on while the unit is plugged in. The **green ready light** will turn on and off during use to maintain the correct cooking temperature.

---

#### WARNINGS

- Never use a sharp knife or fork to remove food — this will damage the non-stick coating. Use **heat-resistant wooden or plastic utensils** only.
- Always **unplug the appliance** when not in use or before cleaning.
- If the **surface or housing** of the snack maker becomes cracked or damaged, **stop using it immediately** and unplug it from the power outlet to avoid the risk of electric shock.

## CLEANING AND MAINTENANCE

This appliance should be cleaned after each use.

#### **WARNING! Do not immerse the multi snack maker in water or in a dishwasher!**

- Always ensure the snack maker is disconnected from the mains power outlet socket before attempting any cleaning or maintenance.
- Ensure that your snack maker has completely cooled down before cleaning. The snack maker will be very hot during and immediately after use.
- Clean the inside and outside of the appliance with a damp cloth or soft brush. Do not use anything abrasive that can scratch or damage the appliance. Wipe dry with a soft dry cloth.
- Wash the accessories with soapy water. Dry all components thoroughly before storage.

## STORAGE

- Unplug the snack maker from mains power.
- Allow the appliance to cool down completely.
- Clean and dry the appliance and accessories.

#### **WARNING! Do not wrap the power cord around the appliance.**

- Store the appliance in a dry location and out of the reach of children.
-

## TECHNICAL SPECIFICATIONS

Voltage: 220-240V~ 50-60Hz

Power: 730-870W

## SUGGESTED RECIPE

### Ingredients

500g	all - purpose flour
50g	sugar
400ml	milk
5	eggs
100g	butter
5g	baking powder

### DIRECTIONS

Beat the eggs in a mixer until well mixed. Add remaining ingredients and mix until smooth. Leave the mixture for at least half an hour.

Preheat the waffle maker. Use a pastry brush to lightly grease coat the non-stick coating of the baking plates with oil or butter. Pour mixture into waffle maker. Cook until golden brown.

## **12 Month Warranty**

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

<b>Contact for Kmart purchases</b>	<b>Contact for Target purchases</b>
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>