

# anko

**Hot Pot Cooker  
HX-3711  
User Manual**



**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE**

## IMPORTANT SAFEGUARDS

Read the Important Safeguards carefully before use to ensure correct operation. The precautions described in this manual must be followed to ensure safe use of this appliance and prevent hazards to you and other people, as well as damage to the appliance, your home or property.

**WARNING!** Indicates actions that may cause minor injury.

**IMPORTANT!** During first use, it is common to see a small amount of smoke/haze or experience a slight odour. This is normal.

### **WARNING:**

1. To protect against electric shock do not immerse the appliance, power cord, plug in water or other liquids.
2. Do not disassemble, repair, or modify this appliance.
3. If the supply cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard, or the product must be disposed of.
4. Do not use the appliance near flammable materials such as curtains.
5. Do not place the appliance on flammable surfaces such as wooden counters, wood flooring or carpet.
6. To avoid the danger of fire, never leave the appliance unattended. And never use appliance near any of flammables, such as curtains, wall cabinet...etc., due to risk of burning and or fire.
7. Do not insert or remove the power plug with wet hands.
8. Do not apply pressure on the power cord. Do not do any of the following, as this may cause the power cord to overheat and catch fire: Scratch, modify, bend, pull, step on, twist or place the cord near heating devices. Do not place heavy items on the cord or use while it is bundled. When unplugging the cord, pull on the plug rather than the cord.
9. The appliance is intended for household use only. Do not use outdoors or for commercial purpose. Any misuse use will void the warranty.
10. This appliance is intended to be used indoors in household and similar applications such as: staff kitchen areas in shops, offices and other working environments, farmhouses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.

11. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries or damage to property.
12. Use a mains power outlet socket that meets the appliance rating. Do not plug other electrical devices into the same power outlet socket when using the appliance. If the supply cord plug is not inserted properly, it may cause electric shock or fire due to heat.
13. Clean the power plug regularly. Dust accumulated on the power plug may cause condensation, which can damage the cable and cause a fire. Remove the power plug and wipe it with a dry cloth.
14. Be sure to clean the appliance after use.
15. **WARNING:** Potential injury from misuse.


### **CAUTION:**

1. Do not cook for longer than necessary.
2. **WARNING:** Avoid spillage on connector. This product incorporates a heating element which is subject to residual heat after use.
3. Do not touch hot surfaces. Use oven gloves or cloth when removing the lid or handling hot containers as hot steam will escape.
4. **WARNING:** Extreme caution must be used when moving the appliance when containing hot food, water, or other hot liquids.
5. Never put the removable deep pot on other cooking devices.
6. Make sure the outer surface of the pot and the heating plate is clean and dry before plug-in.
7. Fill water or soup not more than 70% during operation, spillage from overflow when boiled may cause an electric shock hazard.
8. Never switch on the appliance with an empty pot on top of it which may result in serious damage to the appliance.
9. Place the hot pot in a dry place. Be careful to protect the Main unit (heating base) against dampness and shock. And remember never to put the Main unit (heating base) into water for cleaning.
10. Before cooking, make sure the pot is evenly placed and tightly seated in the middle of the Main unit (heating base).

11. Do not place the appliance on top of other equipment, such as a microwave oven, or place other equipment on top.  
**CAUTION:** For electrical safety, never use the appliance if the supply cord is damaged. It must be replaced by a qualified electrical person only or the appliance must be disposed.
12. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the appliance by a person responsible for their safety.
13. Children should be supervised to ensure that they do not play with the appliance.
14. The temperature of accessible surfaces may be high when the appliance is operating and immediately after use.
15. Beware of hidden steam under the lid.
16. For the details on how to clean surfaces in contact with food, please refer to "CLEANING AND MAINTENANCE" section.
17. This appliance is not intended to be operated by means of an external timer or separate remote-control system.


## **SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY**

## PARTS DESCRIPTION

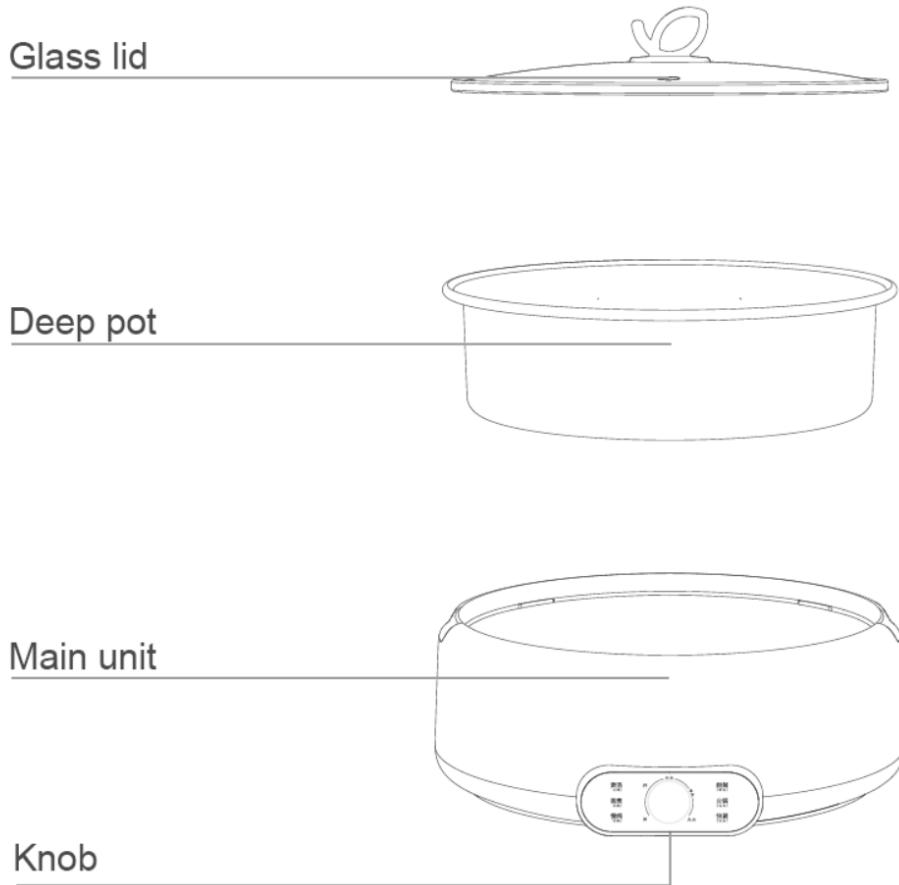


## HOW TO USE

1. Place the Deep pot onto the Main unit (heating base).
2. Gently place all ingredients into the Deep pot. Ensure water or liquid doesn't go above MAX line (4L) when cooking to avoid spillage which could result in electric shock hazard. At least 1L of water or liquid is required when cooking.
3. Insert the power cord plug into a mains power outlet socket and make sure it is inserted tightly.

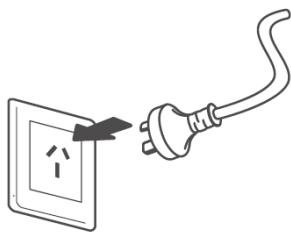

- Using the control knob, set the desired temperature (LOW, MED, HIGH). The heat indicator light will illuminate, and the unit begins to heat. When the desired temperature has been reached, the heat indicator light will turn off. The appliance will heat in cycles to keep the desired temperature. The indicator light will switch ON and OFF maintaining the temperature, this is normal. The below table lists the temperature which the thermostat first operated at LOW, MED and HIGH setting at MAX water capacity.

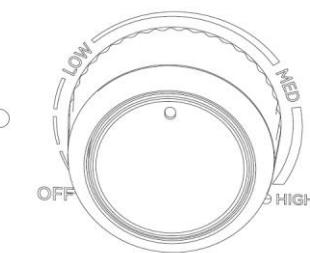	Temperature setting	Water temperature; (Approx. °C)
	LOW	30°C
MED	45°C	
HIGH	100°C	

- Place the glass Lid onto the Deep Pot while cooking.
- After cooking, remove the Pot Lid. Use the Lid Handle and take care when removing as this will be hot after use.
- Turn the Knob switch to the OFF position and turn off and unplug at the mains power outlet socket.

**WARNING:** After cooking, the main unit (heating base) and the Deep Pot will be hot. Allow adequate time to cool down before moving or cleaning.

Do not use metal spatulas, knives or other hard objects to avoid damaging the non-stick coating.

## CLEANING AND MAINTENANCE

Clean the appliance after every use.

Before cleaning, unplug the power cord and allow the main unit to cool sufficiently.

**DO NOT USE STEEL WOOL SCOURING PADS, ABRASIVE CLEANERS, OR SCRAPE THE HOT PLATE WITH METAL UNTENSILS. ALL OF THESE METHODS MAY DAMAGE THE NON-STICK SURFACE.**

**DO NOT USE AN ABRASIVE CLEANER AS IT MAY DAMAGE THE EXTERIOR FINISH.**

Wash the Deep Pot and Lid in warm soapy water after use. Dry with a soft cloth.

Do not submerge the Main Unit in water.

Do not wash in a dishwasher.

## PRODUCT SPECIFICATION

Power supply	220-240V~ 50-60Hz
Rated power	1600W
Temperature Level	OFF, LOW, MED, HIGH
Purpose	Household indoor use only. Not designed for commercial use.

## 12 MONTH WARRANTY

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>