

anko

Hand warmers

HT602

User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.


1. Read all instructions before using this product.
2. Make sure the product has plenty of ventilation during charging.
3. If the product swells or bulges, stop using it immediately and dispose of the product appropriately. Do not try to repair or disassemble this product.
4. When the product is not in use, make sure it is correctly turned off and stored in a cool dry place.
5. Use of accessories not provided by the manufacturer may cause fire, electric shock or personal injury.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
7. Children should be supervised to ensure that they do not play with the appliance.
8. Keep the appliance dry. Keep away from water, liquids, or wet areas.
9. Ensure that the charging cable is not stretched tightly or kinked.
10. Use a dry cloth to clean this product. Do not use solvents, abrasive or aggressive cleaning agents to clean the appliance.
11. This appliance must only be supplied by certified power supply unit with SELV output voltage corresponding to the marking on the appliance.
12. Cleaning and user maintenance shall not be done by children without supervision.
13. Switch OFF the appliance before charging.

CAUTION!

14. The product has built-in lithium-ion batteries. Pay attention to the following:
 - a) If not used for a long time, re-charge every three months to prevent battery damage.
 - b) Charging time may be longer when the room temperature is below 10°C.
 - c) Charge the battery when the battery power goes low, avoid allowing the battery to go flat.
15. DO NOT squeeze, puncture, or short circuit the product or put it into water, fire or use in an environment where the temperature is higher than 35°C.
16. Do not expose the product to high temperatures (above +35°C), strong magnetic fields, near flammable and explosive gases (such as natural gas, methane, etc.) to avoid accidents such as abnormal operation or fire.

**SAVE THESE INSTRUCTIONS
FOR FUTURE REFERENCE**

KNOW YOUR HAND WARMERS

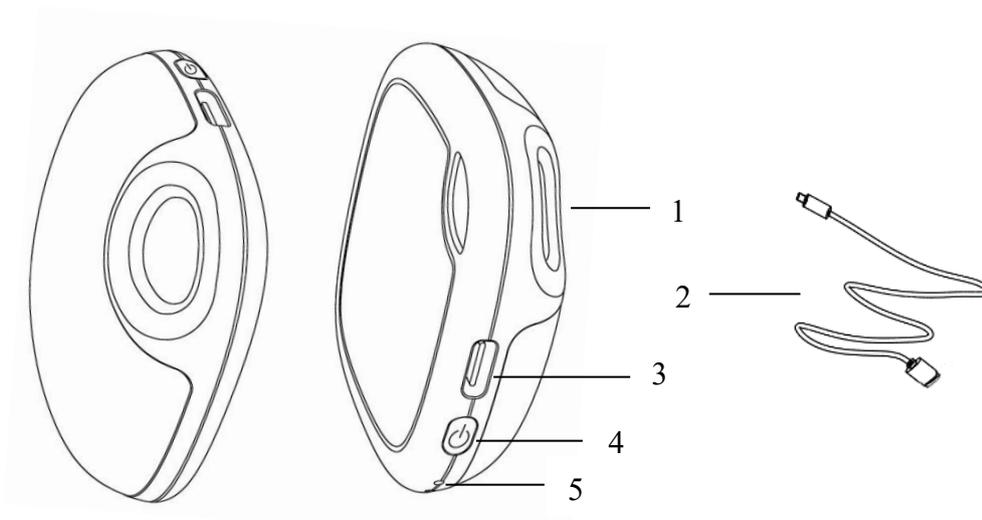

1. Main unit (2pcs)

3. Charging port

5. Indicator light

2. Charging cord (2pcs)

4. On/Off switch

IMPORTANT!

Please make sure that your appliance is received with the right components shown above. Check everything carefully before using it. If any parts are missing or damaged, return the product to the place of purchase for replacement.

When using the appliance for the first time, carefully remove all internal and external packaging and dispose them responsibly.

General Precautions

- Avoid dropping the device. ✘
- Avoid burns at low temperatures. ✘
- Ensure children use the device only under adult supervision. ✘
- Avoid exposing the device to extreme temperatures. ✘
- Do not disassemble the device. ✘
- Do not expose the device to liquids. ✘

***Avoid low-temperature burns:** please not leaving the hand warmer on the same skin spot too long or use a cloth barrier.

BEFORE FIRST USE

- Fully charge the appliance before first use.
- Always power off the appliance before charging.
- The supplied USB charging cable should be inserted into the standard USB power source rated at 5Vd.c. 2A specification.

WARNING! Use only the supplied USB charging cable to charge the appliance.

- The charging time is approx. 2 hours.
- The working time is approx. 5.5 hours after fully charged.
- The indicator lights will show battery level when charging:

3 indicators light illuminate	70%~100%
2 indicators light illuminate	35%~70%
1 indicator light illuminate	5%~35%
1 indicator flashes rapidly until the hand warmer turn off	0~5%

USE YOUR HAND WARMERS

1. Press and hold the ON/OFF button to switch ON the hand warmer, the indicator light will illuminate, the hand warmer start to warm up.
2. The hand warmers will keep the temperature at approx. 40°C when working.
3. Press and hold the On/Off button to switch OFF the hand warmer.

TECHNICAL SPECIFICATION

Input: 5Vd.c. 2A

Battery: Li-ion 3.7Vd.c. 2000mAh (per unit)

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us