

12 MONTH WARRANTY

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. The warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed with the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/-Customer Service Centre 690 Springvale Road, Mulgrave VIC 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 7 Kennock Street, Williams Landing, VIC, 3007 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

anko

6L MINI OVEN Instruction Manual



Model No.: AOV6L

Rev 01

To ensure the proper operation of this device, please read this instruction manual carefully before using the device and keep them for further reference.

IMPORTANT SAFEGUARDS



Read all instructions thoroughly before first use, even if you are familiar with this type of product. The safety precautions mentioned in this manual reduce the risk of burns, fire, electric shock, and injury when correctly followed. Keep this manual in a safe place for future reference, along with the purchase receipt and packaging. If applicable, pass these instructions onto the next owner of this product.

Explanation of Symbols



WARNING!

This signal symbol/word designates a hazard with moderate risk, which may result in death or severe injury if not avoided.



CAUTION!

This signal symbol/word designates a hazard with low risk, which may result in minor or moderate injury if not avoided.



NOTICE!

This signal word warns of possible damage to property.



This symbol provides you with useful additional information about assembly or operation.



CAUTION: HOT SURFACE! The surfaces are likely to get hot during use.

When using electrical products, to reduce the risk of personal injury or damage to property, basic safety precautions must be observed, including the following:

- Usage restrictions:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Children:** Supervise children to ensure that they do not play with the appliance. Close supervision is necessary when any appliance is used by or near children. Keep the appliance and its cord out of reach of children less than 8 years old.

Electrical Safety and Cord Handling

- Voltage:** Make sure that the outlet voltage and circuit frequency correspond to the voltage stated on the appliance rating label. If it does not match contact the customer service centre and do not use the appliance.
- Exclusive outlet/separate circuit:** Insert the plug securely into a properly earthed mains socket that is within easy reach so that the plug can easily be removed if necessary.
- No timer:** Do not connect the appliance to an external switching device such as an external timer or a separate remote-control system.



DO NOT IMMERS!

To reduce the risk of electric shock, do not immerse the cord, plug or appliance in water or other liquid. If it falls into water, immediately unplug it from the electrical outlet. DO NOT touch it or reach into the water.

- Protect from moisture:** Do not expose the electrical connections to water. Do not use the appliance or touch the plug, with wet or damp hands, on a damp floor or when the appliance itself is wet. Do not spill liquids into the product.
- Electrical safety:** Do not insert any objects into the appliance.
- Protect the power cord:** Do not kink, squash, or strain the power cord and protect it from sharp edges and heat. Do not let the cord touch hot surfaces, including the cooking surfaces when it is in use. Do not place anything on top of the cord. Do not wrap the cord around the appliance and never pull the cord to lift, carry or unplug the appliance.
- Power cord:** A short power cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord. If it is necessary to use an extension cord, make sure that it has been approved and has the same or higher electrical rating (voltage and power) as the product (check on the rating label underneath). Arrange the extended cord so it will not drape over the table or bench-top where it can be pulled on or tripped over accidentally.
- Damage:** check the power cord regularly for visible damage. If it is damaged, do not use the appliance. For electrical safety, a damaged power cord must be replaced by a qualified person in order to avoid any hazards. If finding the power cord, avoid tight bends as this could damage the cord.



WARNING!

Do not use when damaged!
Do not pick up or operate an appliance with a damaged cord or plug, or after it malfunctions or has been dropped or damaged in any manner.

- Disconnect:** Always turn the power off at the power outlet socket before you insert or remove plug, unplug the appliance before cleaning, servicing, maintenance or moving the appliance, and after use. Grip the plug when disconnecting, do not pull on the cord.
- After use:** Wait until the appliance is unplugged and has cooled completely before cleaning, maintenance or moving the appliance.

Usage Conditions and Restrictions

- Domestic use only:** This appliance is intended to be used in households and similar applications such as: staff kitchens areas in shops, offices, and other working environments; farmhouses; by clients in hotels, motels, and other residential type environments; bed and breakfast type environments. Do not use it outdoors.
- Intended purpose:** Do not use the appliance for anything other than its intended purpose, and only use it as described in this manual. Any other use is not recommended and may cause fire, electric shock, or injury.
- Accessories:** Do not use accessories that are not recommended or supplied with the appliance. The use of accessories that are not recommended or supplied with the appliance can cause fire, electric shock, or injuries.
- Flammable materials:** Do not use the appliance in the close vicinity of flammable materials such as curtains, drapes, paper, wall coverings, tea towels or clothing. Do not use it under a cupboard/cabinet or close to a wall as scorching or discoloration may occur.
- Work area:** To ensure efficient operation and avoid overturning, always place the appliance on a level and stable, heat and flameproof work surface. Do not use it on an inclined plane or unstable surface. Always ensure there is sufficient free space above and around all sides of the appliance for air circulation.
- Protect from heat:** Do not place the appliance on or near a hot gas or electric stove/cooktop, or near a heated oven.
- Keep clear:** Never place anything on top of the appliance while it is in use or still hot.
- During use:** Do not move the appliance while it is in use. Do not cover it when it is in use. Food may burn, so always monitor it when using the appliance.
- Utensils:** Only use wooden, silicone or heat-resistant plastic utensils to remove foods from the oven. Do not use metal utensils to avoid scratching the non-stick surfaces.
- Storage:** Do not leave any cardboard, plastic, paper or similar in the appliance.
- Cleaning:** Always remove the plug from the socket before cleaning the appliance and let it cool down until the cooking surfaces are safe to touch.
- Repair:** The appliance has no user-replaceable parts contained inside. Do not attempt to repair, disassemble, or modify it yourself.

- Liability:** Misuse or improper installation may result in the risk of fire, electric shock, and/or injury. We assume no liability for any eventual damage or injury caused by misuse of the product or non-compliance with the instructions.
- For the details of the cleaning, please refer to section "Cleaning and Maintenance".



WARNING!

- To reduce the risk of electric shock, do not immerse or expose the product, flexible cord or plug to rain, moisture, or any liquid.
- Do not use the product near baths, basins or other vessels containing water or other liquids, or when standing in or on damp or wet surfaces.
- If the appliance is dropped into water, turn off the power at the power outlet socket and remove the plug immediately.

DO NOT REACH INTO THE WATER TO RETRIEVE IT UNTIL IT HAS BEEN DISCONNECTED FROM THE MAINS POWER OUTLET SOCKET.

- It is important to note that the appliance will have to be inspected by a qualified technician before using it again.

SAVE THESE INSTRUCTIONS




CAUTION!

PLEASE READ ALL THE INSTRUCTIONS THOROUGHLY BEFORE FIRST USE

- Do not touch hot surfaces. Use handles or knobs. Use oven mitts or potholders.
- The appliance is not intended to be operated by means on an external timer or a separate remote-control system.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- DO NOT PLACE THE APPLIANCE AGAINST A WALL OR DIRECTLY NEXT TO OTHER APPLIANCES. LEAVE AT LEAST 10 CM OF FREE SPACE AROUND THE APPLIANCE WHEN IN USE.**
- NEVER** leave the oven unattended while in use.
- DO NOT** cover the bottom tray or any part of the oven with metal foil. This will cause the oven to overheat and cause a fire.
- NEVER** place aluminium foil on top of the tray. This traps grease and can cause a fire.
- DO NOT** insert anything in the ventilation slots and do not obstruct them.
- Intended for countertop use only.
- DO NOT** use outdoors. **DO NOT** use in moving vehicles or boats.
- DO NOT** use the oven without the wire shelf installed.
- DO NOT** spray any type of aerosol spray or flavouring inside the oven while cooking.
- Ensure that your food is cooked thoroughly prior to eating to avoid illness.
- DO NOT** place any of the following materials in the oven: paper, cardboard, plastic, roasting bags and the like.
- DO NOT** touch hot surfaces. Oven surfaces are hot during and after operation. To prevent burns or personal injury **ALWAYS** use protective heat pads or insulated oven mitts and use available handles and knobs.
- Spilled food can cause serious burns. Extreme caution must be used when the oven contains hot food. Improper use may result in personal injury.
- DO NOT** clean the oven with metal scouring pads. Pads can break off the pad and touch electrical parts, causing a risk of electrical shock.
- DO NOT** use the oven as a source of heat or for drying.

DO NOT COVER THE APPLIANCE WHILE IT IS OPERATING.

PARTS GUIDE

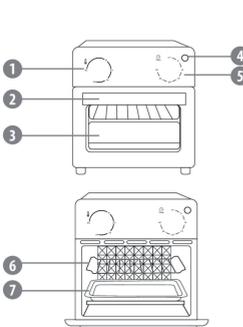

- Temperature control
- Handle
- Door
- Power indicator light
- Timer control
- Grill shelf
- Bake tray / drip tray (2 in 1)

INSTRUCTIONS

GETTING STARTED

NOTICE!

Risk of damage!

- If you are not cautious when opening the packaging with a sharp knife or other pointed object, you may damage the product.
- For this reason, be very careful when opening the packaging.

- Remove and discard any packaging material, promotional labels, and tape from the unit.
- Remove all accessories from the package and read this manual carefully. Please pay particular attention to operational instructions, warnings, and important safety instructions to avoid any personal injury or property damage.
- Wash the shelf and bake/drip tray in warm soapy water, then rinse and dry thoroughly.
- CAUTION! DO NOT** attempt to clean the accessories or the unit in the dishwasher. Do not use on heat-sensitive surfaces.
- NOTE:** When the appliance is first used, there may be a smell. It is recommended to use the oven for 10 minutes without adding any food. ENSURE that the area is well ventilated. This helps to remove any packaging residue and odour traces that may be present.

DO NOT IMMERS THE OVEN IN WATER

NOTE:


- DO NOT** fill the oven with oil or other liquid.
- DO NOT** place anything on top of the appliance. The air flow will be disrupted and will affect the cooking results.

Usage Instructions

- Place the appliance on a stable, heat-resistant surface.
- Connect the appliance to the wall outlet. Turn the power on. The power indicator light will be illuminated.

CAUTION! The appliance will be hot when in use.
CAUTION! Do not put over 1 kg food on the grill shelf or bake/drip tray
CAUTION! Keep the appliance clear of walls, curtains, and other heat sensitive materials. Leave a minimum clearance of 10cm around the appliance.

TEMPERATURE CONTROL

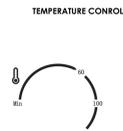

TIMER CONTROL



- Turn the timer control dial to the number required. These numbers indicate the time that the oven will operate for.
- Turn the temperature control dial to the number required. These numbers indicate the temperature that the oven will be set to.
- When the set time has elapsed, the oven will turn off automatically and a bell will chime.
- The oven can be turned off manually during the operating time by turning the control dial to the "OFF" position.
- When you have finished cooking, ensure to turn the temperature control dial to the lowest setting.
- The heating elements will be glowing to show that the oven is in operation.
- NOTE:** If you need to set the time for less than 5 minutes, turn the control dial to 5 and then back to the selected time.
- Ensure that the bake/drip tray is in place under the shelf to avoid oil dripping into the oven.

CLEANING AND MAINTENANCE



WARNING!

Risk of injury!

- Improper handling of the product may increase the risk of injury.
- To avoid risk of electric shock, always unplug the product before cleaning.
- To avoid the risk of electric shock, do not allow liquids to get on to the mains connectors.
- The product will get hot during operation. Let the product cool down completely before each cleaning to avoid burns.

CAUTION:

Risk of short circuit!

- Water or other liquids that have penetrated the housing may cause a short circuit. Make sure that no water or other liquids penetrate the housing.
- Never immerse the product in water or other liquids.

CAUTION:

Risk of damage!

- Improper handling of the product may result in damage.
- Do not use any aggressive cleaners, brushes with metal or nylon bristles or sharp metallic cleaning utensils such as knives, hard scrapers, and the like. They could damage the surfaces.
- Do not put the product or accessories in the dishwasher, as this will destroy the product.

General cleaning

Clean the appliance after every use and before storing.
Do not use metal utensils or abrasive cleaning materials to clean the oven, shelf or bake/drip tray as this may cause damage.

- Unplug the appliance from the power socket and allow the appliance to cool completely. You can also remove the accessories from the appliance to help the appliance to cool down quickly.
- Wipe the outside of the appliance housing with a damp cloth. Do not immerse the appliance housing in water or any other liquid and do not rinse under running water.
- Clean the grill shelf and bake/drip tray with warm soapy water.
- Clean the inside of the appliance and the heating element with a damp cloth or a cleaning brush to remove any food residues.
- Make sure all parts are clean and thoroughly dry before storage.
- Store the appliance in its box in a clean and dry place.

NOTE: DO NOT place this appliance or accessories in the dishwasher.

STORAGE

- All parts must be completely dry before being stored.
- Always store the product in a dry and clean area.
- Protect the product from direct sunlight.
- Store the product so that it is not accessible to children.

OTHER USEFUL INFORMATION

Technical Specifications

Model Number	AOV6L
Power Supply	220-240V~ 50-60Hz
Rated Power	800W
Protection Class	I (this appliance must be earthed)
Capacity	6L