

anko

Raclette Grill
JB-B08
User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS


When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.


Read and understand all instructions before using this product and follow all warnings and cautions in the manual.

- To protect against risk of electrical hazards, do not immerse the appliance, power cord or plug in water or any other liquid.
- For electrical safety, if the supply cord is damaged, it must be replaced by a qualified electrician only or the product must be disposed of.
- Place the cord in such a way that pulling or tripping over it is not possible.
- Always place and operate the appliance on a flat, solid, clean, dry and heat-resistant surface.
- The power socket must be readily accessible so that the appliance can be unplugged in an emergency.
- This appliance is intended to be used indoors in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farmhouses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- The appliance is intended for household use only. Do not use outdoors or for commercial purpose.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always unplug from the mains supply when not in use and allow the appliance to cool down before cleaning.
- Do not operate the appliance if damaged or malfunctions.
- Do not touch hot surfaces and heating element.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use an extension cord with this appliance.
- Do not dismantle and repair the appliance by yourself. **DANGER OF AN ELECTRIC SHOCK AND/OR FIRE!**
- Do not allow this appliance to touch curtains, wall coverings, clothing, dish towels or other flammable materials during use.
- **IMPORTANT! Do not leave the appliance unattended when in use or when connected to mains power.**
- Do not operate your appliance inside cabinet or under a wall cabinet. When storing in a cabinet, always unplug the unit from mains power.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Use only heat-proof synthetic or wooden utensils, this is to prevent damage to the non-stick coating on the grill plate and raclette pans. Make sure that the utensils are not pointed or have sharp edges.

- Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons.
-  **Caution, hot surface. Care must be taken. The surfaces will get hot during and immediately after use.**
- For cleaning, please refer to section “Cleaning and Storage”.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

KNOW YOUR RACLETTE GRILL

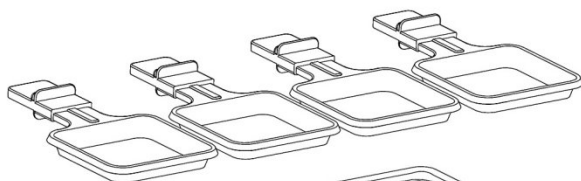

———— 1	1. Raclette pan (8pcs)
—— 2	2. Grill plate
	3. Heating element
	4. Grill plate rack
————— 3	5. Grill slot (8 slots)
—— 4	6. Main unit
——— 5	7. Red heating indicator
—— 6	8. On/Off/Temperature control knob
————— 7	
————— 8	

BEFORE FIRST USE

IMPORTANT! Place the appliance on a heat-resistant surface only. Some kitchen bench top surfaces are sensitive to heat and may be damaged due to heat. Placing the appliance on a heat-resistant mat is recommended.

- Unpack the appliance and check if all parts are there and undamaged.
- Clean the appliance following section “Cleaning and Storage”.

WARNING! Do not immerse the main unit in water or any other liquid to clean.

- Place the appliance on a flat, solid, clean, dry and heat-resistant surface. Ensure a minimum of 30cm free space around the appliance. Do not operate your appliance inside a cabinet or directly under a wall cabinet.
- Plug the appliance into an electrical power outlet.

WARNING! Make sure the voltage indicated on the appliance matches the local voltage before connecting the appliance to mains power. Rated voltage: 220-240V~ 50-60Hz.

- Allow the appliance to heat up for approximately 5 minutes. Apply a thin coating of cooking oil to the grill plate and raclette pans and carefully rub it in with a paper towel. You only need to condition the cooking plates when using your appliance for the first time.

WARNING! The grills will get very hot! Use oven mitts.

NOTICE: On first use, there may be a small amount of haze / smoke and an odour emitted from the appliance. This is perfectly normal and will subside after few minutes of use.

- Unplug the appliance and now it is ready for use.

HOW TO USE YOUR RACLETTE GRILL

1. Before using the appliance, clean the cooking surface with a damp cloth. Dry it with paper towel.
2. Make sure the On/Off/Temperature control knob stay at “0” position. Connect the appliance with a mains power outlet socket.
3. Rotate the On/Off/Temperature control knob to set the desired temperature, the red heating indicator lights up and the appliance begins heating.
4. It will take approximately 5 minutes to reach the recommended grill temperature. The red heating light will turn ON and OFF during use.

WARNING! DO NOT touch hot surface, the surface will get hot during use.

5. Brush the cooking surface with a small amount of vegetable oil.
6. Place the food on the grill plate. Hold the handles carefully and insert the raclette pans filled with cheese and fast cooking ingredients into the grill slots.
7. Rotate the On/Off/Temperature control knob to adjust the temperature during cooking if needed.
8. Rotate the On/Off/Temperature control knob to “0” position after cooking and remove the food from the grill plate and raclette pans with a heat-proof plastic, silicone or wooden utensil.

WARNING!

Never use sharp forks, knives or other metal utensils to remove or cut food on the grill plate or the raclette pans, as this would damage the non-stick coating on the cooking surface.

9. After using the appliance, disconnect the power plug from the mains power outlet socket.

CLEANING AND STORAGE

This appliance should be cleaned after each use.

CAUTION: Do not immerse the main unit in water or in a dishwasher!

- Always unplug the appliance from the mains power supply before cleaning or during maintenance.

- Ensure that the appliance has completely cooled down before cleaning, as it gets very hot during use.
- Clean the main unit with a damp cloth, dry thoroughly.
- Clean the raclette pans and grill plate with warm soapy water, rinse and dry thoroughly.

NOTICE! Do not use any abrasive cleaners (steel wool, etc.) or chemical solutions to clean the cooking plates or the product. They could damage the surfaces.

- Store the appliance in a clean dry location and out from the reach of children.

TECHNICAL SPECIFICATIONS

Voltage: 220-240V~ 50-60Hz

Power: 1200-1400W

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with

accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us