


2025-12-24

143.00 mm

anko INFRARED COOKER Instruction Manual

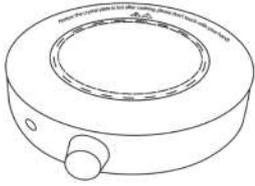

Model No.: AHP07

To ensure the proper operation of this product, please read this instruction manual carefully before using the product and keep them for further reference.

IMPORTANT SAFEGUARDS



Read all instructions thoroughly before first use, even if you are familiar with this type of product. The safety precautions mentioned in this manual reduce the risk of burns, fire, electric shock, and injury when correctly followed. Keep this manual in a safe place for further reference along with the purchase receipt and packaging. If applicable, pass these instructions on to the next owner of this product.

Explanation of Symbols



This signal symbol/word designates a hazard with moderate risk, which may result in death or severe injury if not avoided.



This signal symbol/word designates a hazard with low risk, which may result in minor or moderate injury if not avoided.



This signal word warns of possible damage to property.



This symbol provides you with useful additional information about assembly or operation.

When using electrical products, to reduce the risk of personal injury or damage to property, basic safety precautions must be observed including the following:

- Usage restrictions:** This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children:** Children should be supervised to ensure that they do not play with the product.
- Keep the product and its cord out of reach of children less than 8 years.**
- Voltage:** Make sure that the outlet voltage and circuit frequency correspond to the voltage marked on the product rating label. If it does not match, do not use the product.
- Exclusive safety/separate circuit:** Insert the plug securely into a properly earthed main socket that is well-ventilated so that the plug can be easily removed if necessary.
- No flame:** Do not connect the product to an ungrounded line or a separate remote-control system.



Do not immerse!

To reduce the risk of electric shock, do not immerse the cord, plug or product in water or other liquid. If it falls into water, immediately unplug it from the electrical outlet. **DO NOT** touch it or reach into the water to retrieve it.

- Protect from moisture:** **DO NOT** expose the electrical connection to water. **DO NOT** use the product or touch the plug with wet or damp hands, on a damp floor or when the product or cord is wet. **DO NOT** get liquid on or on the product.
- Electrical safety:** Do not insert any objects into the product.
- Protect the power cord:** Do not kink, expose, or strain the power cord and protect it from sharp edges and heat. Do not let the cord touch hot surfaces, including the cooking surface, when it is in use. Do not place anything on top of the cord. Do not wrap the cord around the product and never pull the cord to lift, carry or unplug the product.
- Power cord:** A short power cord is provided to reduce the tripping resulting from entanglement or tripping over a longer cord. If it is necessary to use an extension cord, make sure it has been approved and has the same or higher electrical rating (voltage and power) as the product (check on the rating label underneath). Arrange the extended cord so it will not drape over the table or benchtop where it can be pulled on or tripped over accidentally.
- Damage:** Check the power cord regularly for visible damage. If it is damaged, do not use the product.



Do not use when damaged!

- Do not pick up or operate a product with a damaged cord or plug, or after it malfunctions or has been damaged or damaged in any manner.
- Disconnect:** Always turn the power off at the power outlet before you insert or remove a plug. Unplug the product before cleaning, servicing, maintenance, or moving the product and after use. Grip the plug when disconnecting; do not pull on the cord.
- After use:** Wait until the product is unplugged and has cooled completely before cleaning, maintenance or moving the product.
- The electrical safety. If the supply cord is damaged, it must be replaced by a qualified electrical person only or the product must be disposed of.
- Domestic use only:** This product is intended for private domestic use only. It is not suitable for commercial, industrial or trade use. Do not use it outdoors.
- Proper use:** This product is exclusively designed for using with pots and pans. It is only intended for private use in houses and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments,
 - Formal areas
 - By clients in hotels, motels, and other residential type environments.
 - Read and break local type environments.
- Intended purpose:** Do not use the product for anything other than its intended purpose and only use it as described in this manual. Any other use is not recommended and may cause the electrical shock, or injury.
- Accessories:** Do not use accessories that are not supplied with this product, the use of accessories that are not recommended or used by the manufacturer can cause the electrical shock, or injury.
- Flammable materials:** Do not use the product in the close vicinity of flammable materials such as curtains, papers, paper, wet cloths, or clothing. Do not use it under a cupboard or close to a wall as scorching may occur.
- Work area:** To ensure efficient operation and avoid overheating, always place the product on a level, stable, heat and flame-proof work surface. Do not use it on an inclined plane and opening all sides of the product for air circulation.
- CAUTION:** Do not operate the product on an inclined plane. Do not move the product while the product is switched on.
- Do not move the product immediately after the product has been switched off. The product is still hot. Remove the product from the cooking surface completely cooled down before moving.
- Protect from heat:** Do not place the product on or near a hot gas or electric stove/cooking, or near a heated oven.
- Keep clean:** Never leave the product during use.
- Drying use:** Do not move the product while it is in use.
- Storage:** Do not leave any cardboard, plastic, paper or similar in or on the product.
- Cleaning:** Always remove the plug from the socket before cleaning the product and let it cool down until the cooking surfaces are safe to touch. Only clean the cooking plate with a soft damp cloth and wipe dry. Do not use abrasive or harsh cleaners. Do not place the product in a dishwasher.

2

3

4

- Repair:** The product has no user-serviceable parts contained inside. Do not attempt to repair, disassemble, or modify it yourself.
- Liability:** Misuse or improper installation may result in the risk of fire, electric shock, and/or injury. We assume no liability for any eventual damage or injury caused by misuse of the product or non-compliance with the instructions.



Do not leave unattended during use. Always switch off the product and unplug it from the power supply.



CAUTION HOT SURFACE



Do not touch hot surface! The product generates heat during use. Take proper precautions to prevent the risk of burns, fire or other injury to persons or damage to property.


- Accessible parts of the product get hot during operation and retain heat for some time after turning off. Always use oven mitts or similar when handling hot materials and allow metal parts to cool before cleaning. Keep the power cord away from hot parts.
- Regarding the instructions for cleaning surfaces, refer to the "Cleaning and Maintenance" section.
- Do not leave the product unattended while in use.
- The outer surface may get hot when the product is operating.



- To reduce the risk of electric shock, do not immerse or expose the product, flexible cord or plug to rain, moisture or any other liquid.
- Do not use the product near bathtubs, showers, basins, or other vessels containing water or other liquids, or when standing in or on damp or wet surfaces.
- In the event that the product is dropped into water, turn off the power at the power outlet and remove the plug immediately. **DO NOT REACH INTO THE WATER TO RETRIEVE IT UNTIL IT HAS BEEN DISCONNECTED FROM THE POWER OUTLET.**
- It is important to note that the product will have to be inspected by a qualified technician before using it again.

SAVE THESE INSTRUCTIONS

PARTS GUIDE

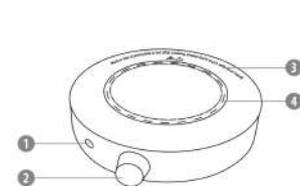

1. Power indicator Light
2. Control Dial (0 / 1 / 2)
3. Ceramic Cooking Plate
4. Cooling Ring

INSTRUCTIONS

CHOOSING THE CORRECT COOKWARE

Do not use cookware with jagged edges or a curved base.



Make sure that the size of your pot or pan is smooth, fits flat against the glass, and is the same size as the cooking zone. Always center your pot or pan on the cooking zone.



Always fit pots or pans on the ceramic plate - do not slide, or they may scratch the glass.

BEFORE FIRST USE

Carefully unpack the product and remove any packaging. Place the product on a level, dry and heat resistant surface ready to use. Ensure to read all instructions carefully and keep them for further reference.

 
- Before using for the first time, turn the cooking plate on by turning the control dial to the highest setting and heat the plate for several minutes, this will burn off any manufacturing residues. Some odor and smoke may develop during the process, this is normal. Ensure that there is good ventilation when completing the process and it should disappear after a few minutes of use.

WARNING! This should be the only time that the product is turned ON without a pot or pan on it. **NEVER** switch ON the plate without a pot or pan already in place.

DO NOT IMMEDIATE THE PRODUCT IN WATER

- Wipe the plate with a soft damp cloth and dry thoroughly.
- Place the product on a flat, level and heat-resistant surface ready for use.

NOTE: There will be a loud smell when using the product for the first time, but this is a normal and will fade with each use.



USAGE

The product will get hot during use, please use extreme caution when using the product.

- For efficient operation, the cookware used should have a flat, fast and even base.
- Cookware with a base smaller than the diameter of the boiling ring will not be used.

WARNING! Cookware with a convex, concave or uneven base should not be used.

Make sure that the bottom of the pot or pan and the surface of the cooking zone are clean and dry.

Turn the control dial to the setting required (1 or 2).

The power indicator light will turn on and off as it maintains the required temperature setting.

When you have finished using the product, ensure to turn the control dial to off and unplug the product from the power outlet.

CAUTION! The product will still be hot after use and not-reheated heat. Ensure to not touch the product until it has cooled completely.

5

6

7

CLEANING AND MAINTENANCE



Risk of injury!

- Improper handling of the product may increase the risk of injury.
- To avoid the risk of electric shock, always unplug the product before cleaning.
- To avoid the risk of electric shock, do not allow liquids to get on to the main connection.
- The product will get hot during operation, let the product cool down completely before each cleaning to avoid burns.

Risk of short circuit!

- Water or other liquids that have penetrated the housing may cause a short circuit.
- Make sure that no water or other liquids penetrate the housing.
- Never immerse the product in water or other liquids.

Risk of damage!

- Improper handling of the product may result in damage.
- Do not use any aggressive cleaners, brushes with metal or nylon bristles, or sharp or metallic cleaning utensils such as knives, hard scrapers and the like. They could damage the surface.
- Do not put the product in the dishwasher, as this will destroy the product.
- CAUTION!** Always ensure that the product is unplugged from the main power supply and has thoroughly cooled before cleaning or storing.
- WARNING!** The heating element is subject to abrasion/tear after use. Please do not touch it until it has completely cooled down.
- Clean the product with a damp sponge and dry well. **DO NOT** use any abrasive cleaning agents or other water to splutter the product. **NEVER** immerse the product, cord or plug in water or any other liquid.

STORAGE

- The product must be completely dry before being stored.
- Always store the product in a dry and clean area.
- Protect the product from direct sunlight.
- Store the product so that it is not accessible to children.

TECHNICAL DATA

MODEL: AHP07

SUPPLY VOLTAGE: 220-240V~50-60Hz

POWER CONSUMPTION: 1500W

12 MONTH WARRANTY

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for the product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. The warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning the product can be addressed with the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Smart purchases

Smart Australia Ltd
C/- Customer Service Centre
465 Springvale Road, Mulgrave VIC
3170
Customer Service: 1800 104 125
(Australia) or
0800 945 992 (New Zealand) or via
Customer Help at smart.com.au

Contact for Target purchases

Target Australia Pty Ltd
C/- Customer Service Centre
2 Foodst/Street, Williams Landing, VIC,
3022
Customer Service: 1300 750 967 or via
Customer Help at
target.com.au/help/contact-us

9

10